


Parts List:

Part No:	Description:	Size:	Torque	Qty:
1	Cross Bar			1
2	Coupling Packer			1
3	Bolt + Nyloc Nut + Flat Washer	M12 x 1.75 x 100	80Nm	4
4	Spacer Washers			2
5	Towball bolts	M16 x 2.00 x 50	216Nm	2

Fitting:

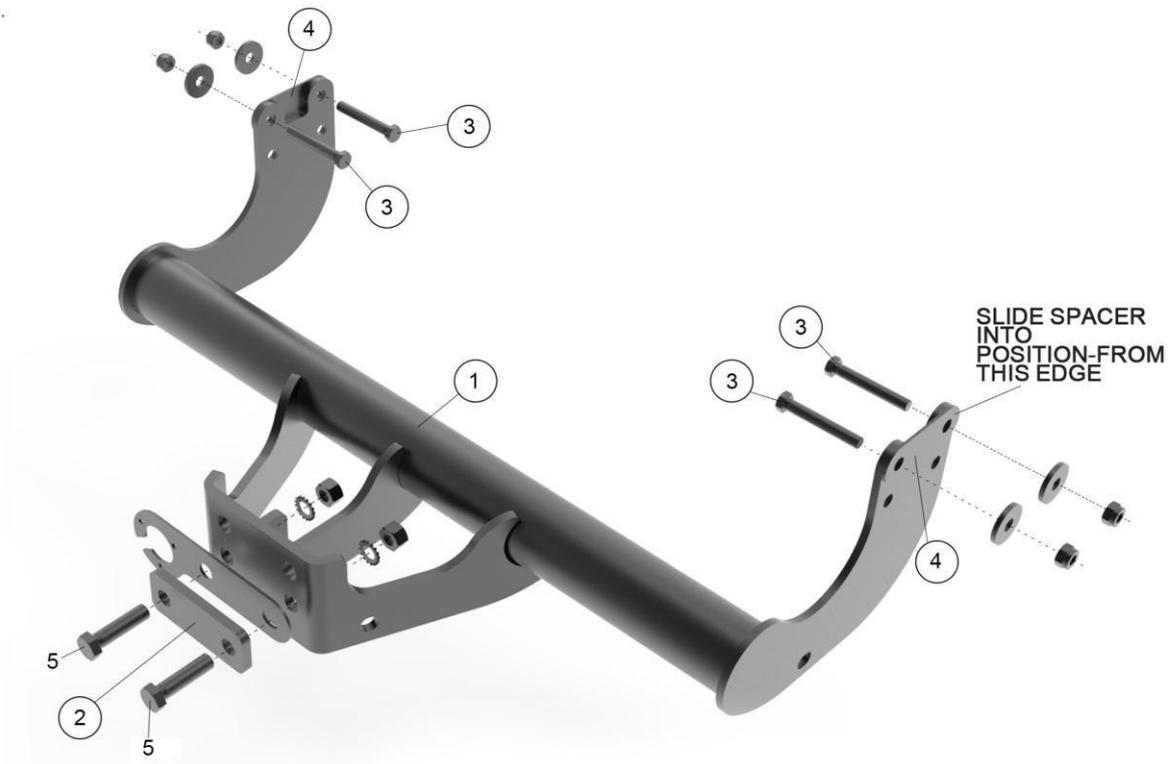

Fitting:

1. Remove bolts securing the bumper arms to the chassis (2 per side). **Loosen** the 2 x M16 bolts securing the bumper armsto the chassis floor.
2. Attach, but do not secure, the Crossbar (1) to the existing bushed lower holes using the original bolts.
3. Insert spacer washers (4) between the chassis and the towbar frame and line up with mounting holes. Then, secure using bolts (3), with flat washers fitted on the outside face.
4. Tighten bolts to the recommended torque settings (See table above), ensuring face is vertical and pushed up beneath the lower edge of the bumper.
5. Tighten M16 Bolts

Note: This towbar must be used with a Class A50-1 or A50-X towball, which dimensionally conforms to A50-1 with a 'D' & 'S' value greater than or equal to that of the towbar.

****Manufacturers towing limits must be observed for towing capacity****