

Diagnosis




Perform heater diagnosis

Activate mobile unit.

Confirm symbol with .

Heater is switched on.

Confirm operating time with .

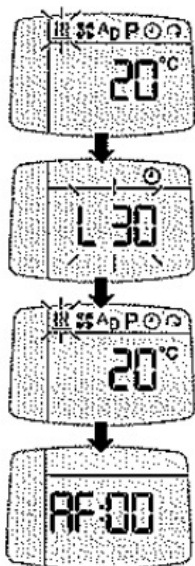

and : **simultaneously** press briefly.

The following actions are possible

- Call up error memory.
Use or to call up the error memory F1 – F5.

- Call up error memory again.
 and : **simultaneously** press briefly.

- Delete fault memory (dEL display)
 press.

Press again.

The diagnosis is completed.

