


Parts List:

Part No:	Description:	Size:	Torque	Qty:
1	Crossbar			1
2	Coupling Packer			1
3	Bolt + Flat Washer	M12 x 100mm	120Nm	8
4	Sidearms			2
5	Bolts + Nyloc Nuts	M14 x 2.0 x 40mm	150Nm	6
6	Bolt + Nut + Lock Washer	M16 x 60	200Nm	2
7	Electrical Plate			1

Fitting:

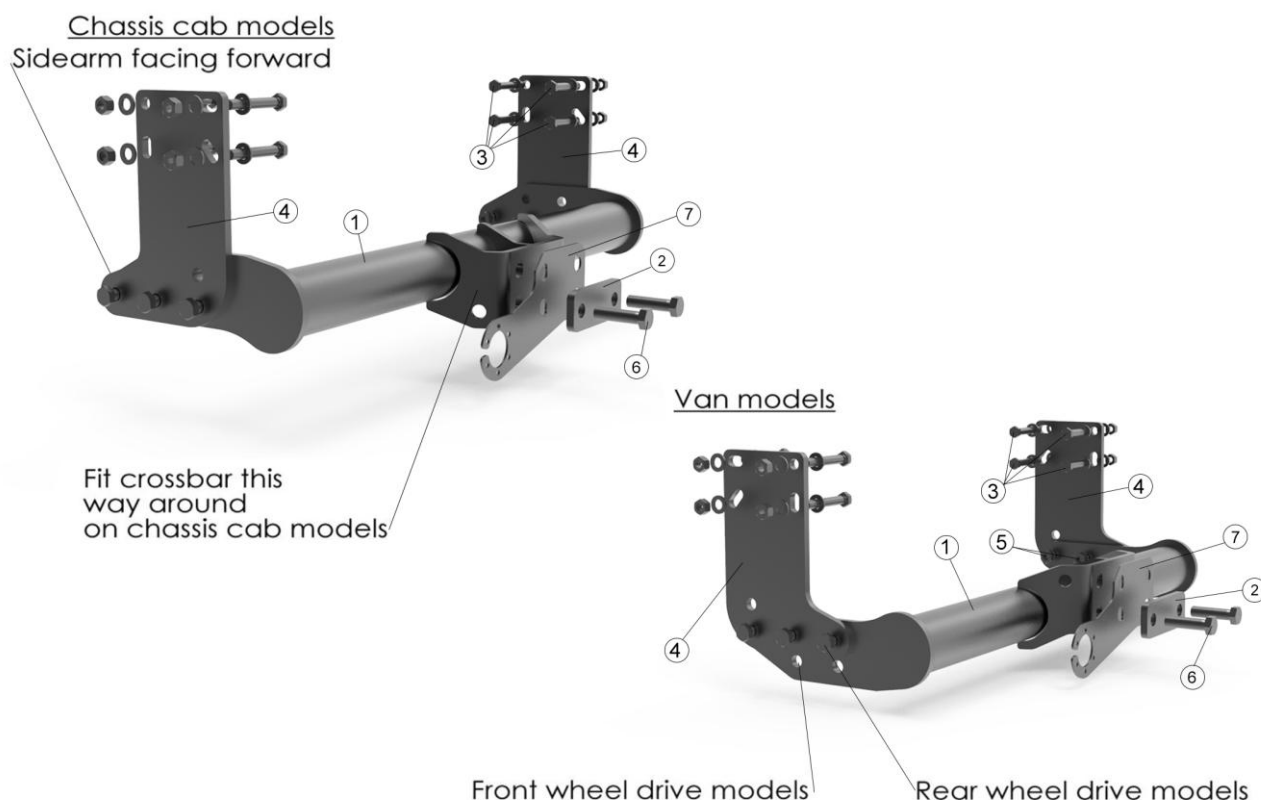

Fitting:

1. If fitted, remove the towing eye from the right hand chassis rail.
2. Using bolts (3) and flat washers, attach, but do not secure, the sidearms (4) to the existing bushed holes in the vehicle chassis. Please see the illustration above for correct fitment of the sidearms depending on vehicle model.
3. Attach, but do not secure, crossbar (1) to the sidearms (4) using bolts (5).
4. Tighten all bolts to the recommended torque values (See table above).

Note: A fuel tank shield may be require - Refer to vehicle handbook.

Note: On some vehicles, it may be necessary to bend the spare wheel hanger slightly to allow the spare wheel to be raised.

Note: This towbar must be used with a Class A50-1 or A50-X towball, which dimensionally conforms to A50-1 with a 'D' & 'S' value greater than or equal to that of the towbar.

****Manufacturers towing limits must be observed for towing capacity****