

FITTING INSTRUCTIONS




## FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK884  
(1:1)

FW020 (M8) x 4


ACCESSSTEP	✗
IMPACT STEP	✓

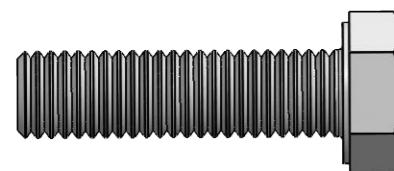


FB006 (M8 x 30) x 4

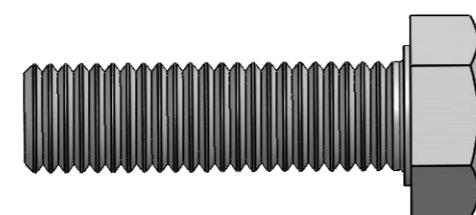

FS088 (M10 x 35) x 6

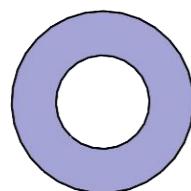


FW021 (M8) x 8

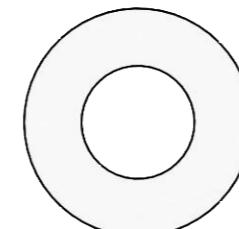

FW003 (M10) x 12




FN006 (M8) x 4

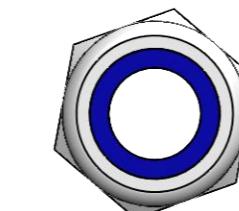


FN008 (M10) x 6

1.


FITTING TIME: 20 Minutes

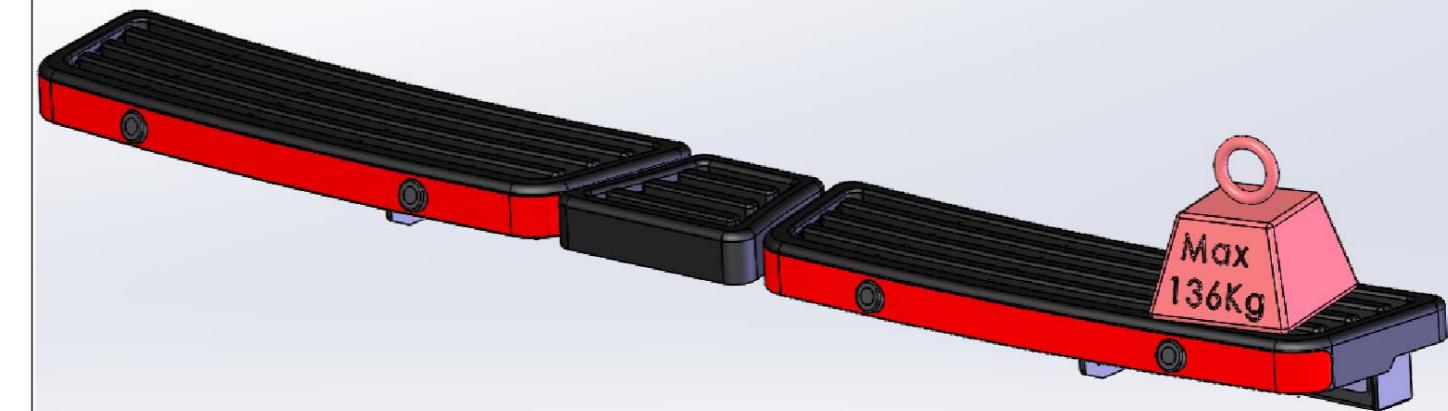

2.

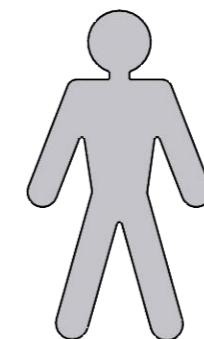


x 1

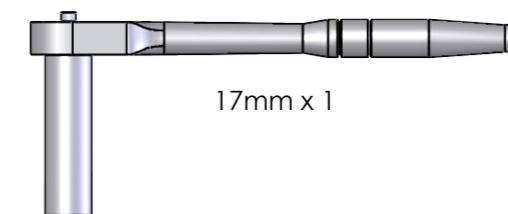

17mm x 1



13mm x 1



13mm x 1







17mm x 1




FITTING INSTRUCTIONS

OEM STEP REMOVAL

1.

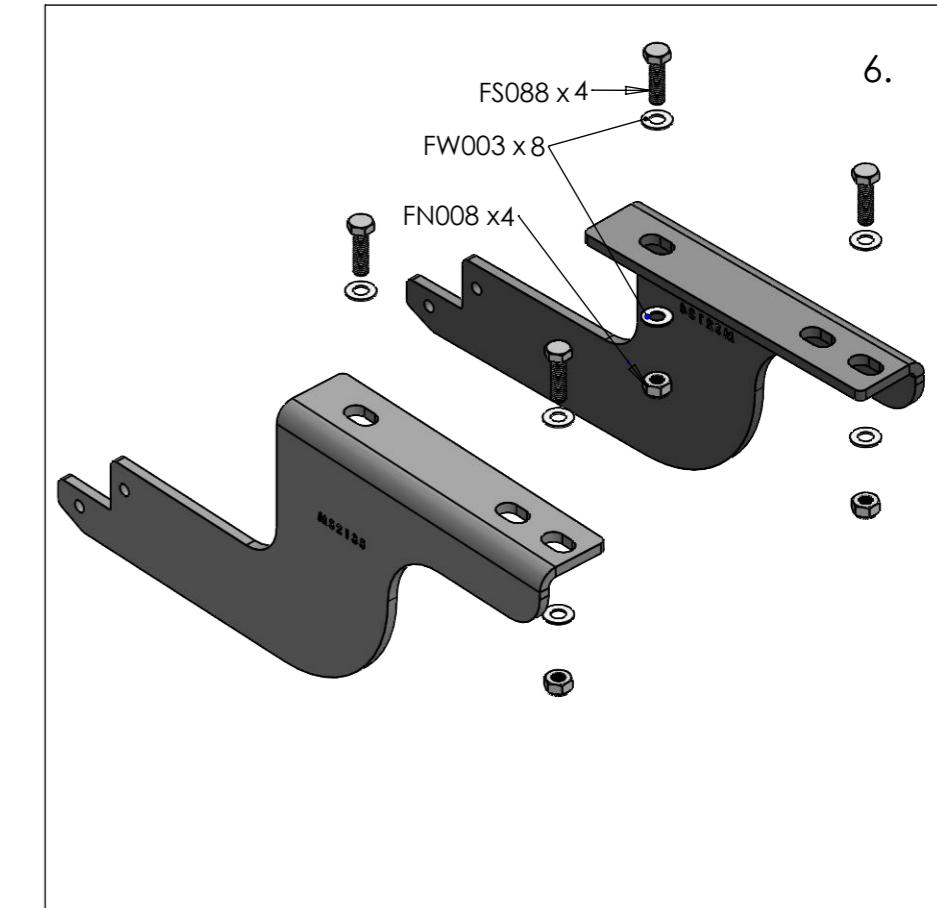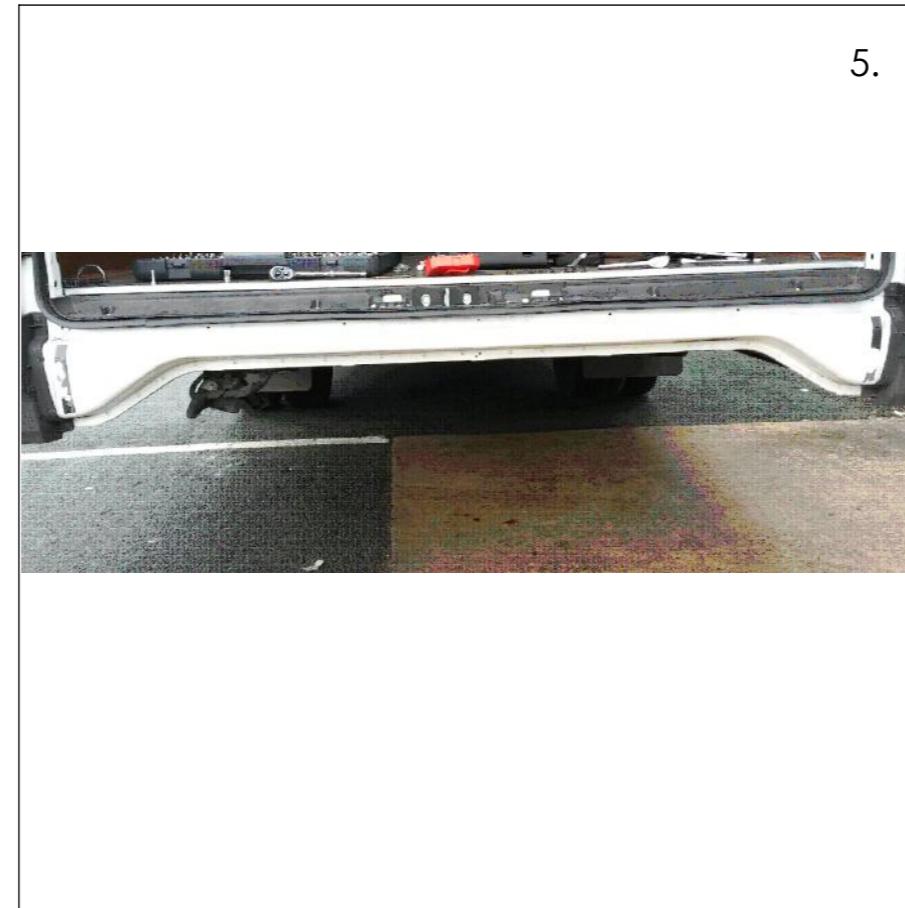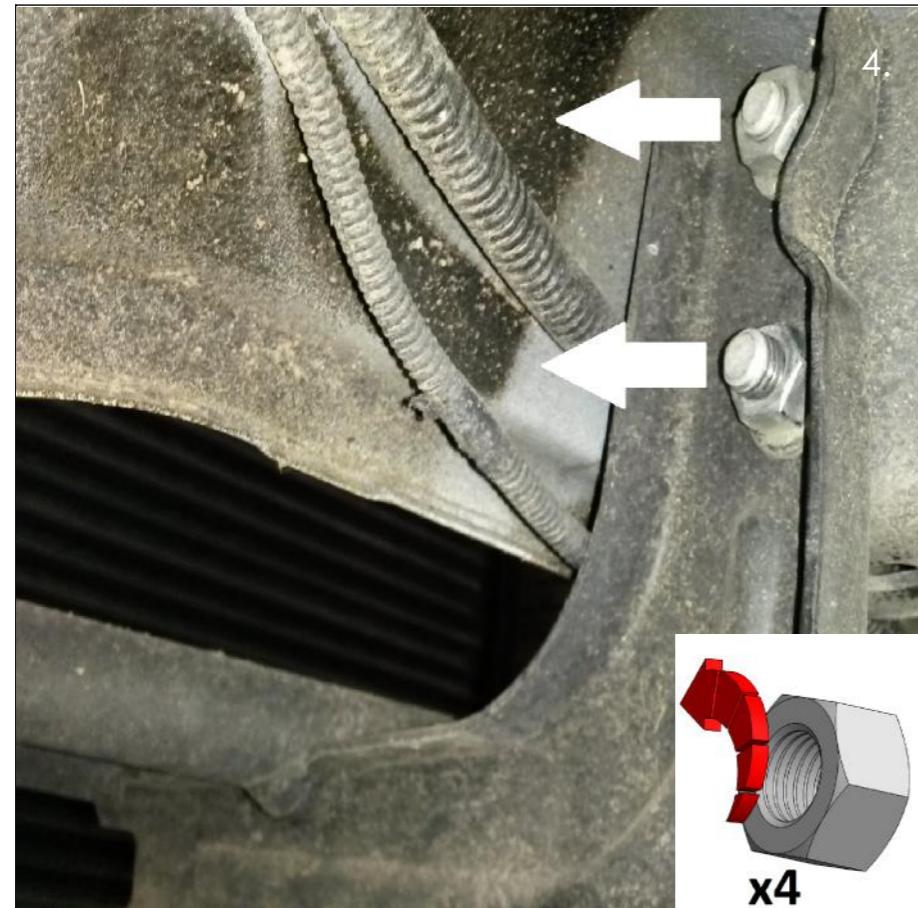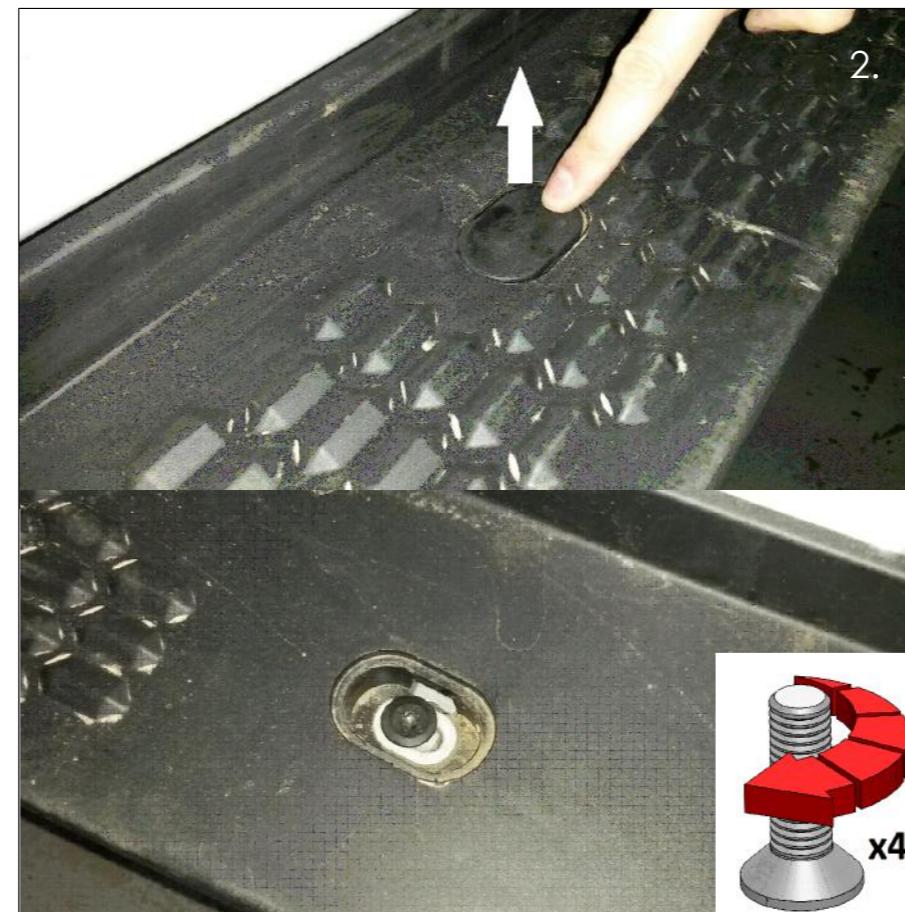

FITTING INSTRUCTIONS

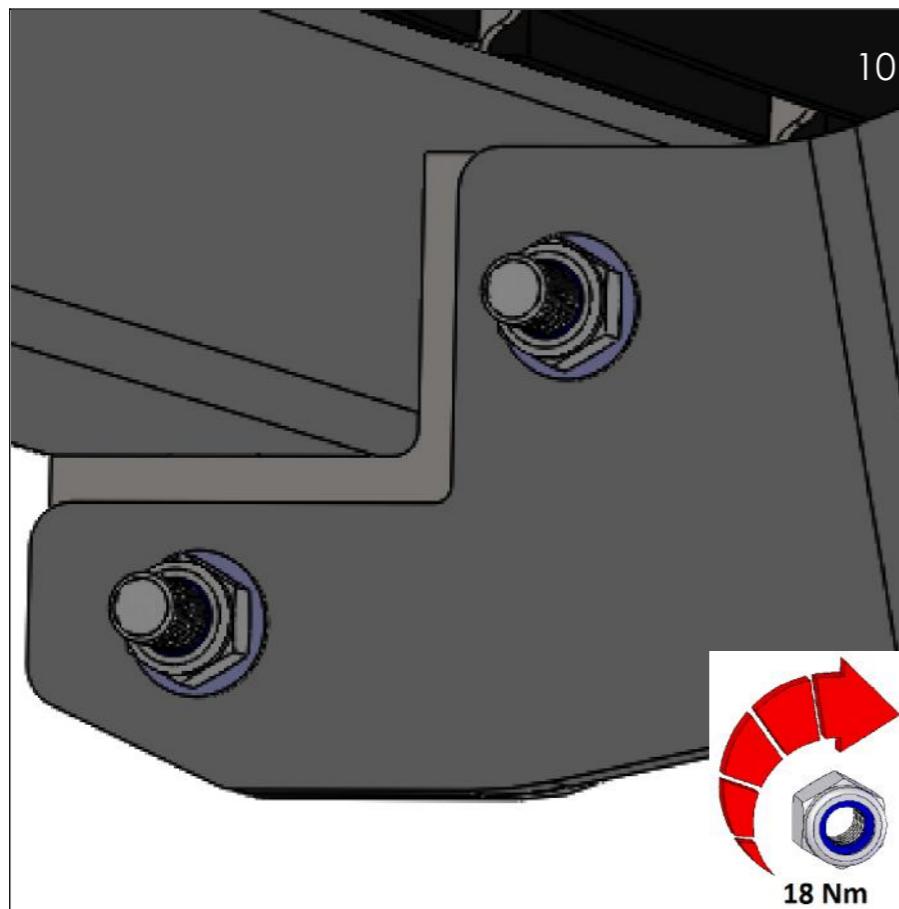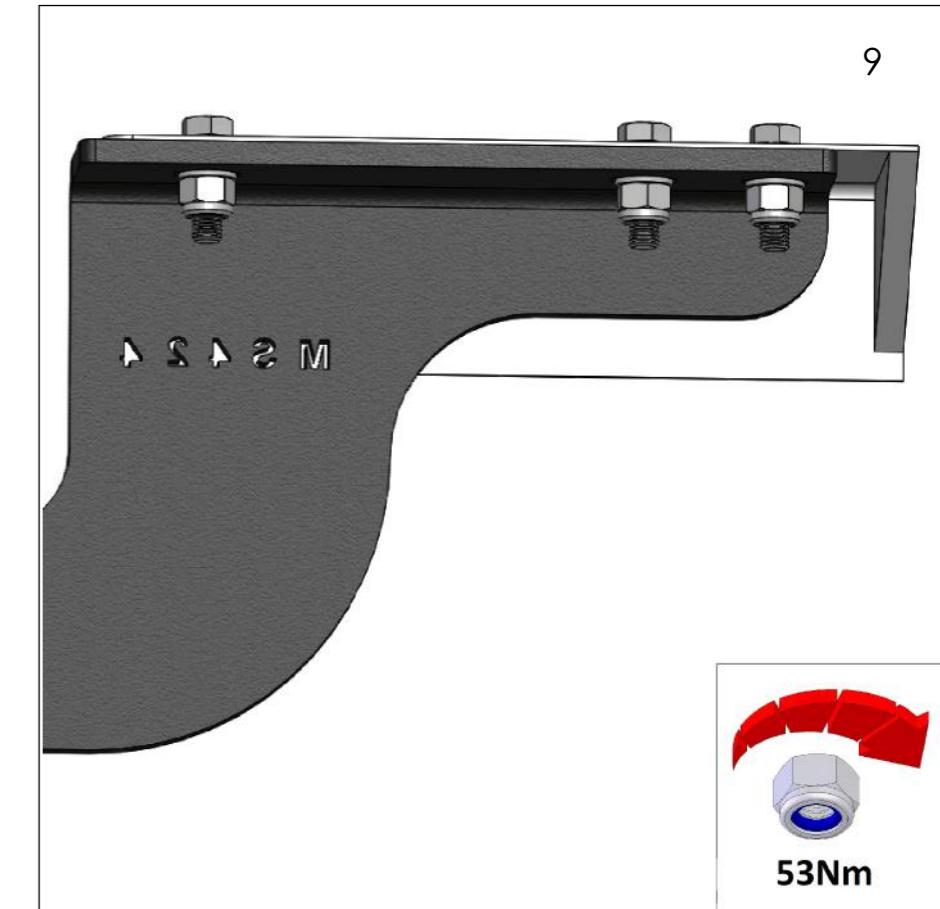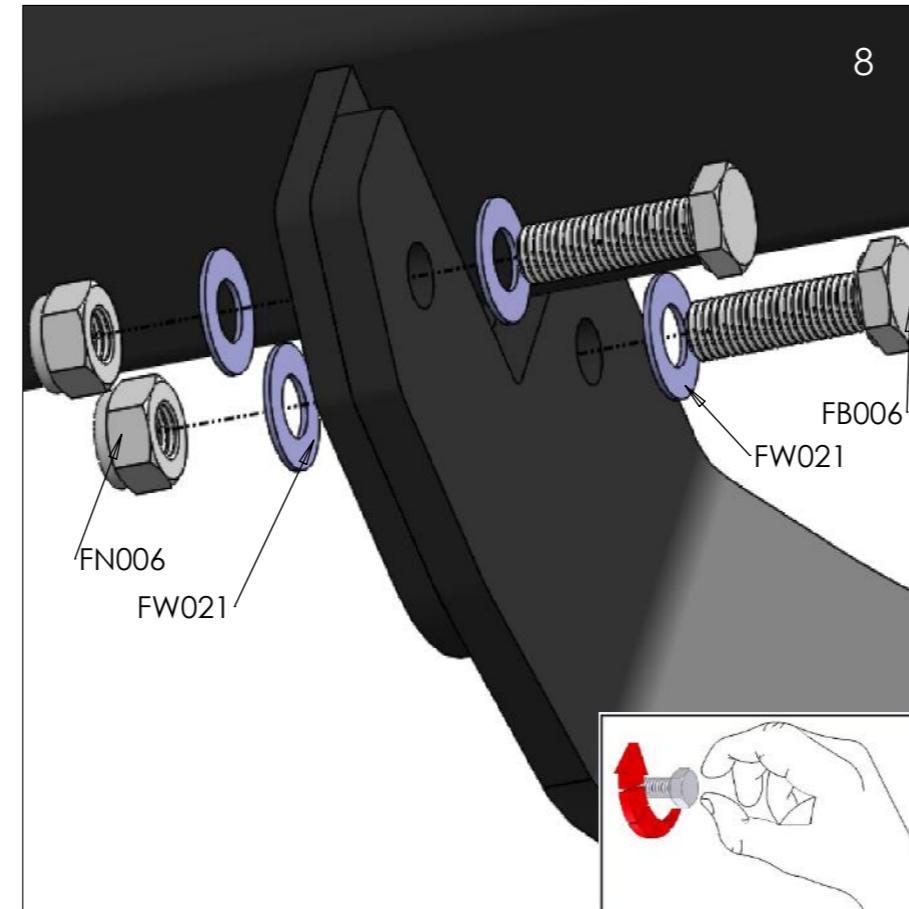

IMPACT STEP FITTING INSTRUCTIONS



## IMPACT STEP FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK884  
(1:1)

1




FW020 (M8) x 4


ACCESSSTEP	✗
IMPACT STEP	✓

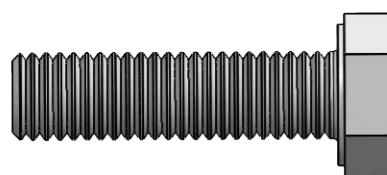

FB006 (M8 x 30) x 4

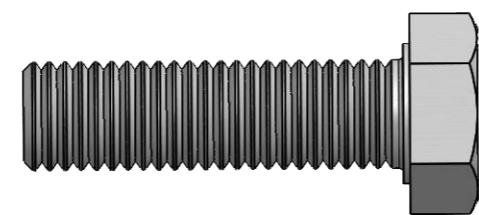


FS088 (M10 x 35) x 6

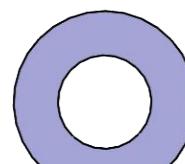

FW021 (M8) x

ACCESSSTEP	8
IMPACT STEP	4

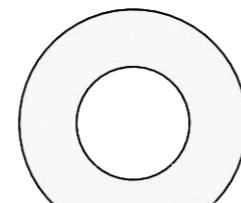


FW003 (M10) x 12



FN006 (M8) x 4

ACCESSSTEP	✓
IMPACT STEP	✗

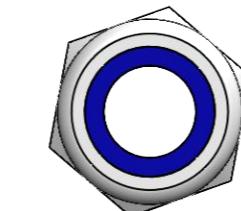


FN008 (M10) x 6


1

FITTING TIME: 25 Minutes

2

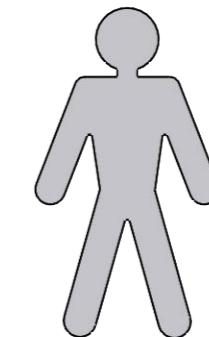

x 1

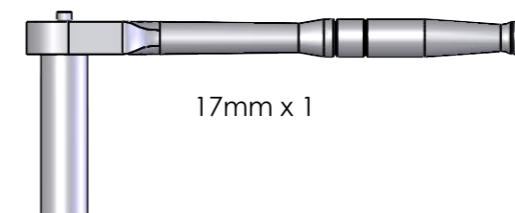


17mm x 1



13mm x 1



17mm x 1

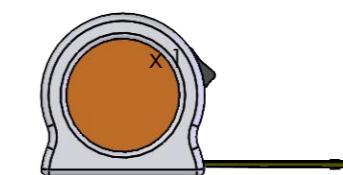


x 1

IMPACT STEP FITTING INSTRUCTIONS

OEM STEP REMOVAL


1.

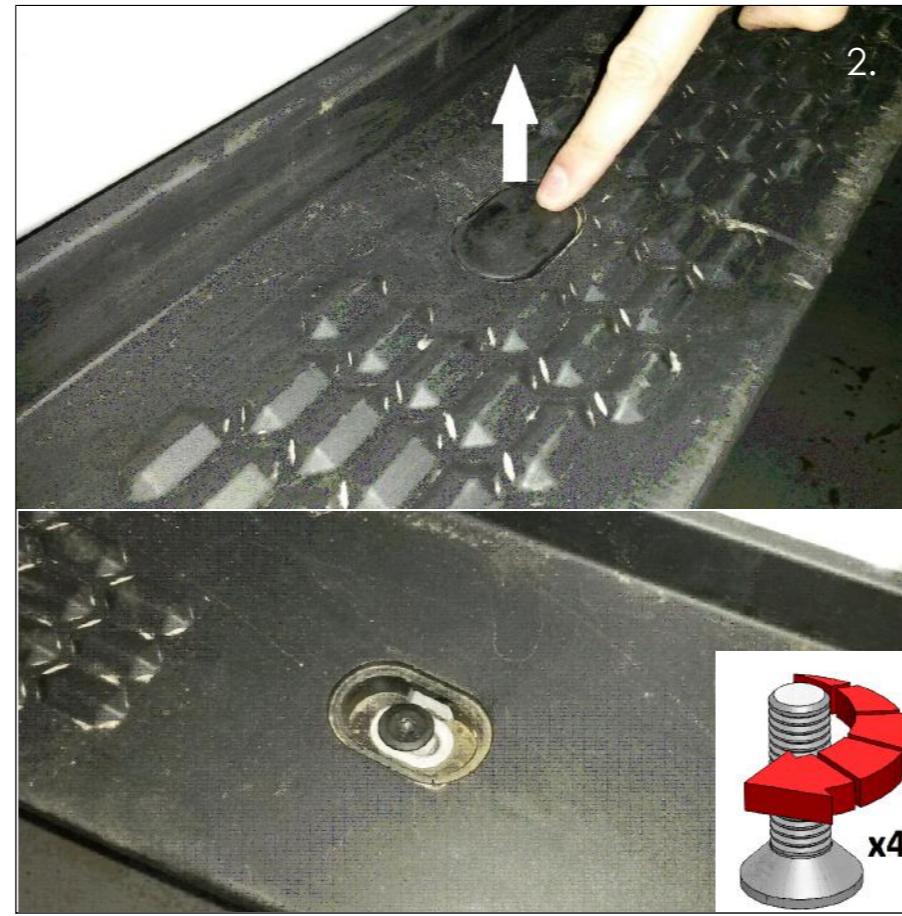






3.



5.

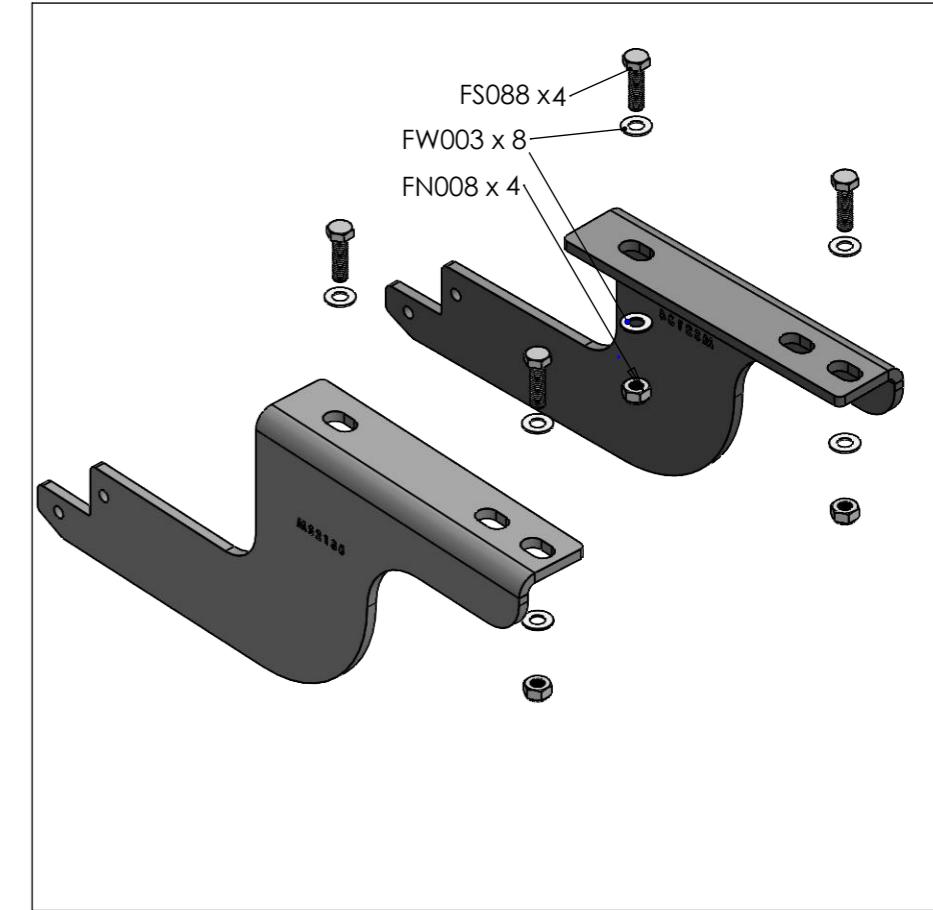

IMPACT STEP FITTING INSTRUCTIONS

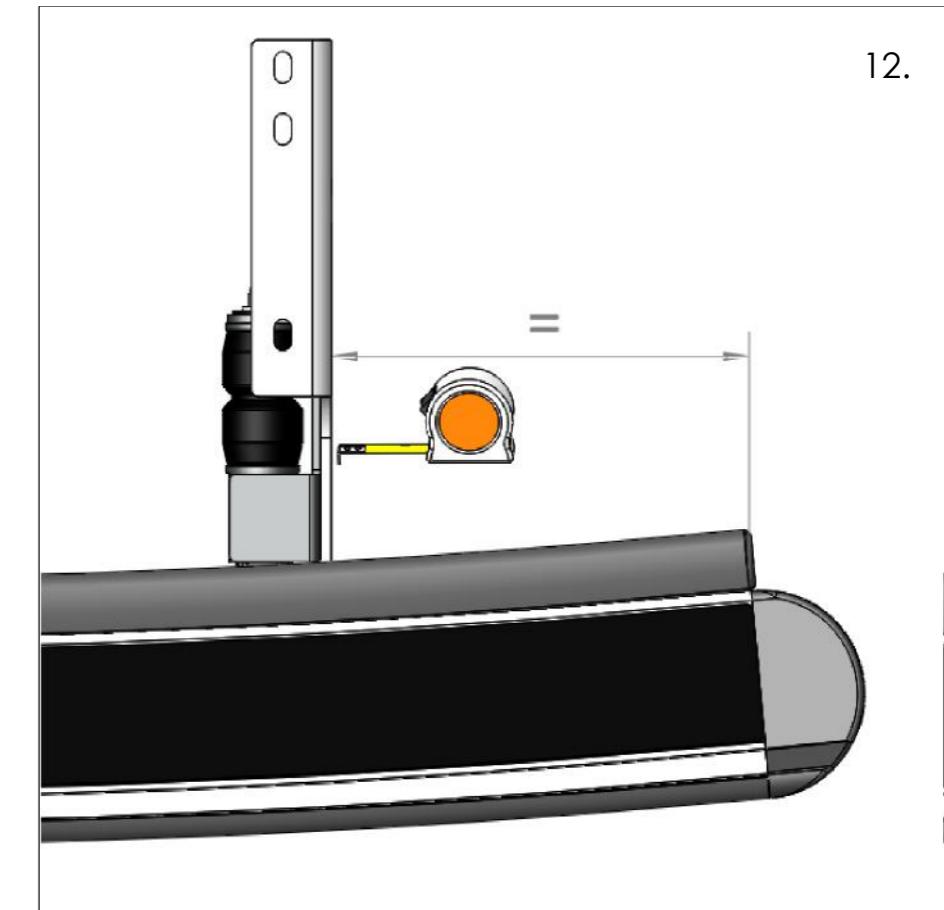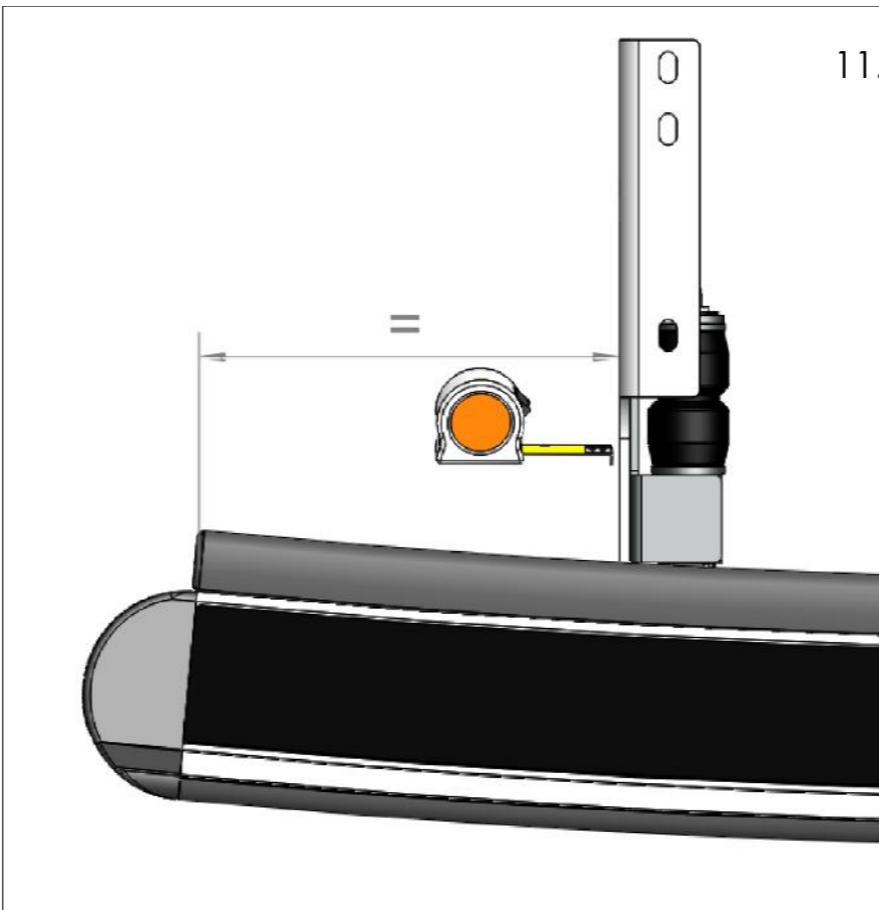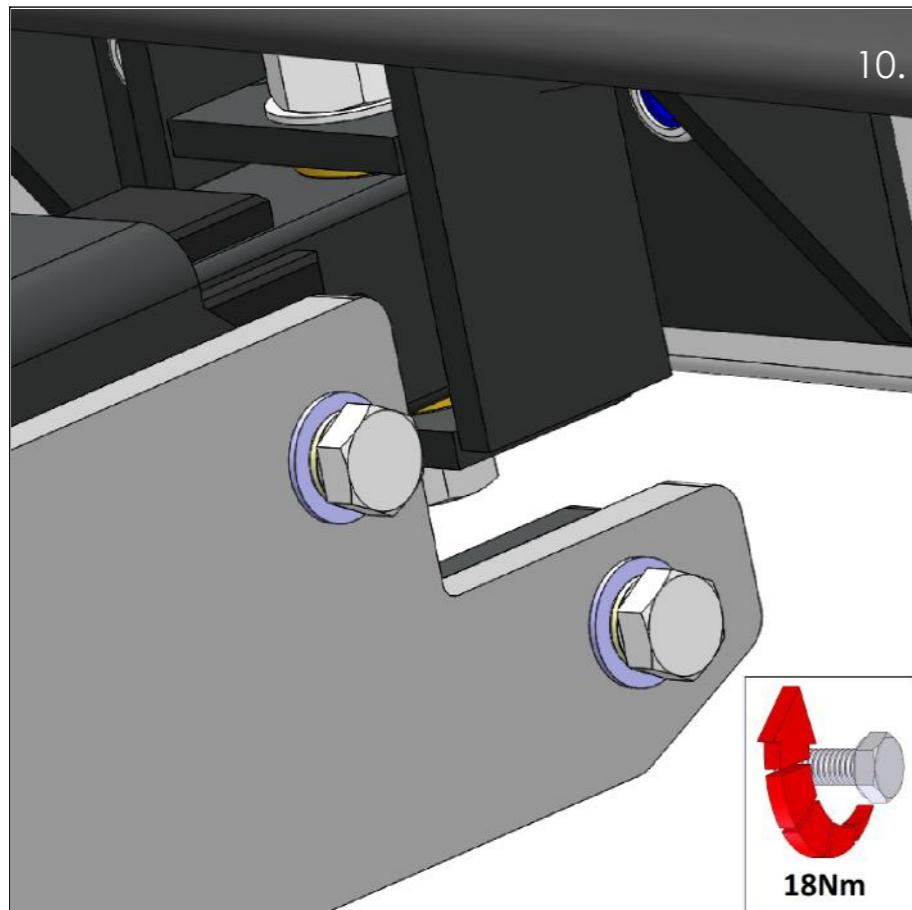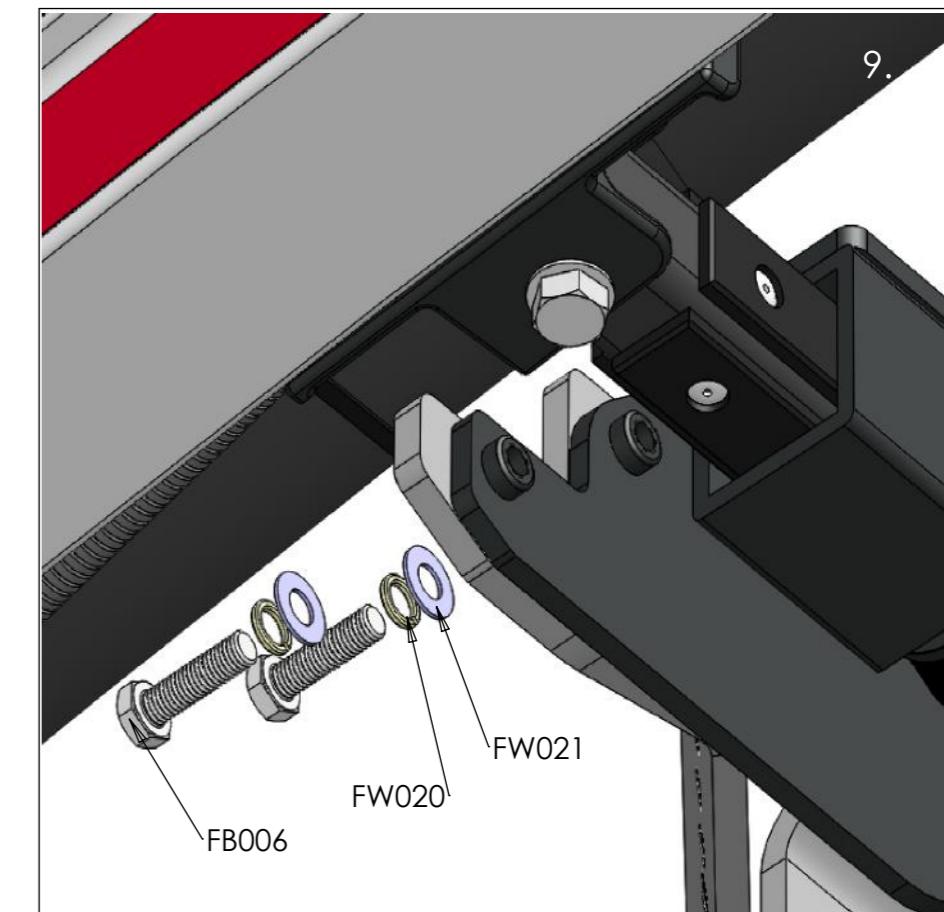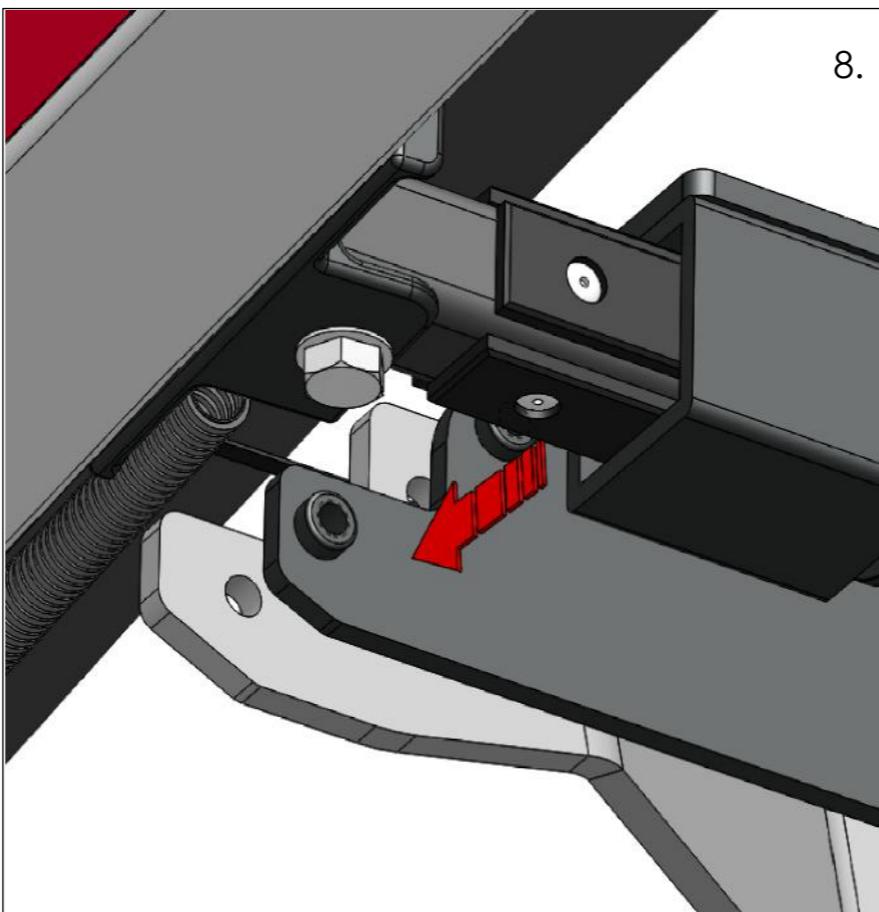

IMPACT STEP FITTING INSTRUCTIONS

