


XC4PR/FL





KammBar

Instructions

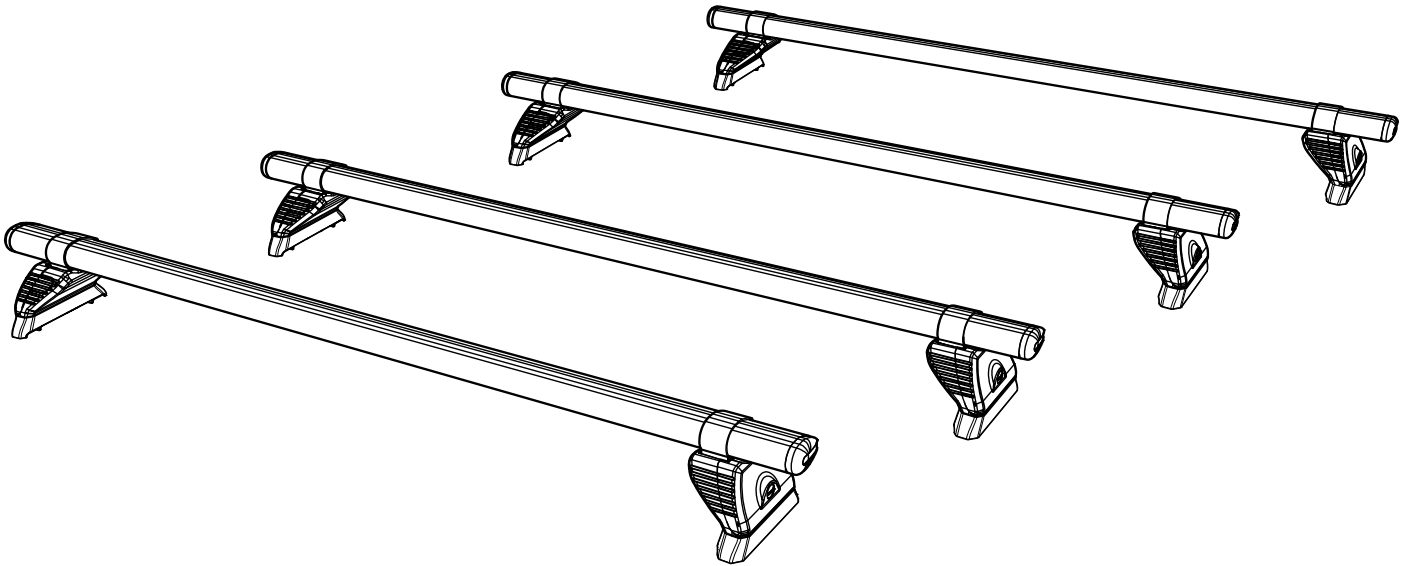


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

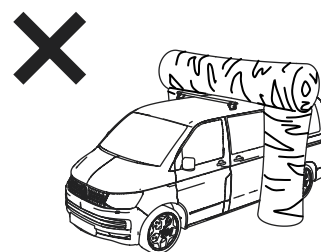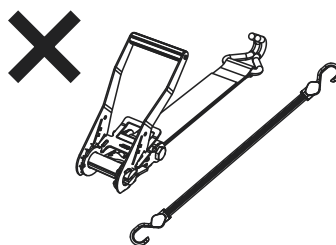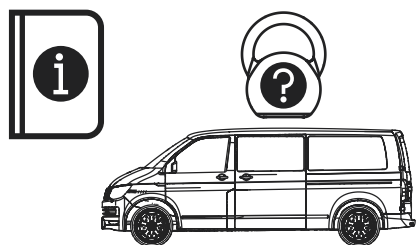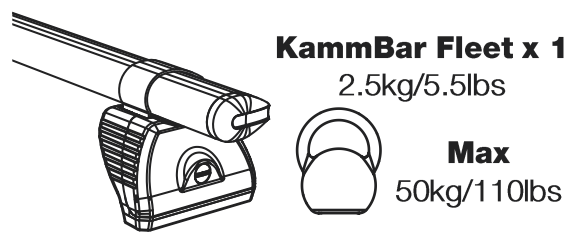


KammBar Pro

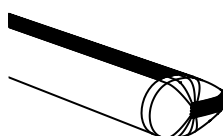


SA421 x 4 ☐



SA070 x 4 ☐

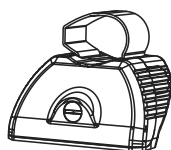


SA397 x 4 ☐

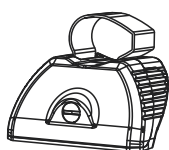


SA398 x 4 ☐


KammBar Fleet

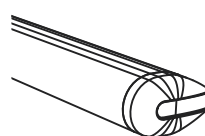


SA395 x 4 ☐



C04 x 4
optional upgrade

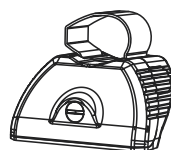


SA397 x 4 ☐

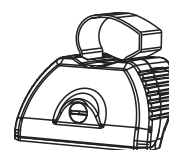


SA398 x 4 ☐


Fitting Kit

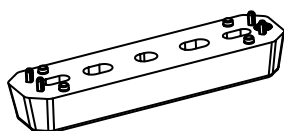


PS183 x 8 ☐




PS023 x 8 ☐



PS046 x 4 ☐

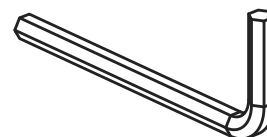


FT01 x 1 ☐

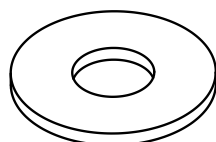


FW002 (M8) x 10 ☐



FN006 (M8) x 10 ☐

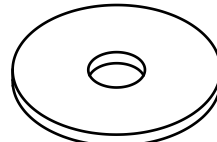

PS208 (M8) x 10 ☐

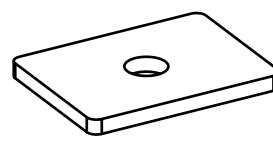


PS020 (M8) x 6 ☐




FS024 (M8 x 100) x 6 ☐



FS081 (M8 x 50) x 4 ☐




MS019 x 2 ☐

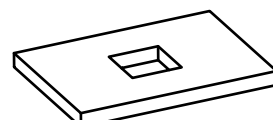


MS209 x 6 ☐


1.

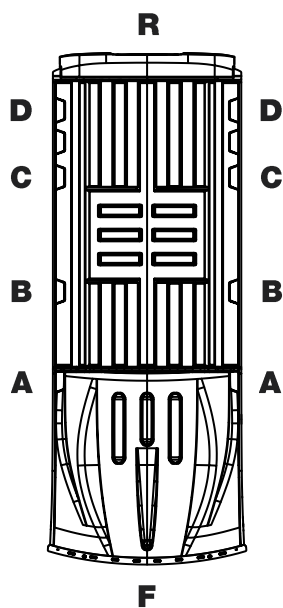


2.

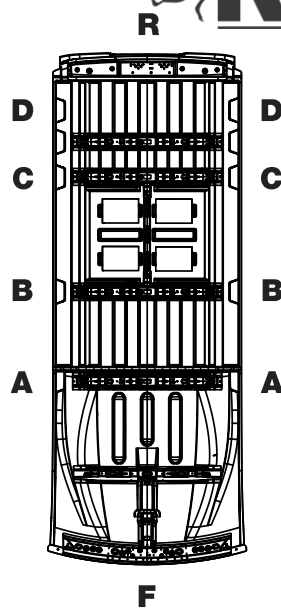


3.

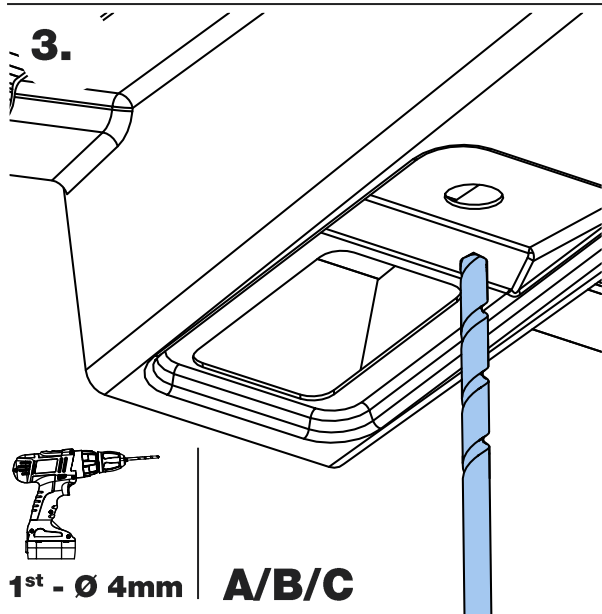


4.

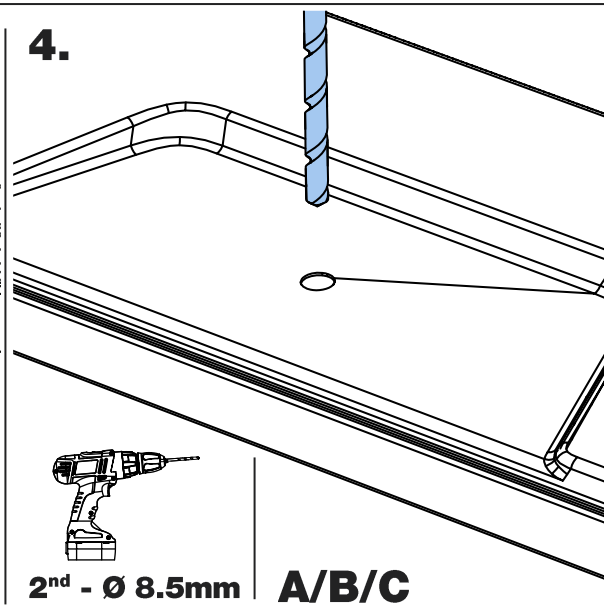


5.

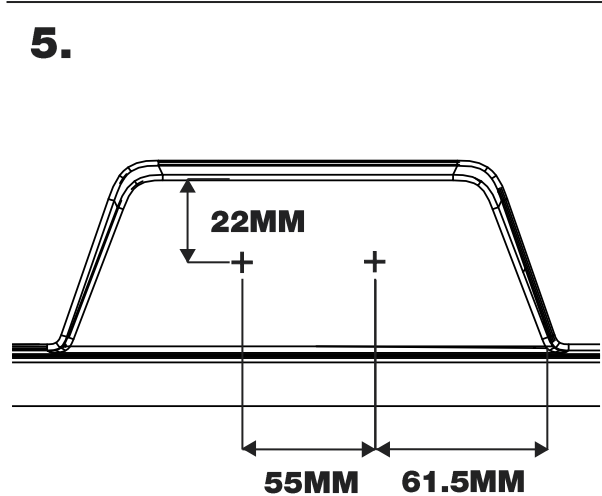


6.

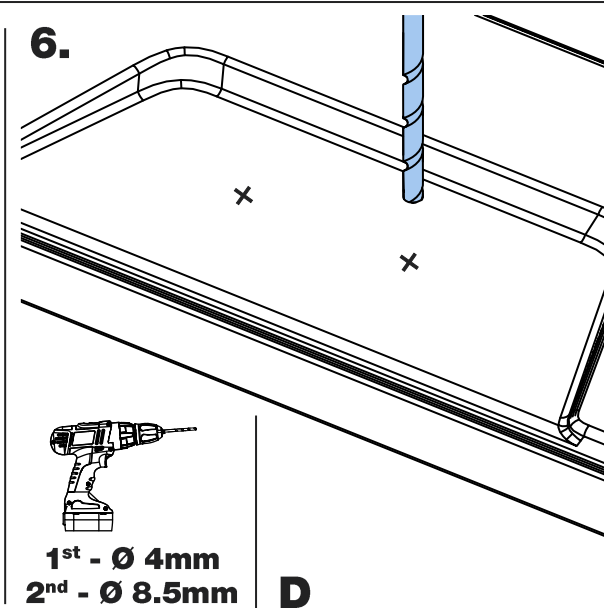


7.

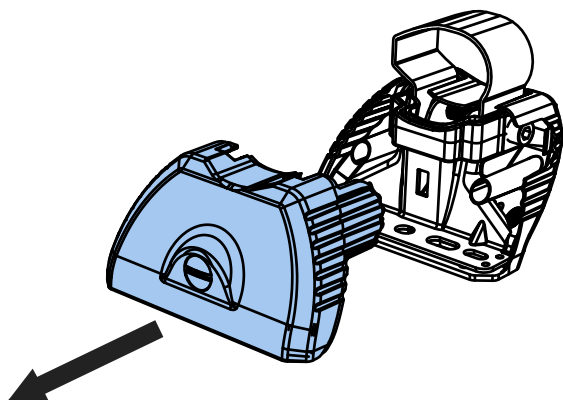

8.

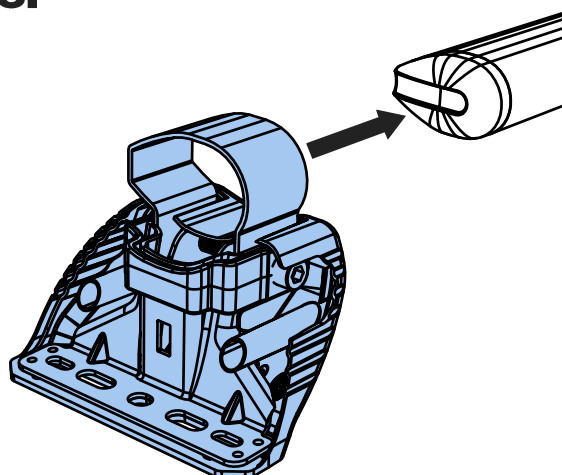


9.



SA397




PS183



SA397




PS183



SA397




PS183



SA397



PS183

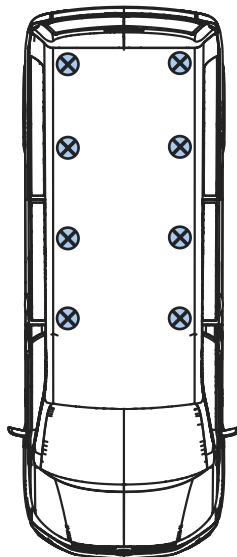

SA398



PS183



SA398



PS183



SA398



PS183



SA398



PS183




10.

FW002

PS208

FS024



M8 x 100mm



M8 x 50mm

FW002

PS208

FS081

11.

