



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

GB3KE


KammEdge.

Instructions

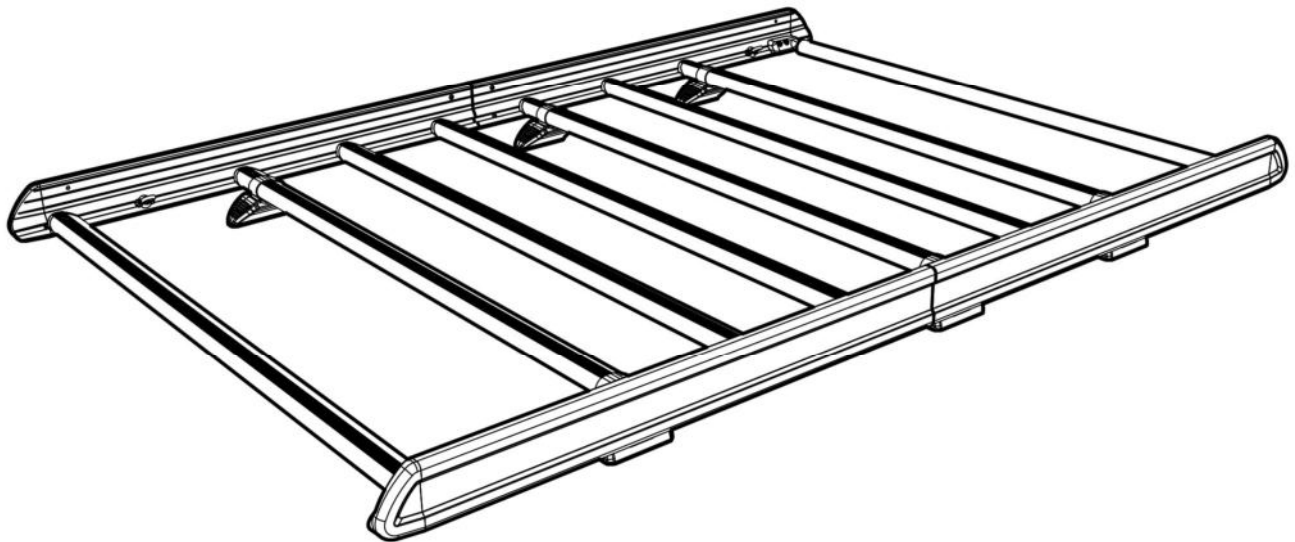


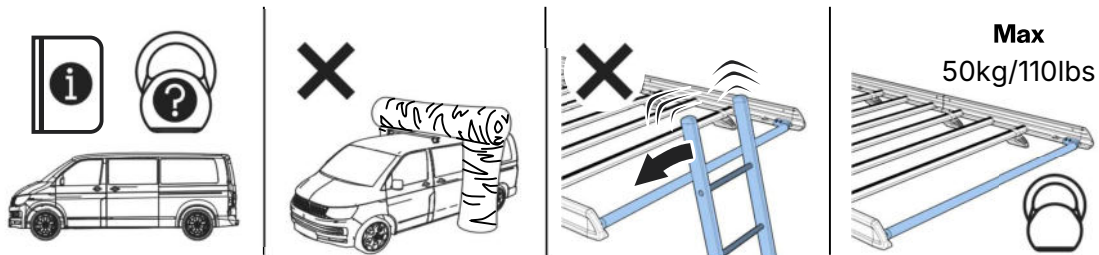

KammEdge.

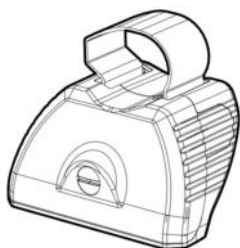


SA397U x 3

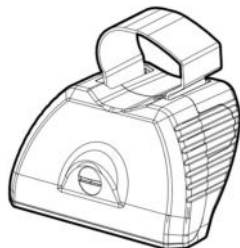


SA398U x 3




SA428/SA466 x 6

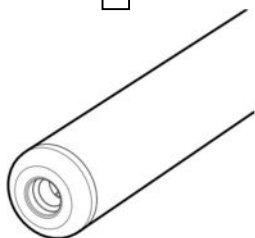


SA436 x 1

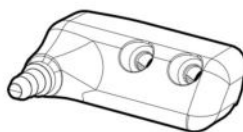

PS519 x 1

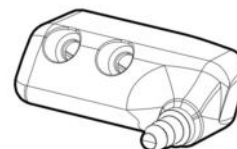

PS520 x 1

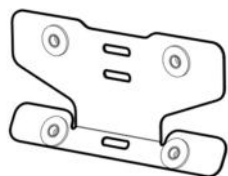


SA610 x 2




PS635 x 2



**FS323
(M6 x 16) x 8**

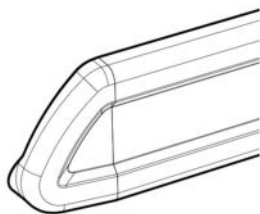

LSF (L) x 2

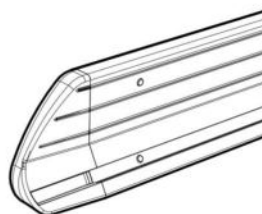


LSF (R) x 2




C04 x 6
optional upgrade


Fitting Kit




PS178 x 2



PS254L x 1




PS254R x 1

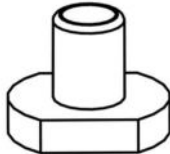

FN085 x 16



FW009 (M8) x 6



FW002 (M8) x 6



FS105
(M8 x 55) x 2



FS061
(M8 x 35) x 2



FS062
(M8 x 25) x 2




FT01 x 1




FT05 x 1




FS059
(M8 x 25) x 16



PS047 x 4




PS412 x 2




PS404 x 2



1.

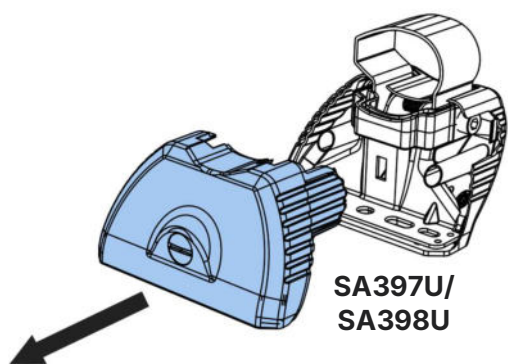


2.

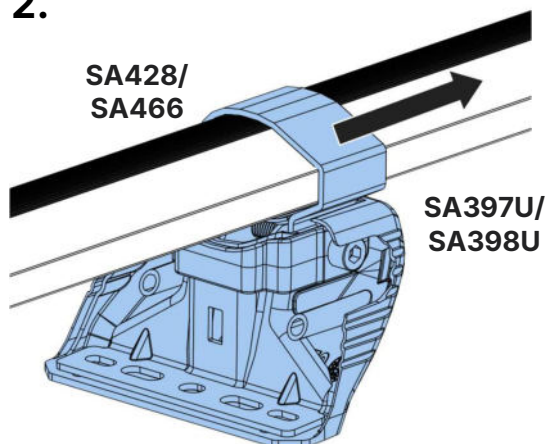

3.



SA397U
PS178

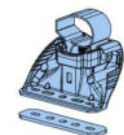


SA397U
PS404



SA397U
PS254L

R

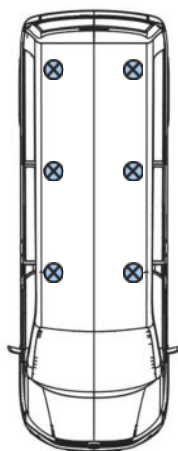

F

SA398U
PS178




SA398U
PS404




SA398U
PS254R




4.

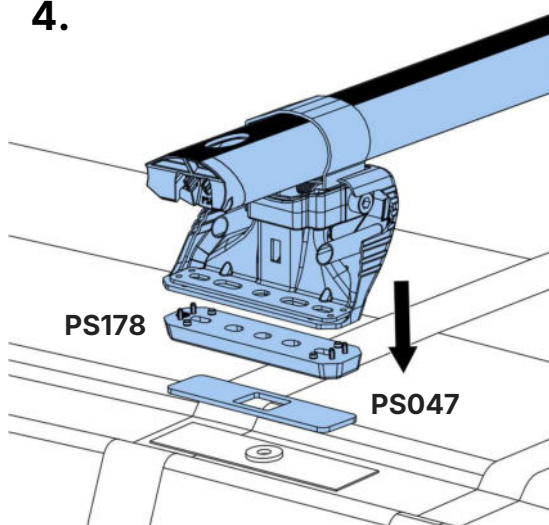


5.

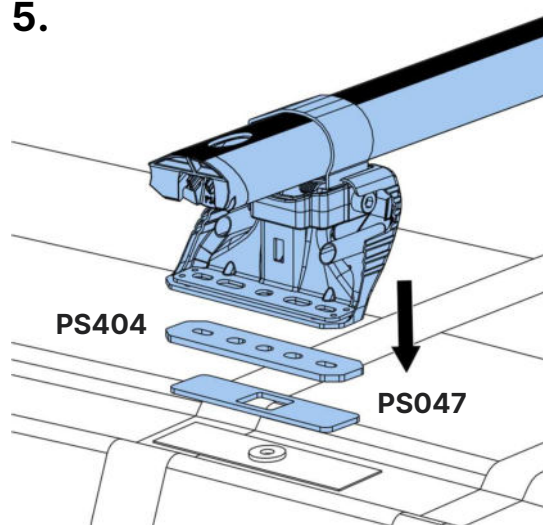


6.

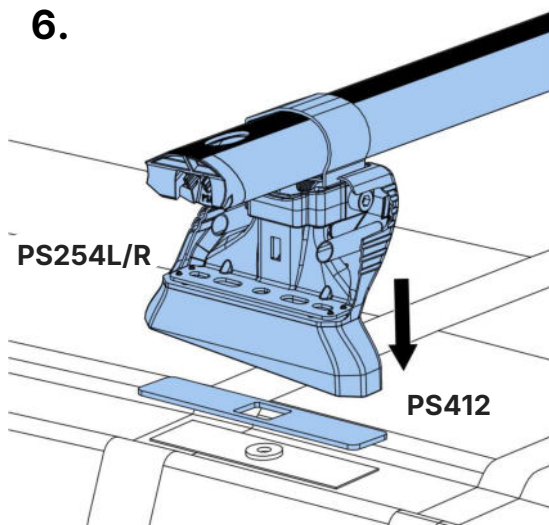


7.

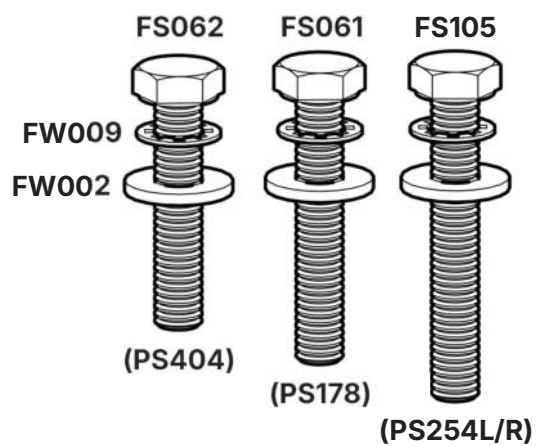


8.

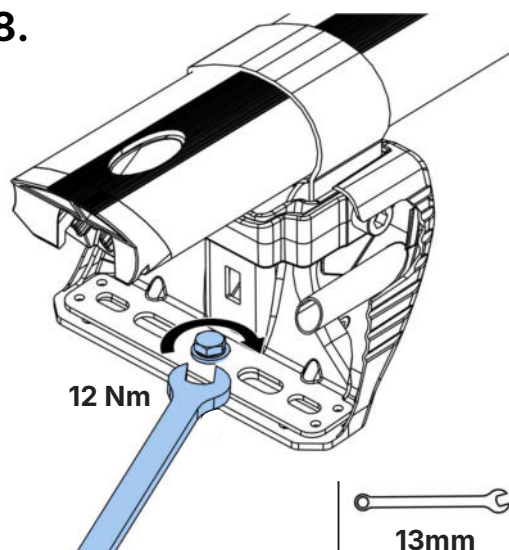


9.

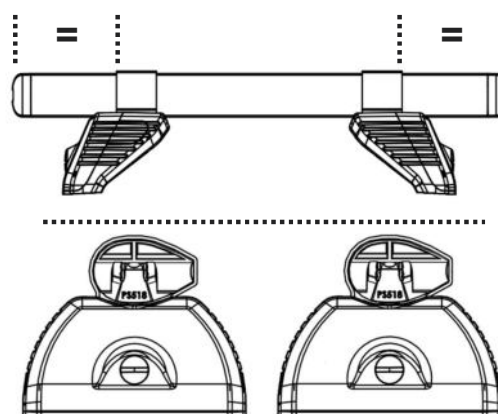


10.

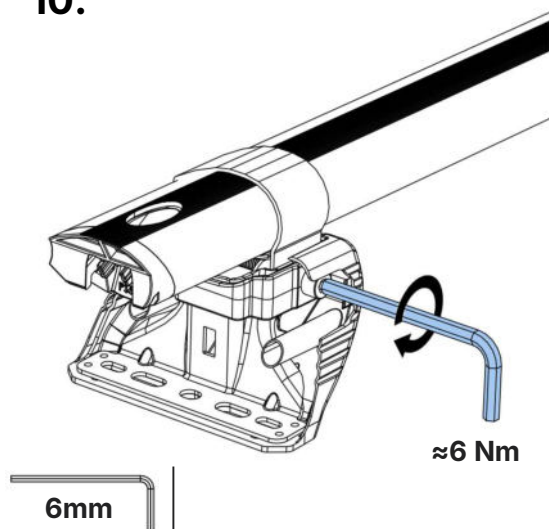



11.

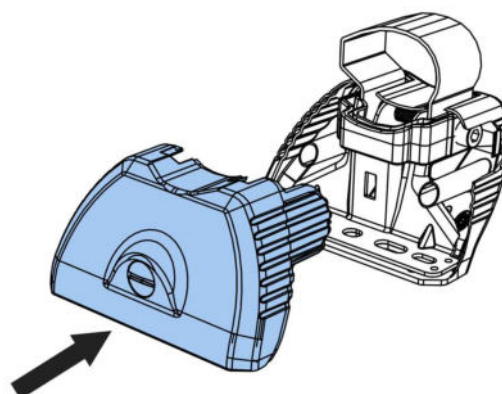

12.

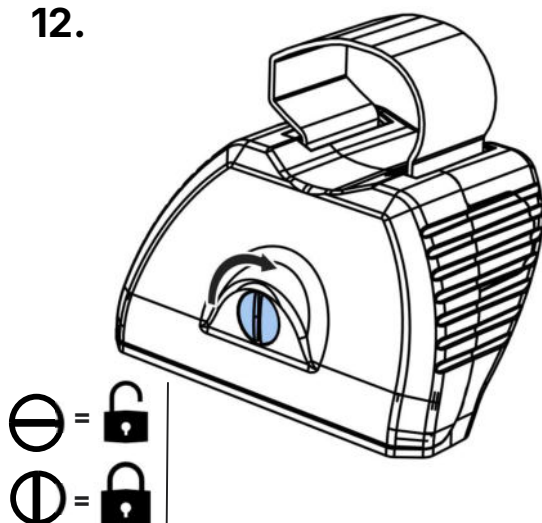

13.

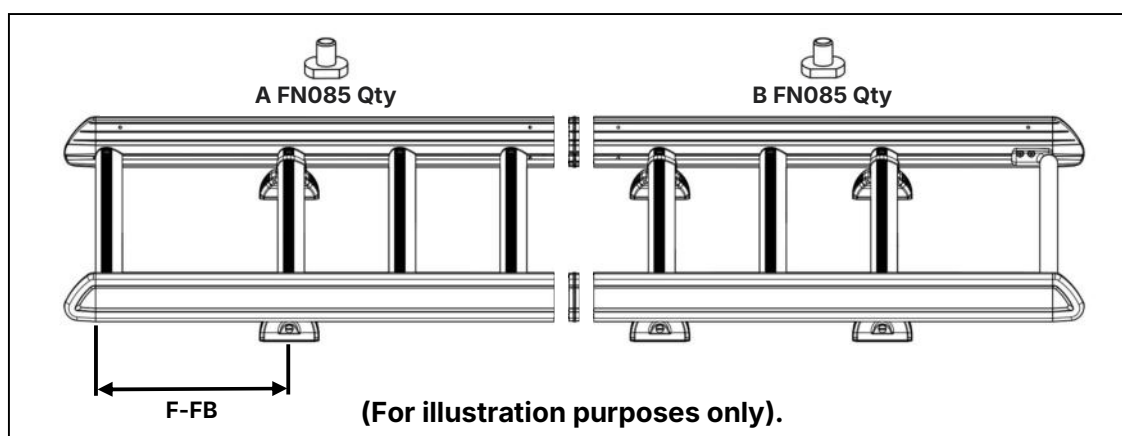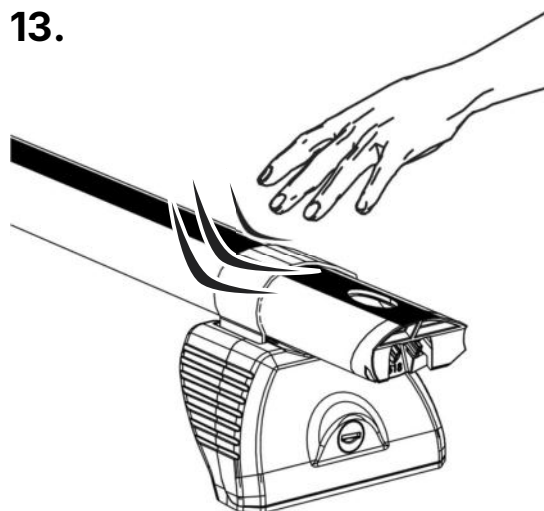


L672/LB672- Berlingo/Partner/Combo 2018-, Proace City 2020-, Doblo 2022- L1-H1 (Twin)







Max Load = 150kg/330lbs




L672/LB672 = 20kg/44lbs

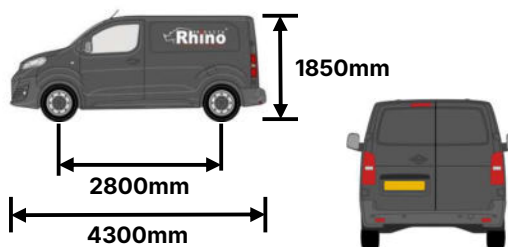


A FN085 Qty	B FN085 Qty	Front – Front Bar (mm)
4	4	395

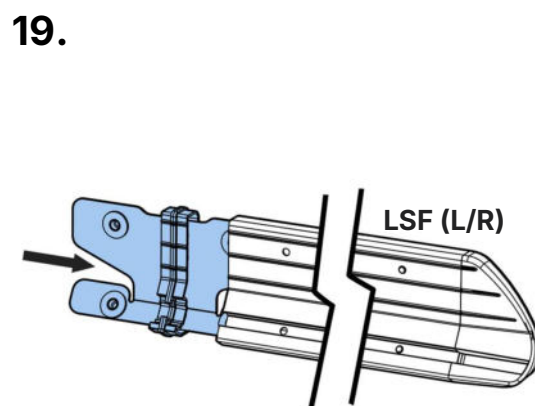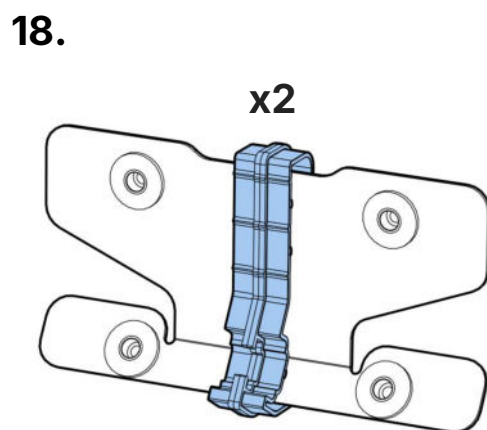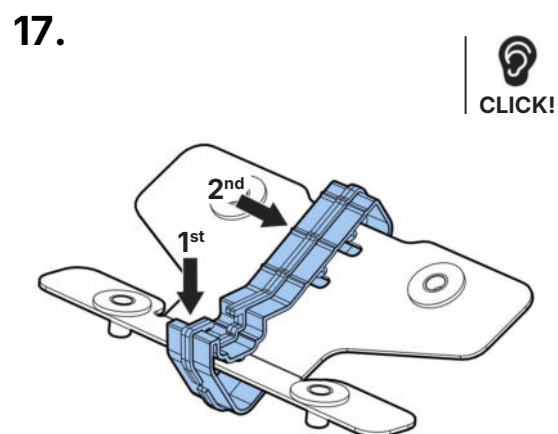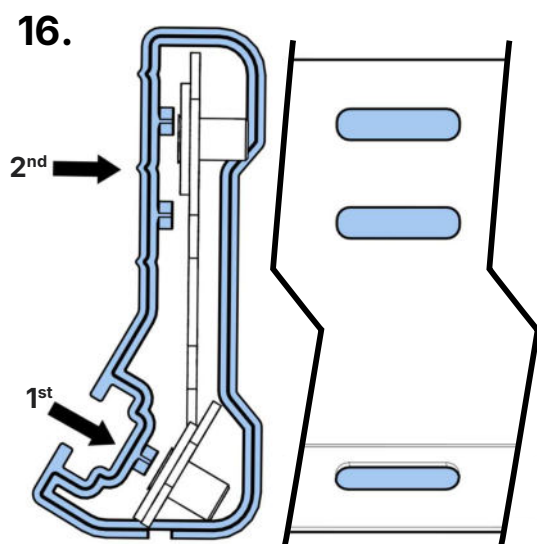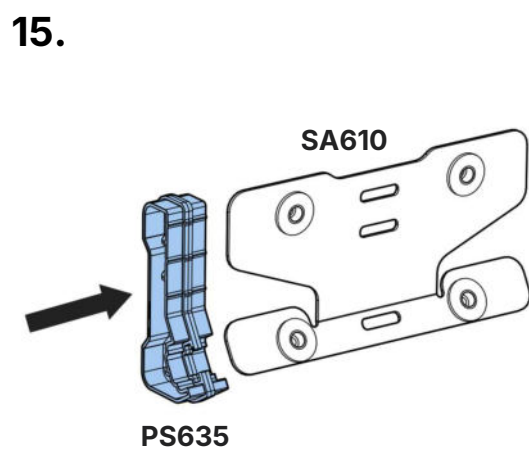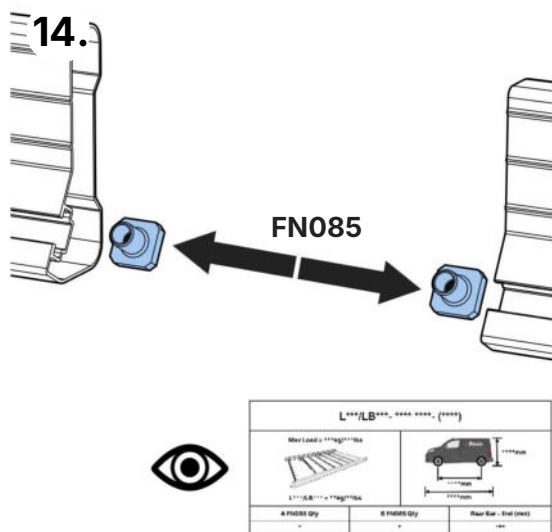


20.

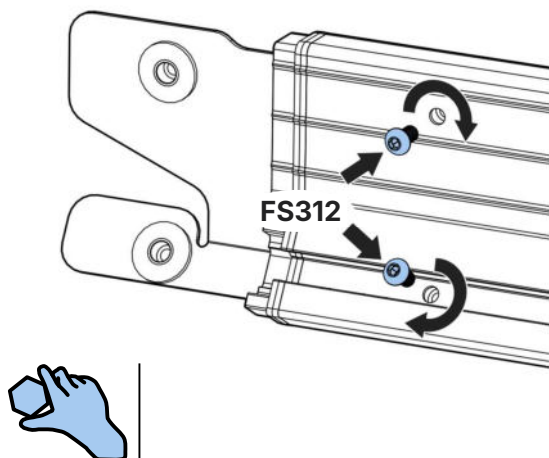


21.

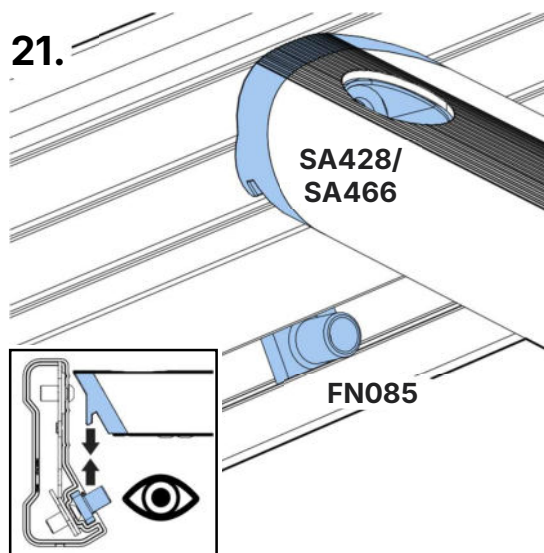


22.

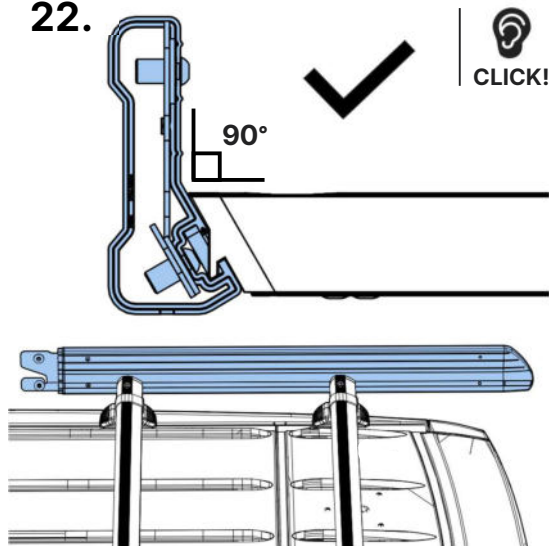

23.

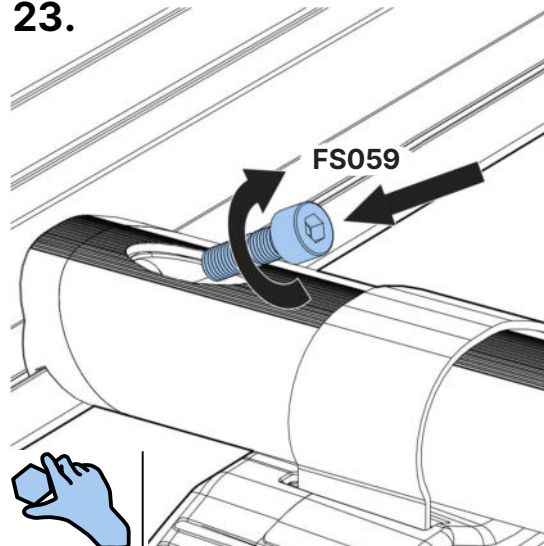

24.

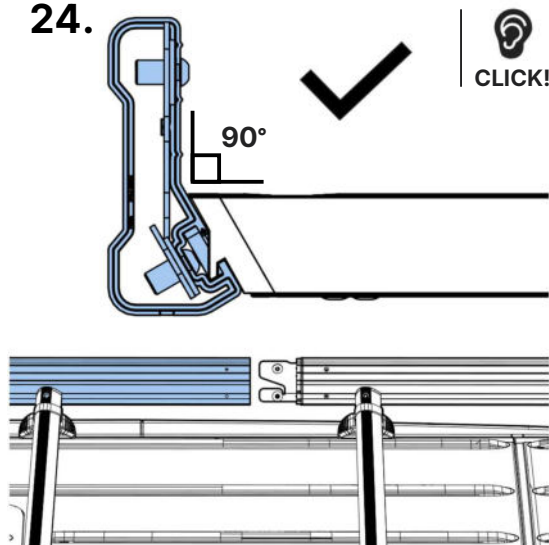

25.

