



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

IA63KE


KammEdge.

Instructions

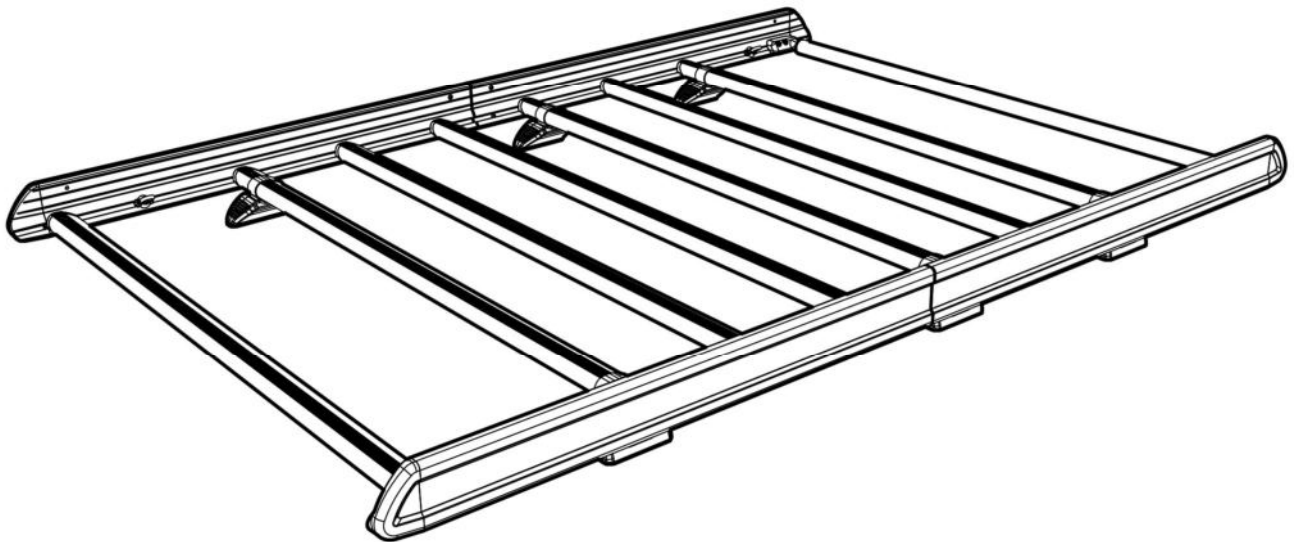


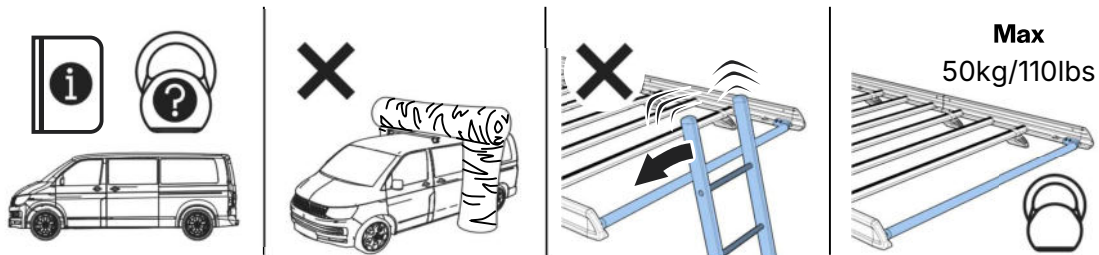


KammEdge.

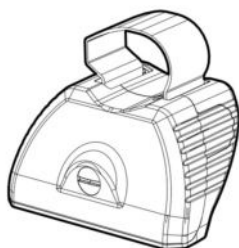


SA397U x 3

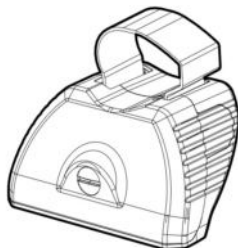


SA398U x 3

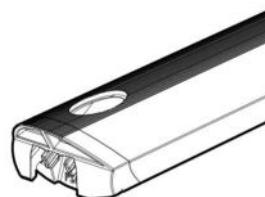


SA430/SA468 x 9

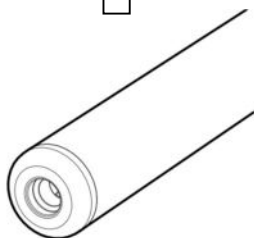


SA439 x 1

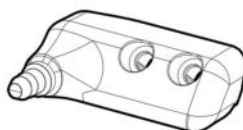

PS519 x 1

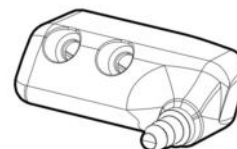

PS520 x 1

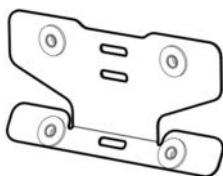


SA610 x 4




PS635 x 4




**FS323
(M6 x 16) x 16**

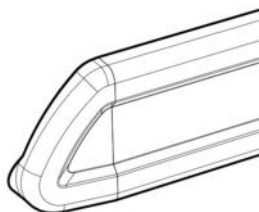

LSF (L) x 2

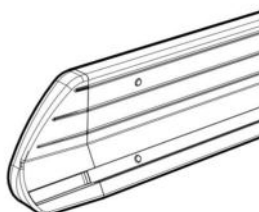


LSF (R) x 2

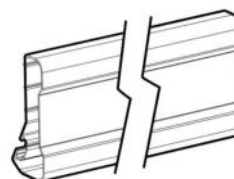

LSF (M) x 2



Fitting Kit




PS180 x 6



SA068 x 6



**FS059
(M8 x 25) x 22**

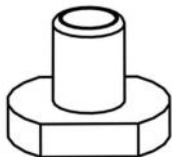

FN085 x 22



FW009 (M8) x 6



FW002 (M8) x 6




**FS067
(M8 x 20) x 6**



FT05 x 1



FT01 x 1




PS047 x 6




C04 x 6
optional upgrade


1.

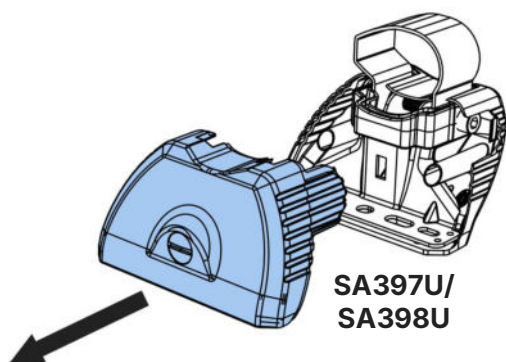


2.

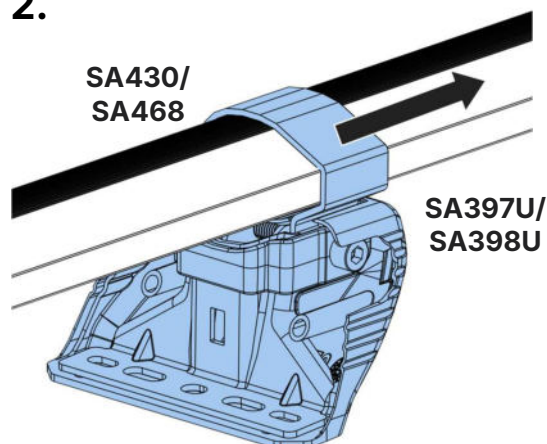


3.





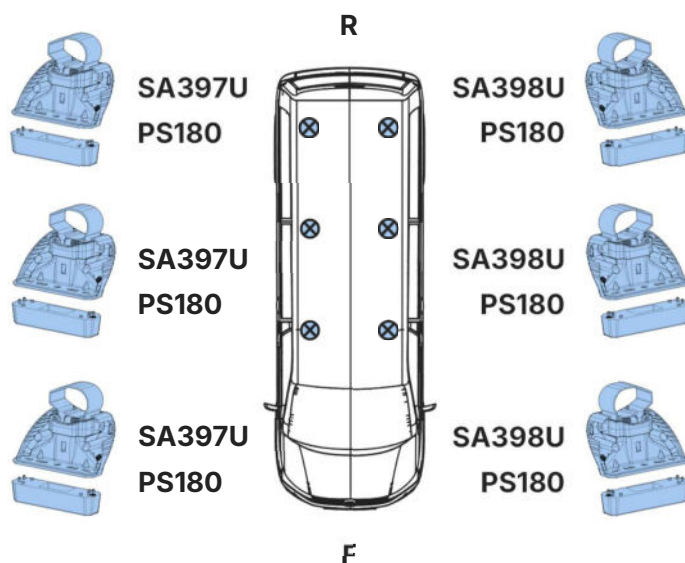



4.

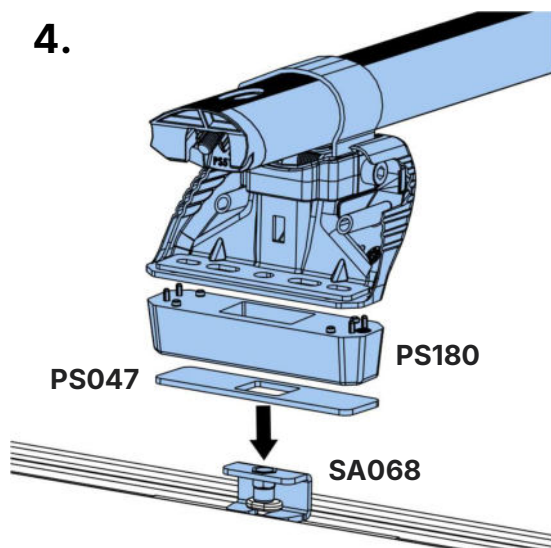


5.






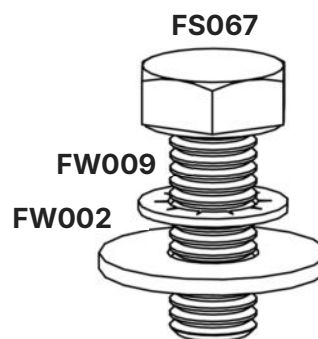


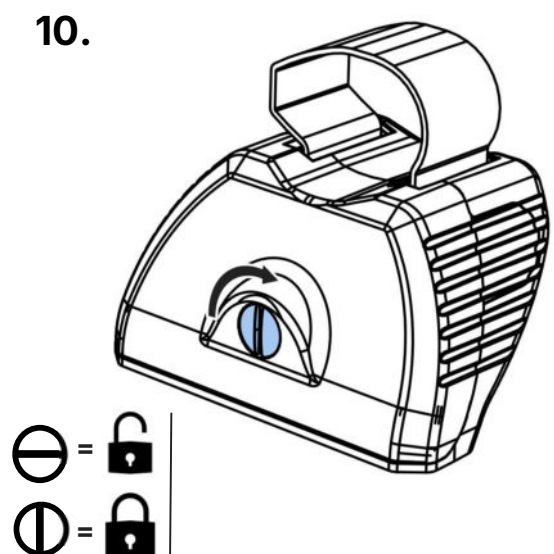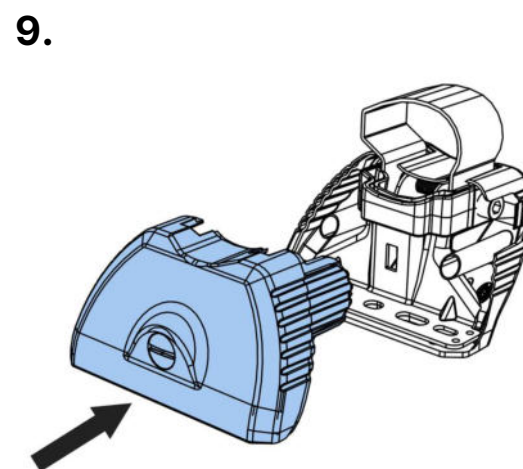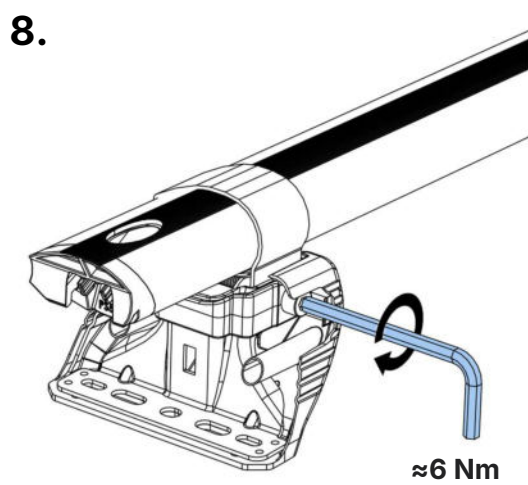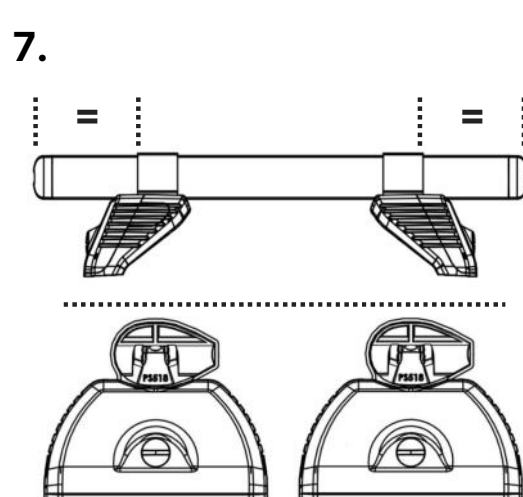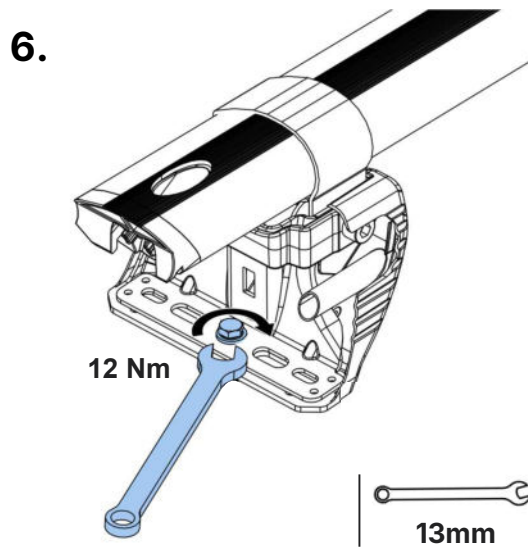

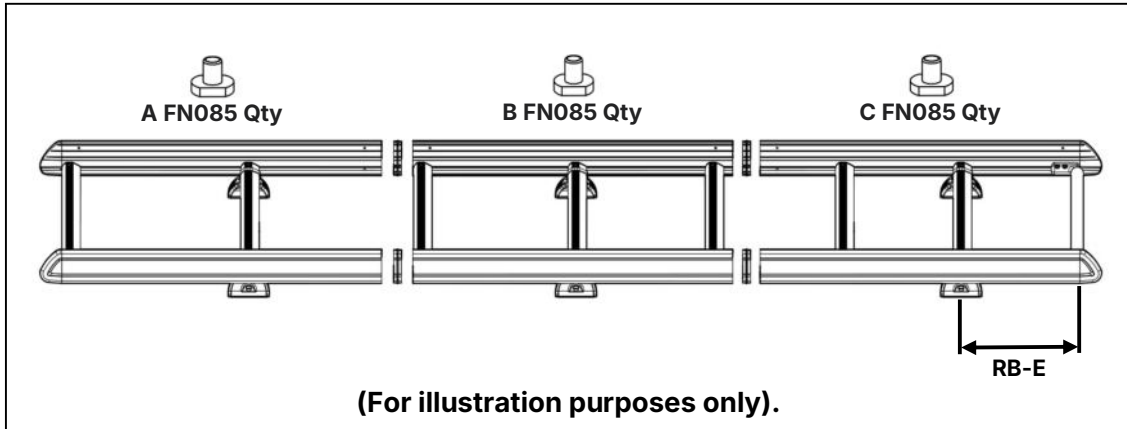


L652/LB652- Jumper/Relay/Boxer/Ducato 2006-, Movano 2020-, L3-H3 (Twin)

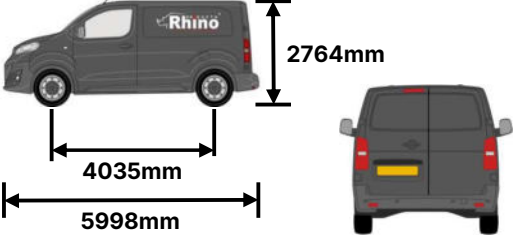
Max Load = 150kg/330lbs  L652/LB652 = 33kg/72lbs			
A FN085 Qty	B FN085 Qty	C FN085 Qty	Rear Bar – End (mm)
4	2	5	318

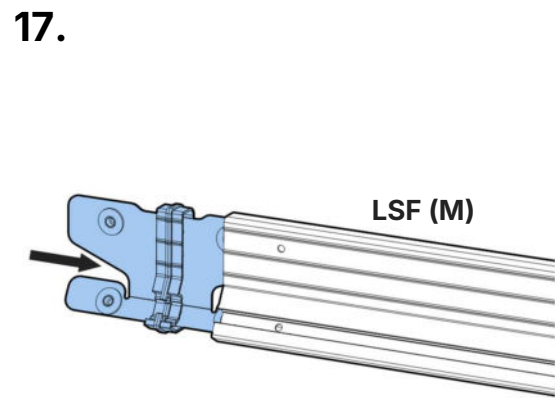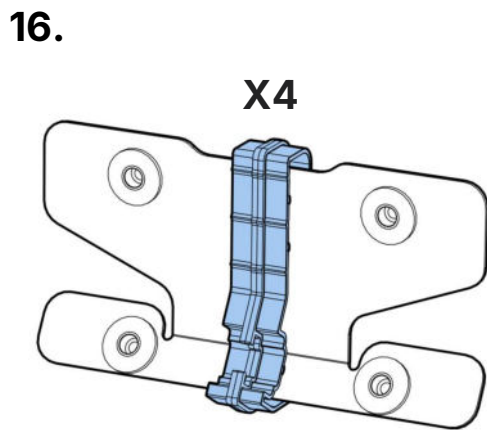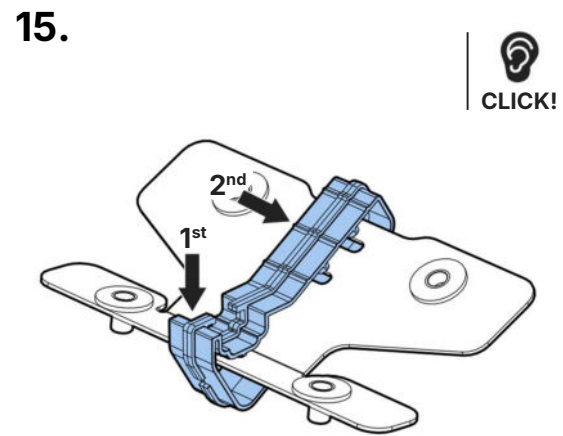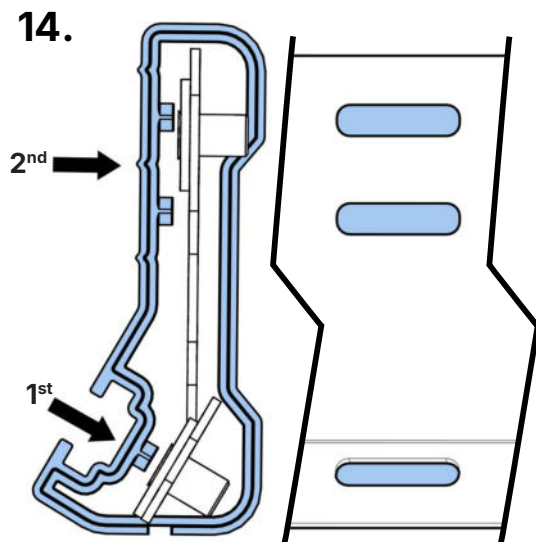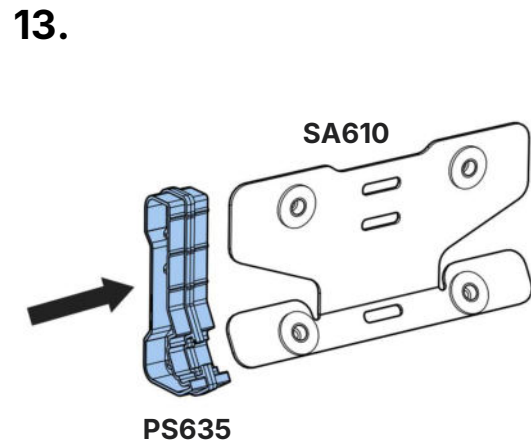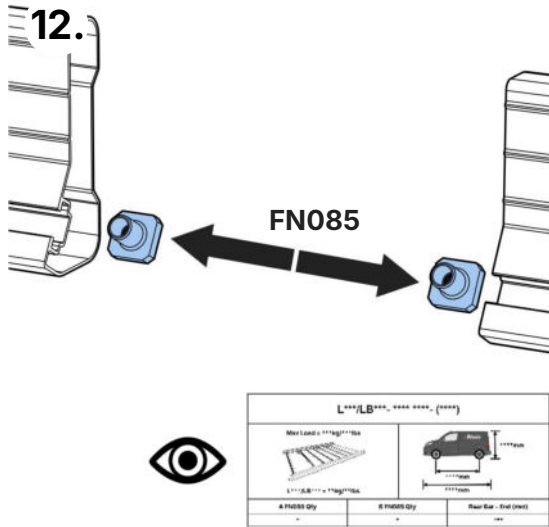


18.

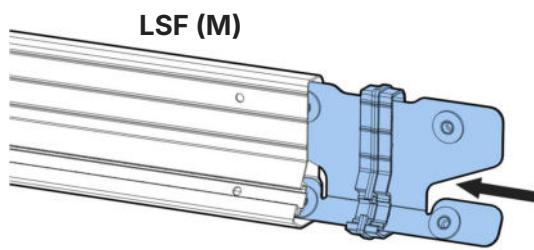


19.

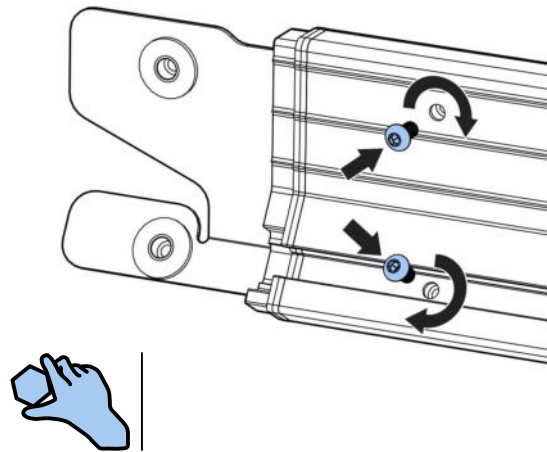


20.

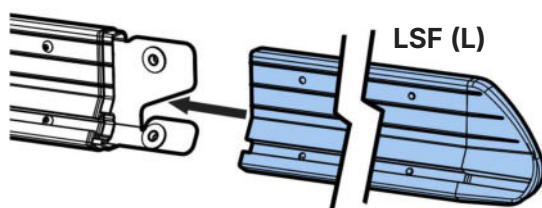


21.






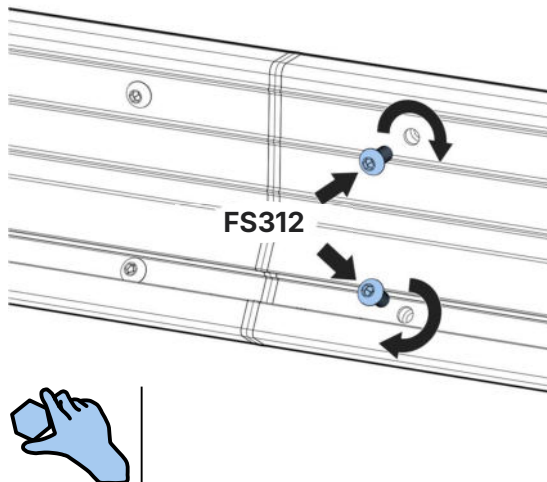


22.

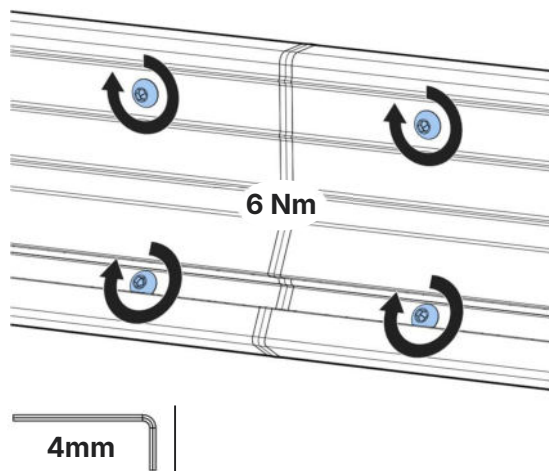


23.

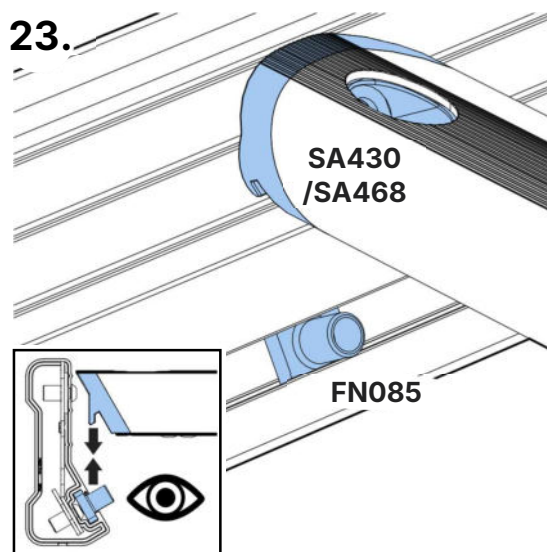


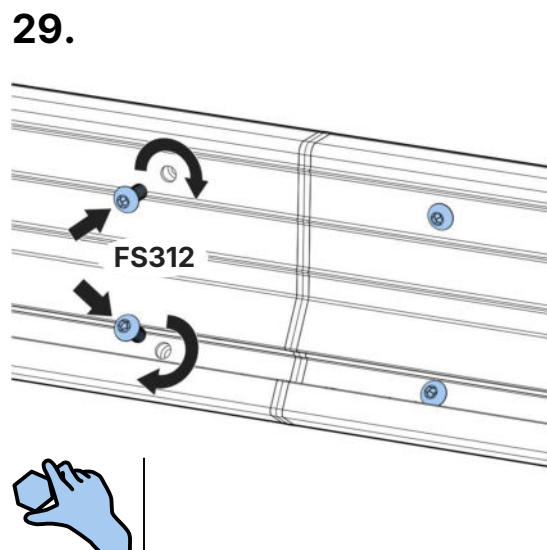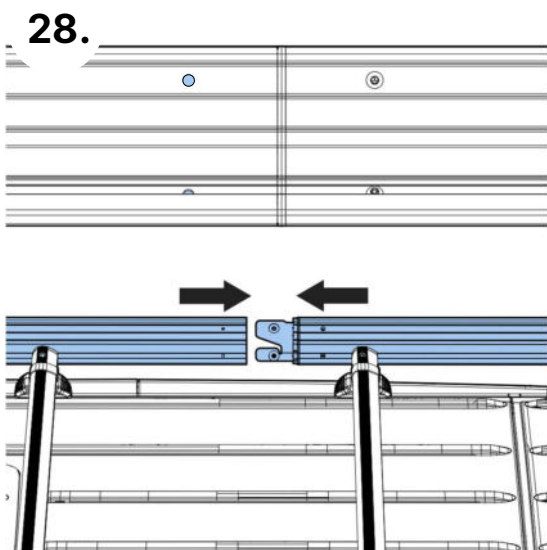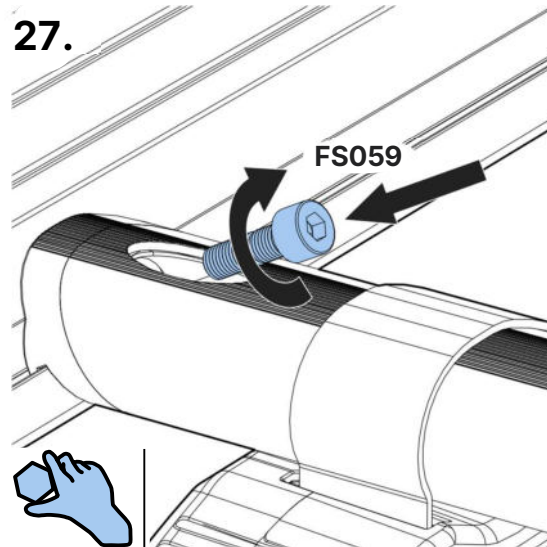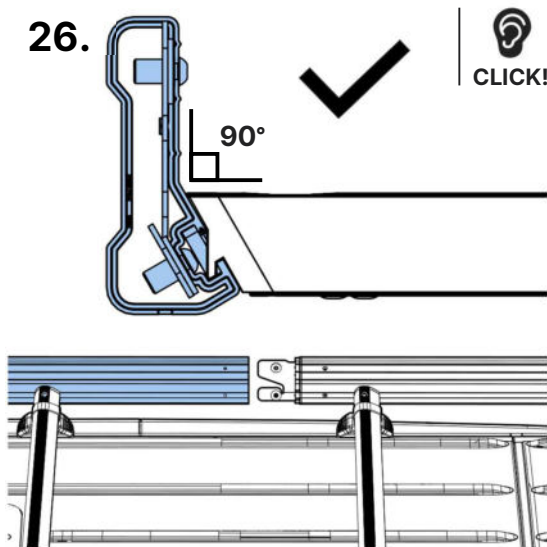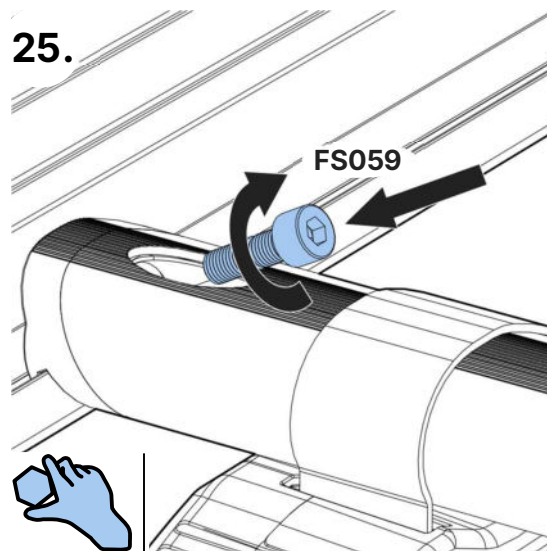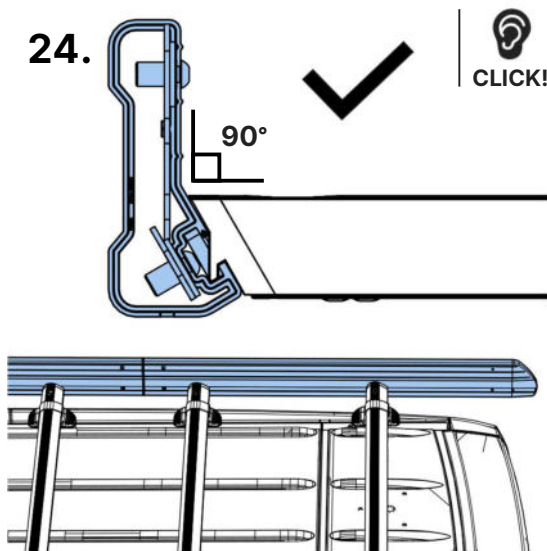


30.

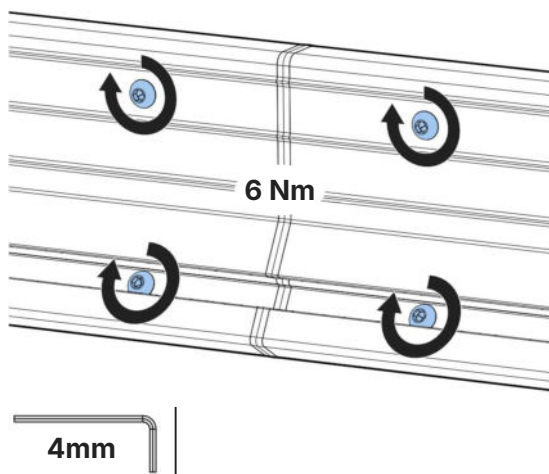


31.

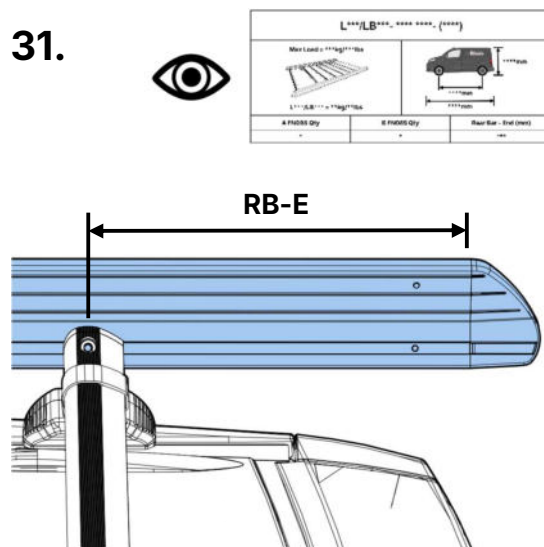


32.

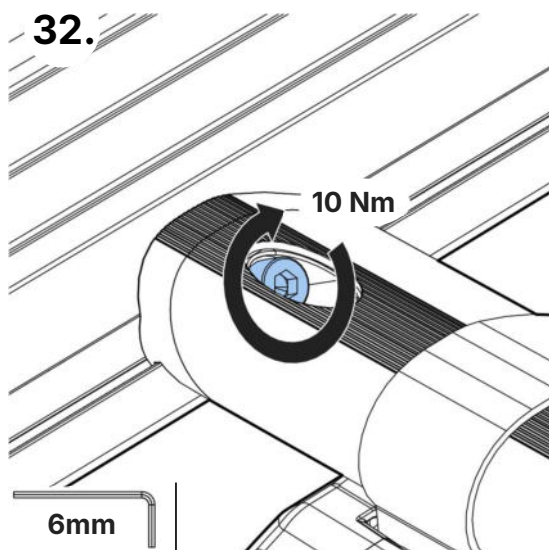


33.

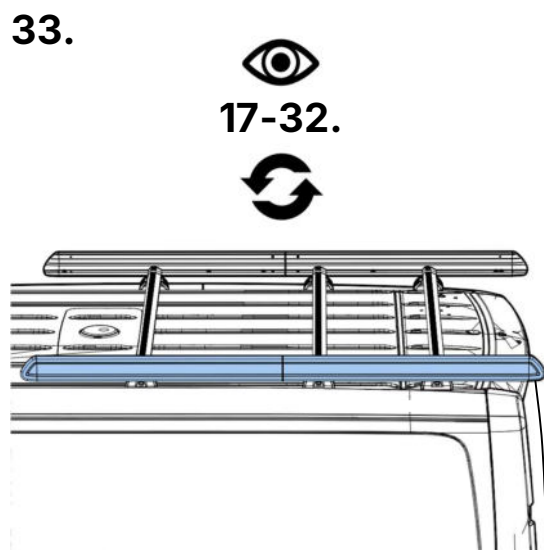


34.

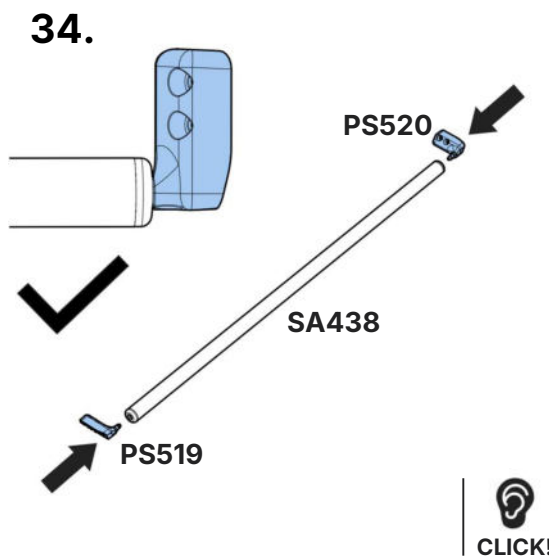


35.

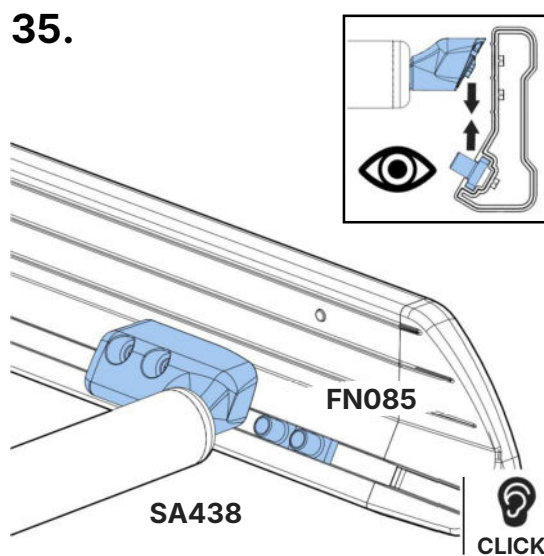


36.

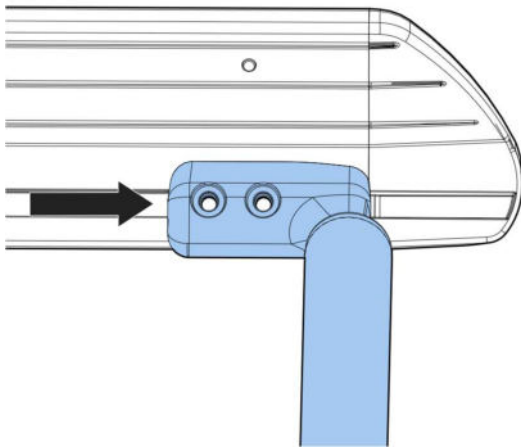


37.

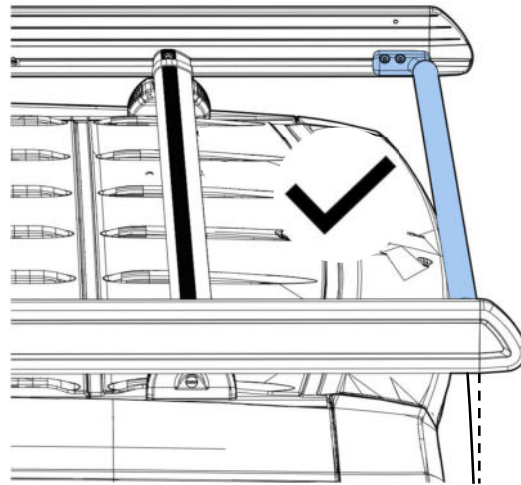


38.

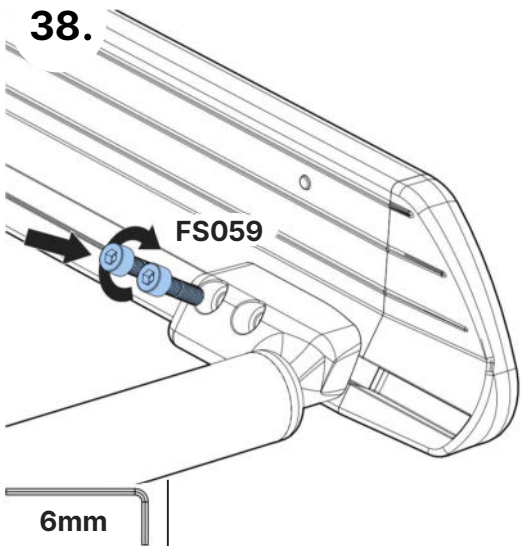

39.

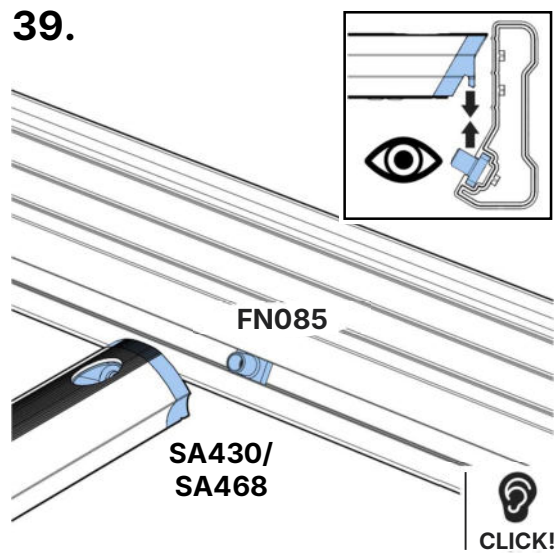

40.

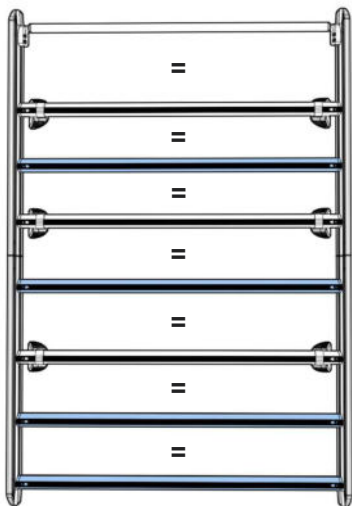

41.

