



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

KA3KE


KammEdge.

Instructions

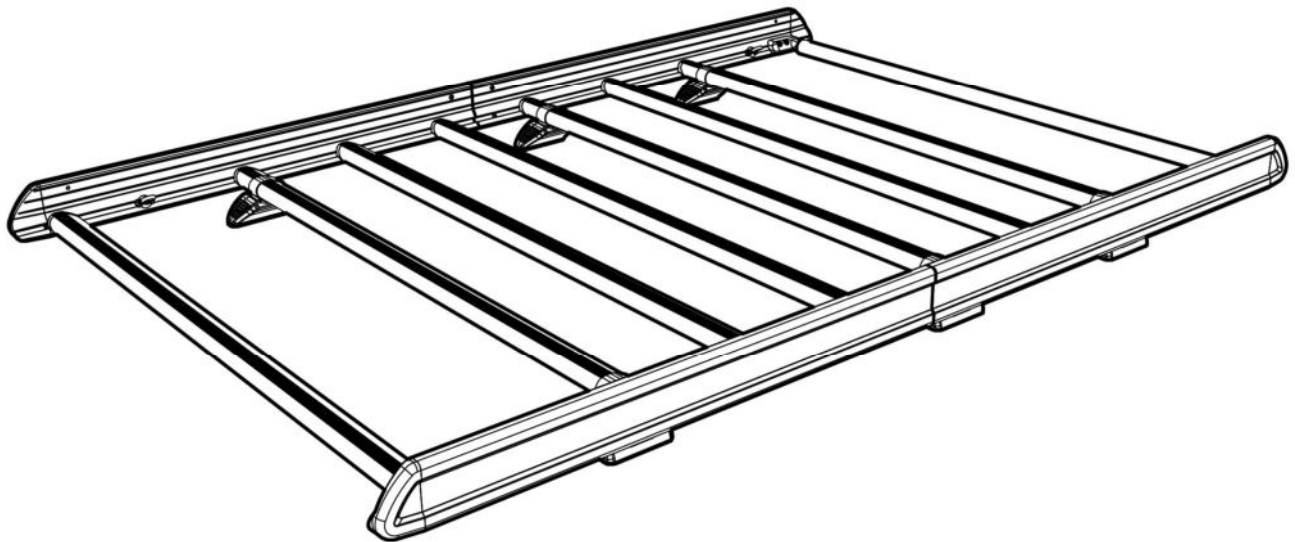


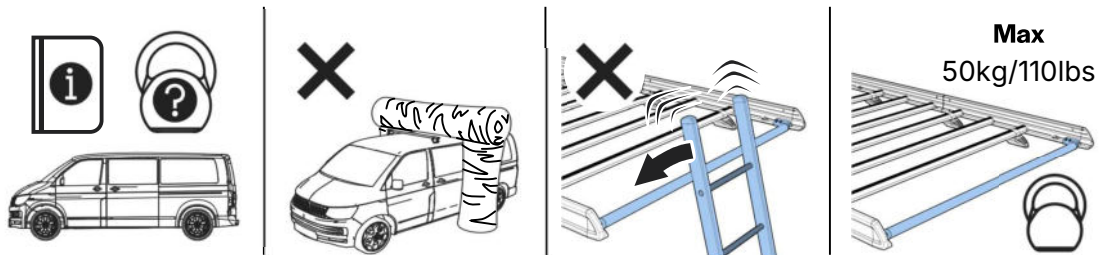

KammEdge.

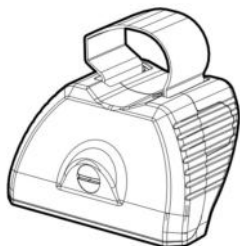


SA397U x 3

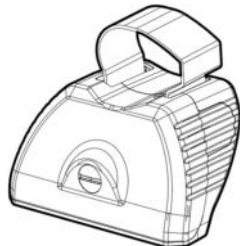


SA398U x 3




SA428/SA466 x 5

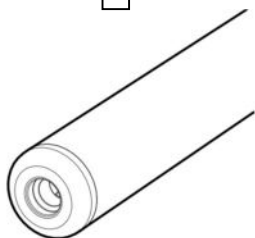


SA436 x 1

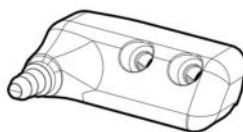

PS519 x 1

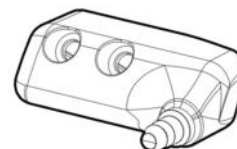

PS520 x 1

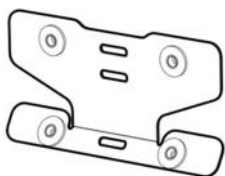


SA610 x 2




PS635 x 2



FS323
(M6 x 16) x 8

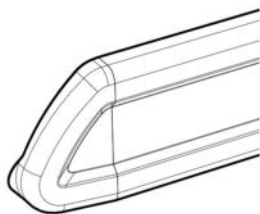

LSF (L) x 2

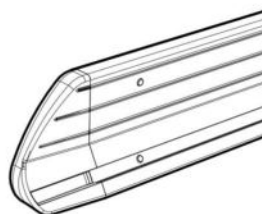


LSF (R) x 2




C04 x 6
optional upgrade

Fitting Kit




PS023 x 6



PS176 x 4




FS059
(M8 x 25) x 14

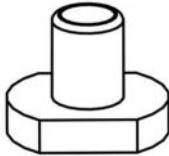


FN085 x 14




FW009 (M8) x 6

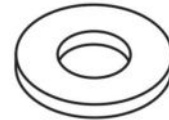

FW002 (M8) x 6



FS081
(M8 x 50) x 4




FS062
(M8 x 25) x 2



FT05 x 1




FT01 x 1

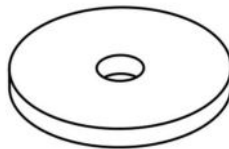


PS260 (M8) x 6



1.

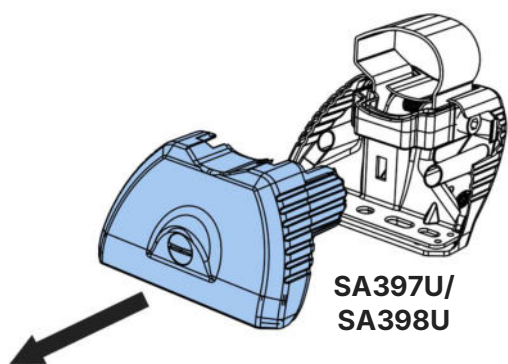

2.

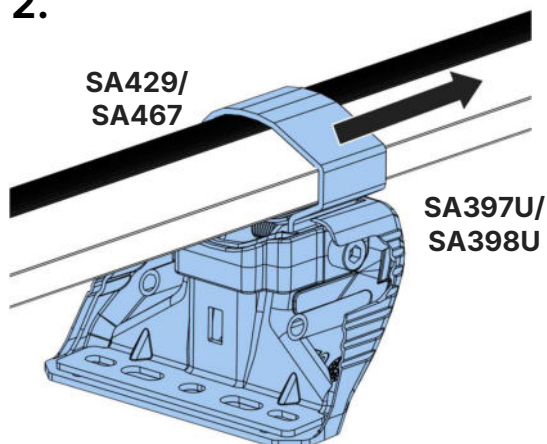

3.



SA397U
PS176




SA397U



SA397U
PS176

R

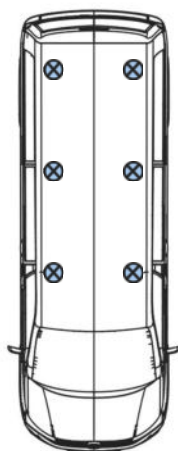

F

SA398U
PS176




SA398U




SA398U
PS176









4.

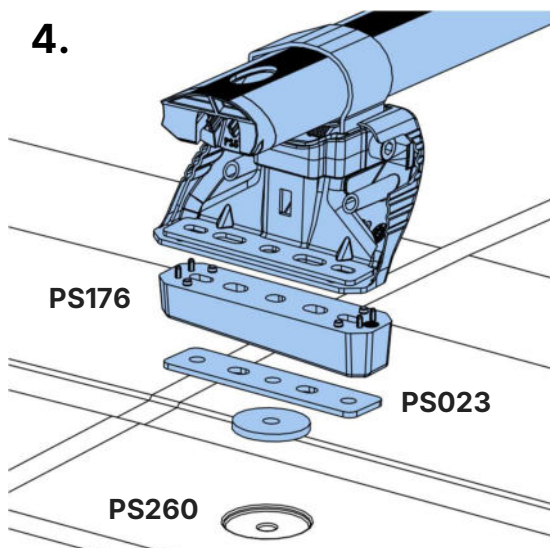


5.


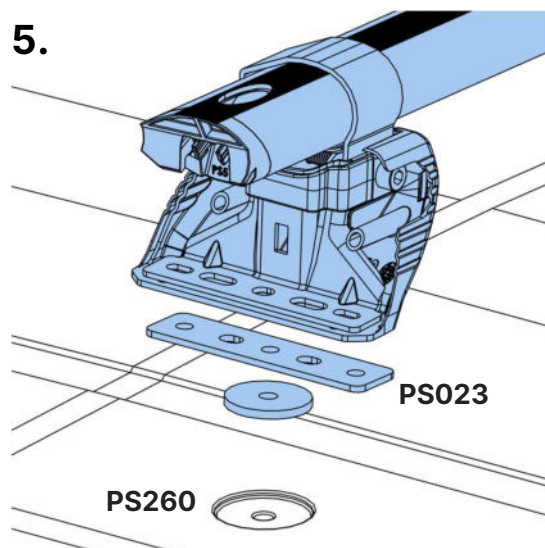


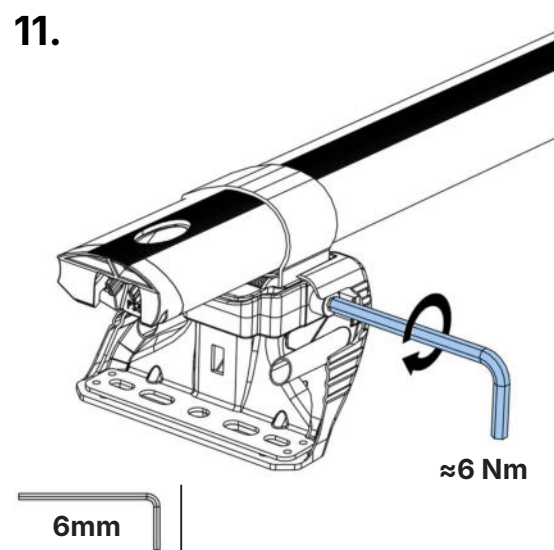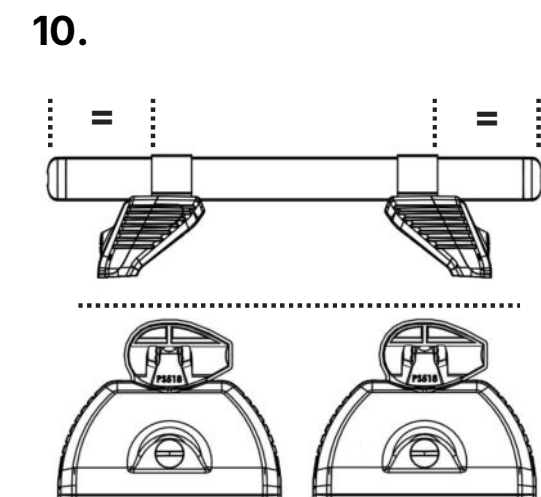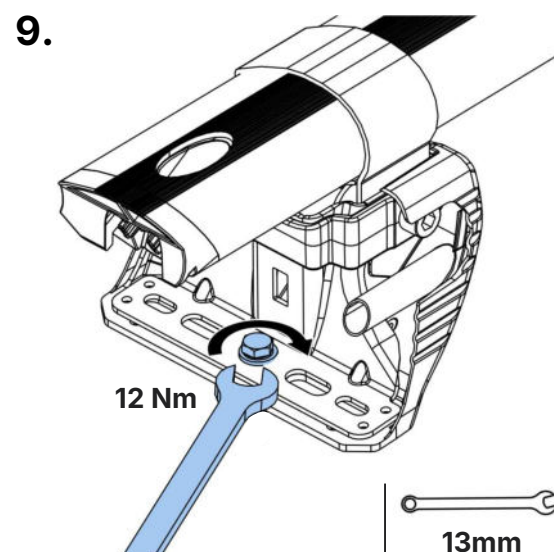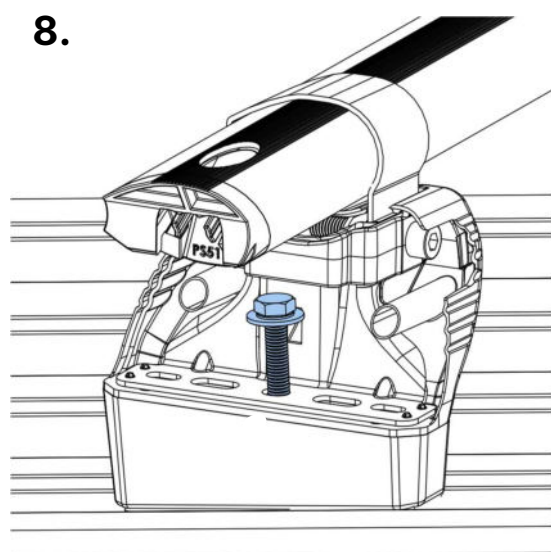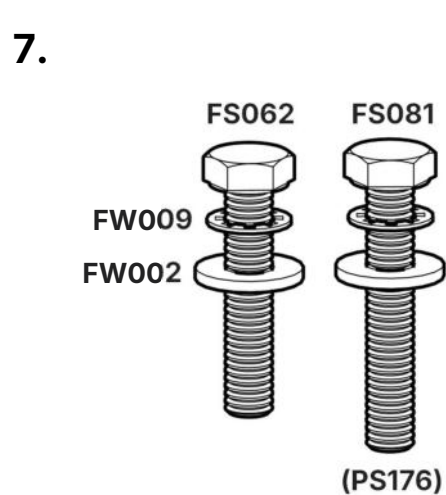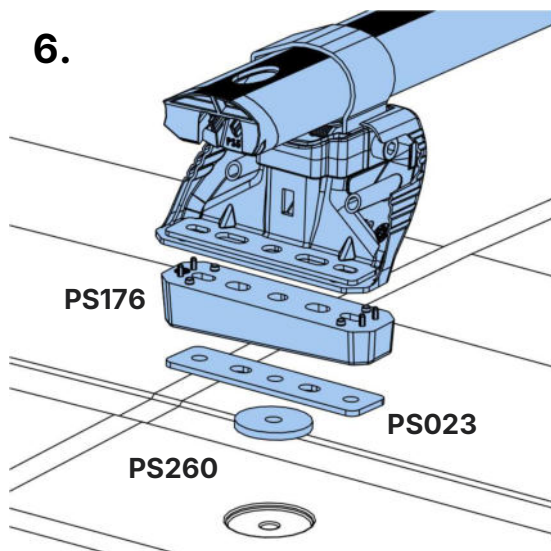

12.

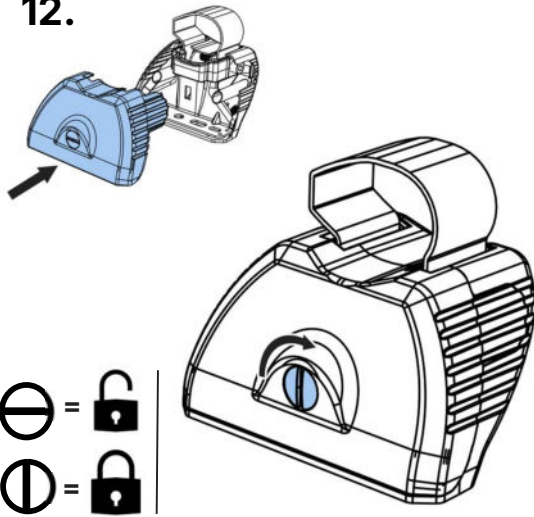

13.

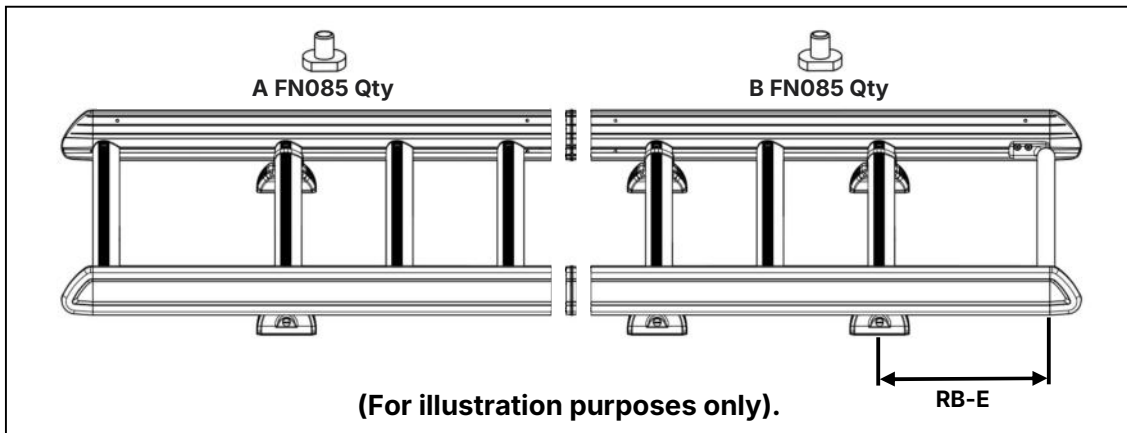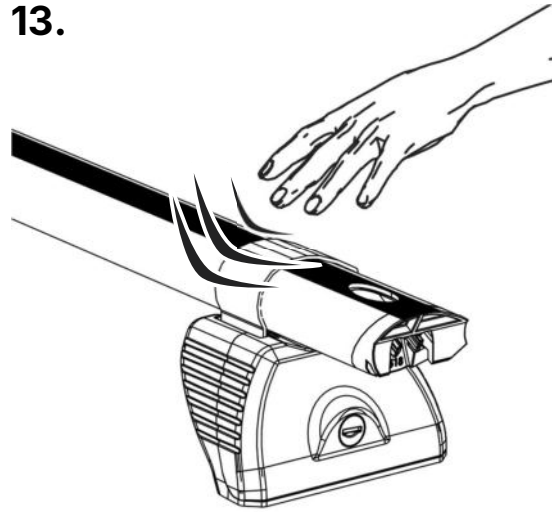


L608/LB608- Caddy 2010-2015, L1-H1 (Twin)

Max Load = 150kg/330lbs



L608/LB608 = 19kg/42lbs

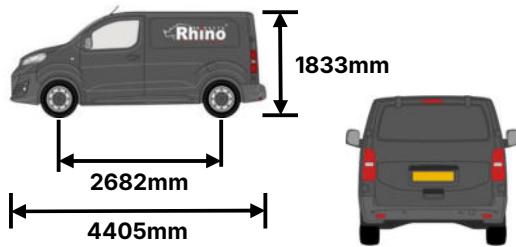


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	4	265

L609/LB609- Caddy 2010-2015, L1-H1 (Tailgate)

Max Load = 150kg/330lbs



L609/LB609 = 18kg/40lbs

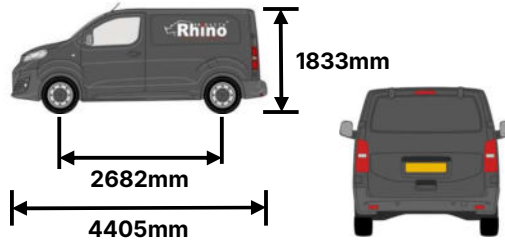


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	4	90

L609/LB609- Caddy 2015-2020, L1-H1 (Tailgate)







Max Load = 150kg/330lbs




L609/LB609 = 18kg/40lbs

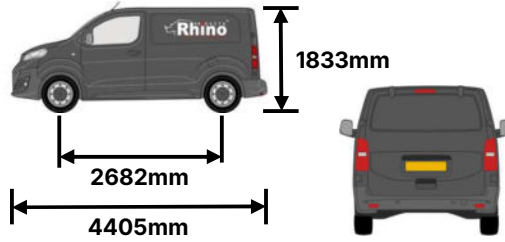


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	4	105

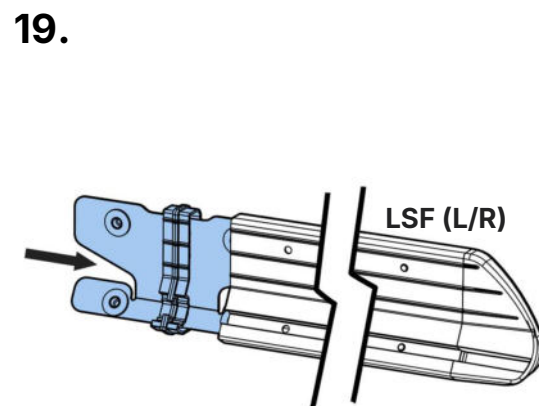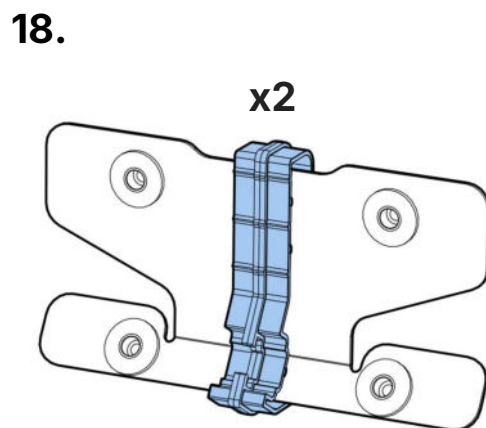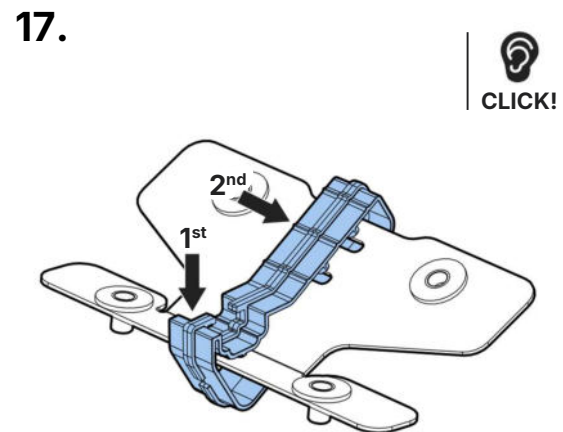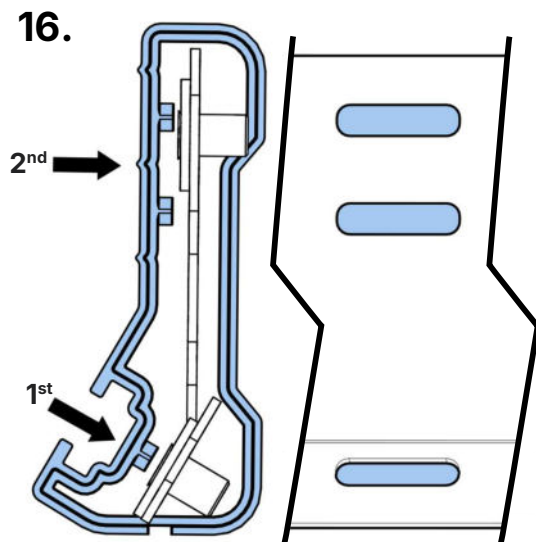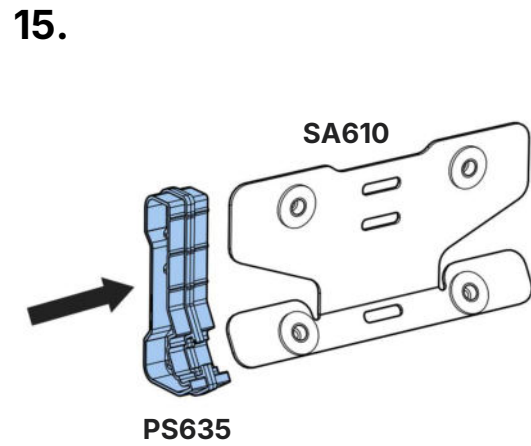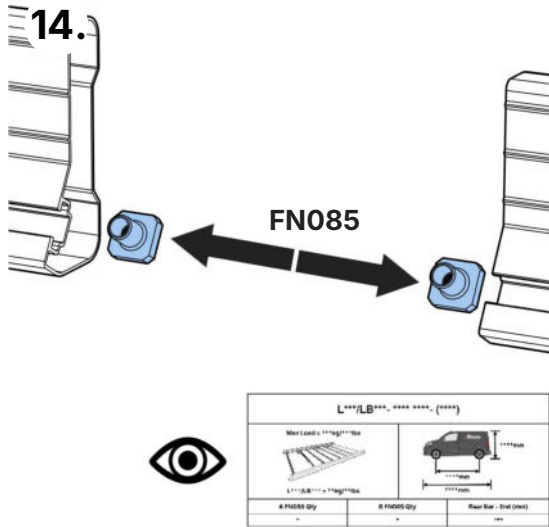


20.

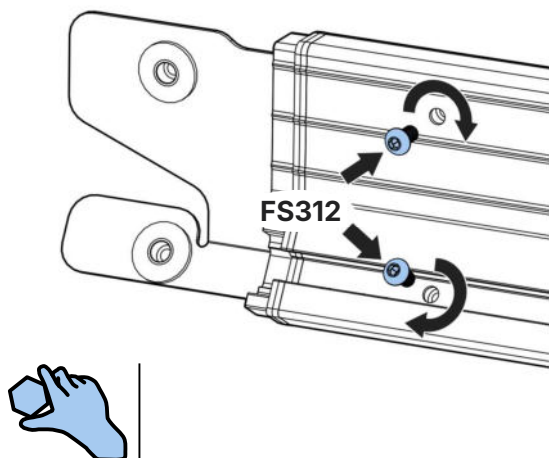


21.

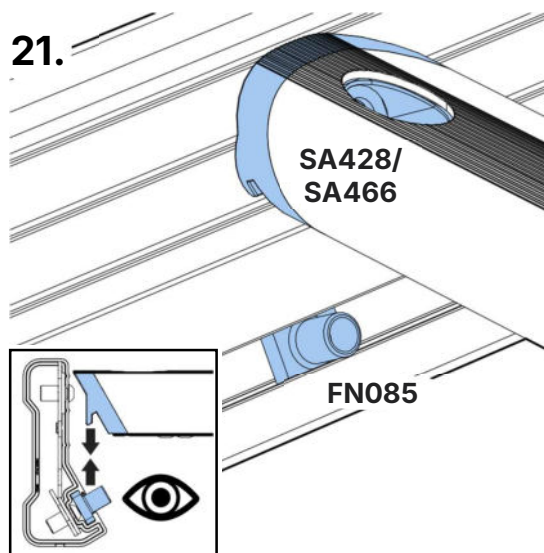


22.

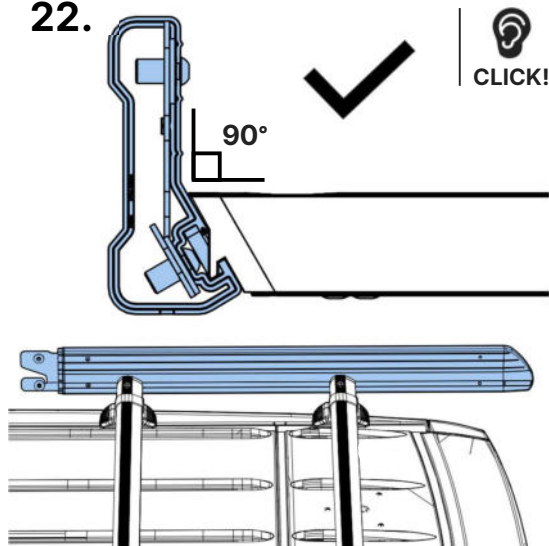

23.

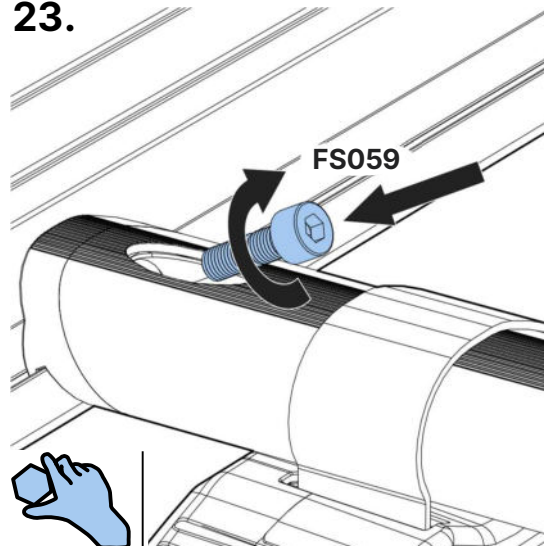

24.

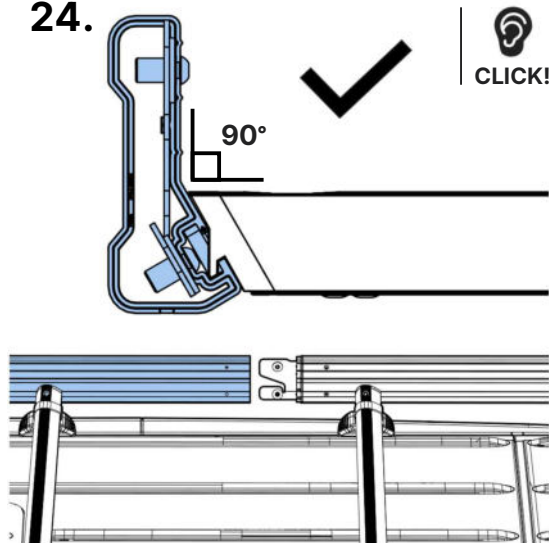

25.

