



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

P2KE


KammEdge.

Instructions

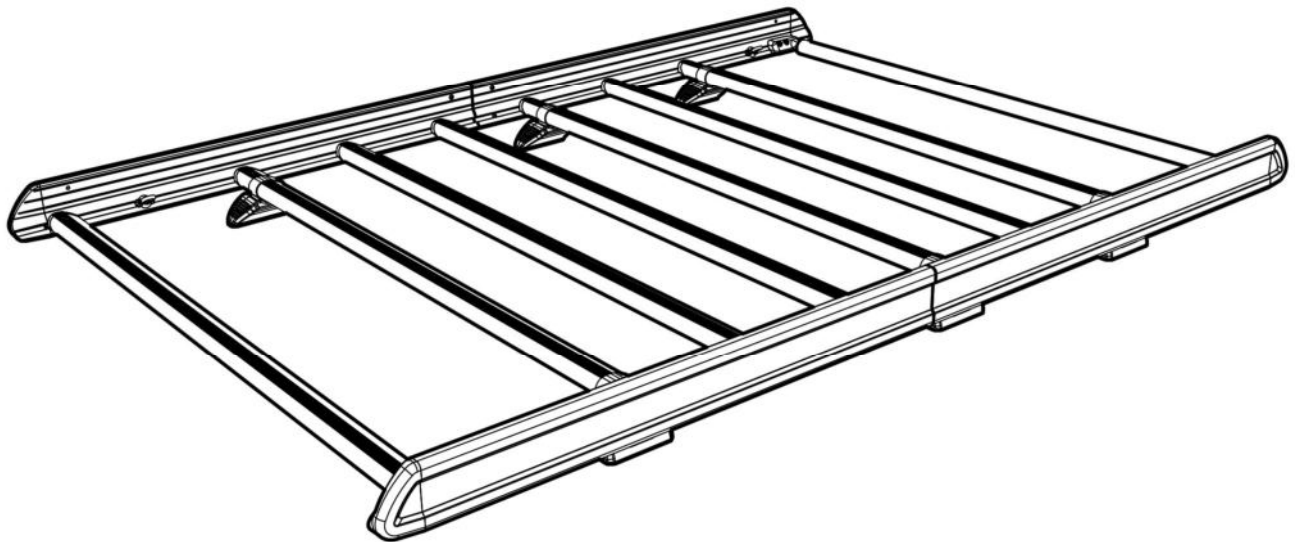


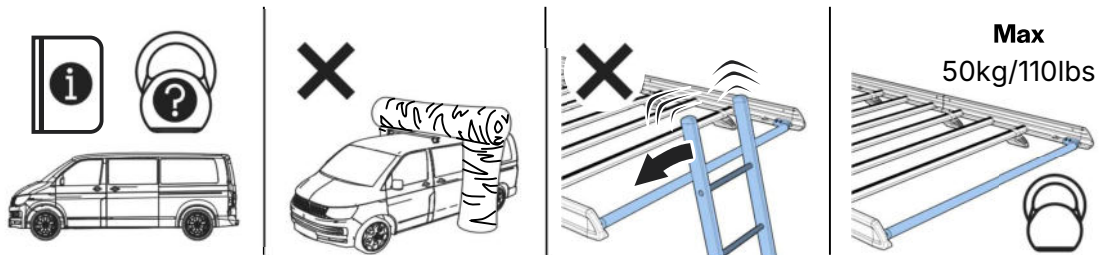

KammEdge.

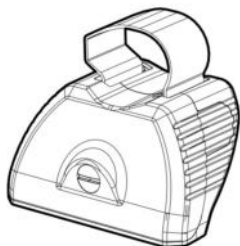


SA397U x 2

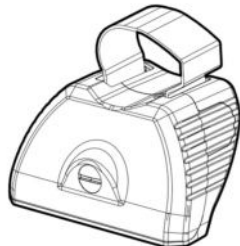


SA398U x 2




SA428/SA466 x 5

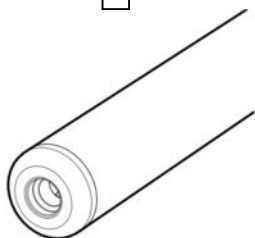


SA436 x 1

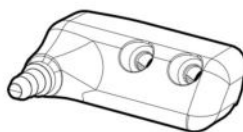

PS519 x 1

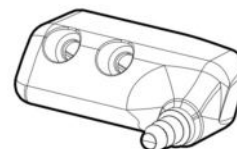

PS520 x 1

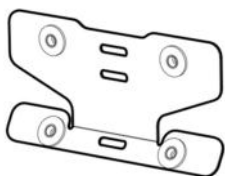


SA610 x 2




PS635 x 2



FS323
(M6 x 16) x 8

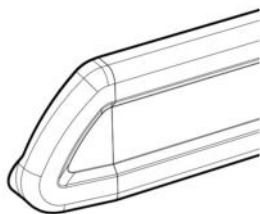

LSF (L) x 2

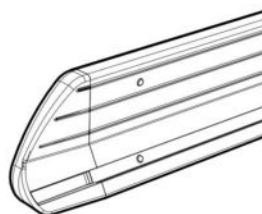


LSF (R) x 2




C04 x 4
optional upgrade


Fitting Kit




PS023 x 4



PS176 x 2




PS178 x 2

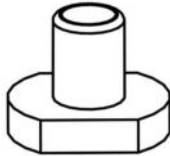

FN085 x 14



FW009 (M8) x 4

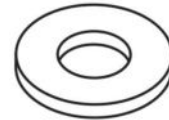

FW002 (M8) x 4



**FS081
(M8 x 50) x 2**



**FS061
(M8 x 35) x 2**




**FS059
(M8 x 25) x 14**



FT01 x 1




FT05 x 1

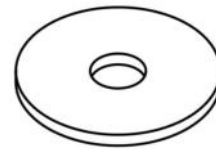


PS153 (M8) x 4



1.

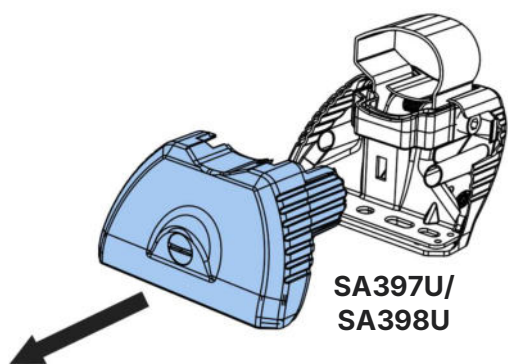

2.

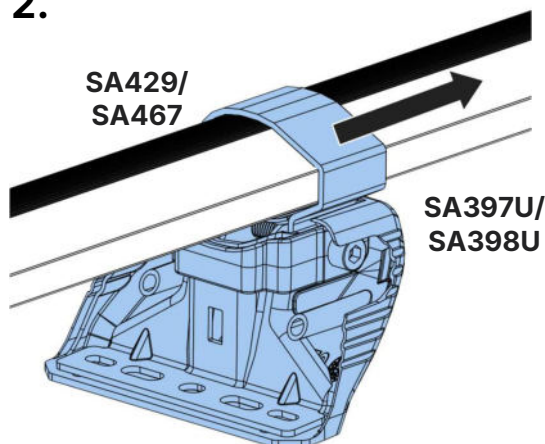


3.



SA397U
PS178

R

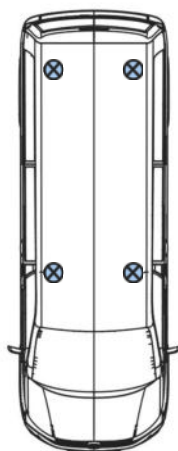

SA398U
PS178



SA397U
PS176




SA398U
PS176




F


4.

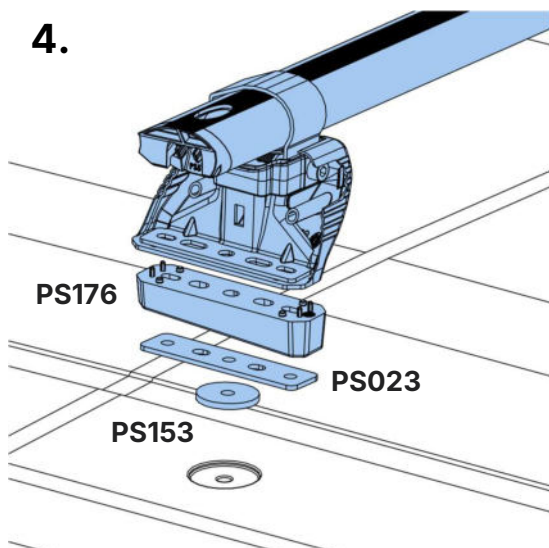


5.

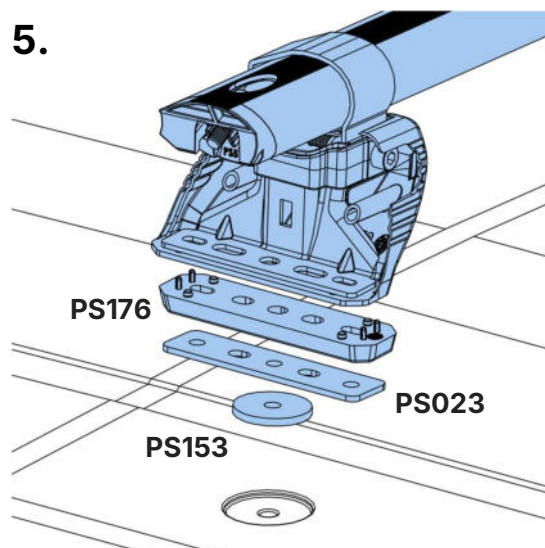


6.

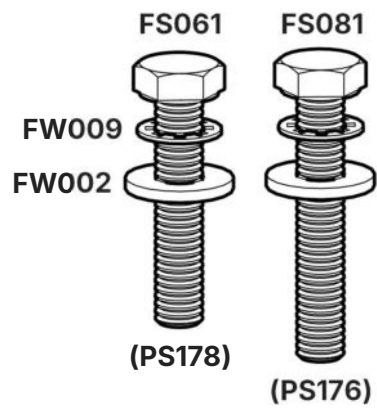


7.

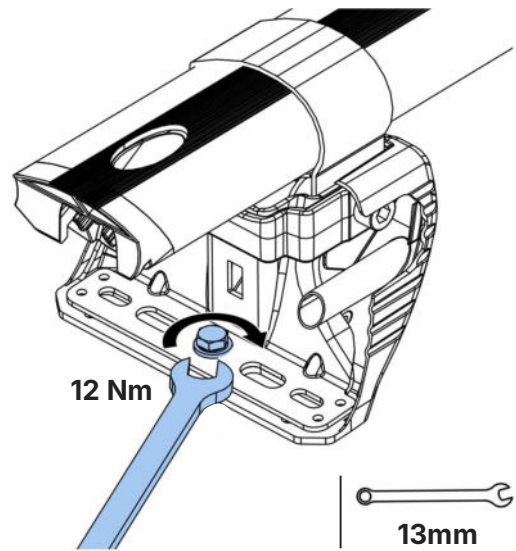


8.

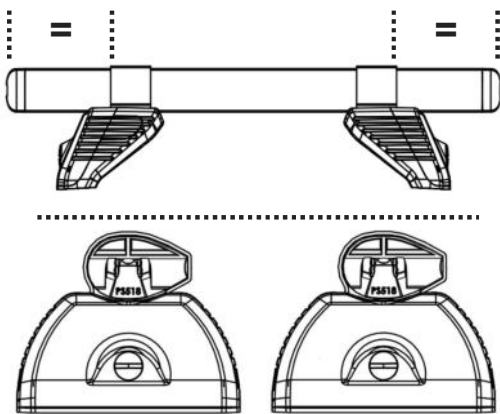


9.

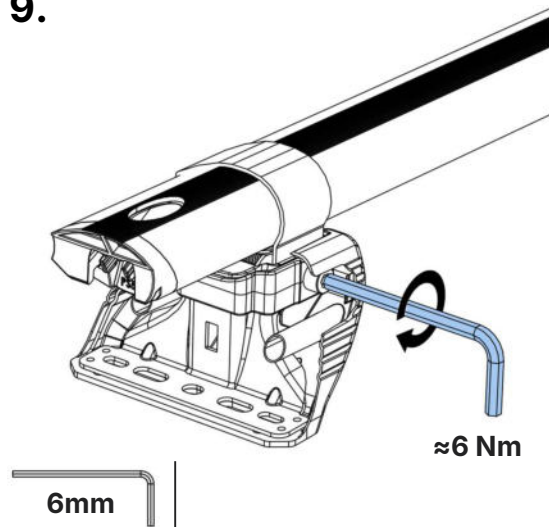


10.

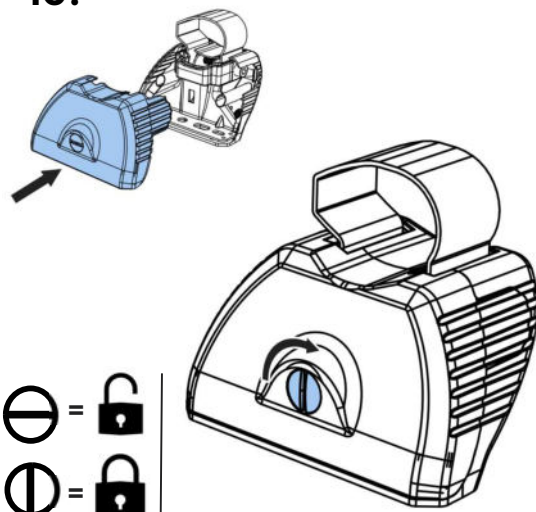


11.

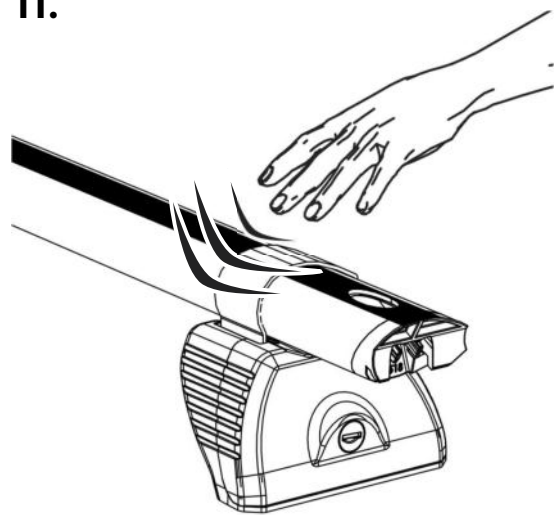







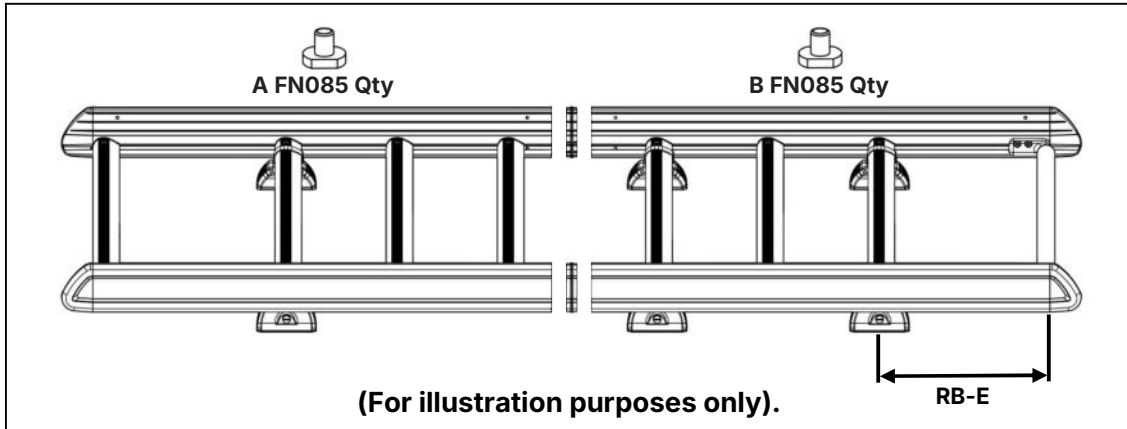


L575/LB575- Kangoo 2008-2021, Citan 2012-2021 L1-H1 (Twin)

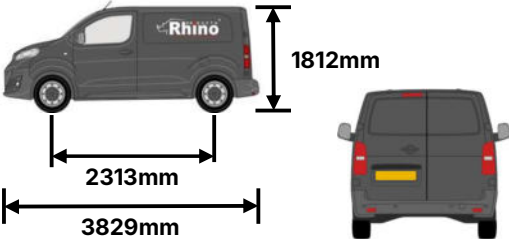
Max Load = 150kg/330lbs  L575/LB575 = 19kg/42lbs					
A FN085 Qty		B FN085 Qty		Rear Bar – End (mm)	
3		4		220	

L575LB575- Kangoo 2008-2021, Citan 2012-2021 L2-H1 (Twin)

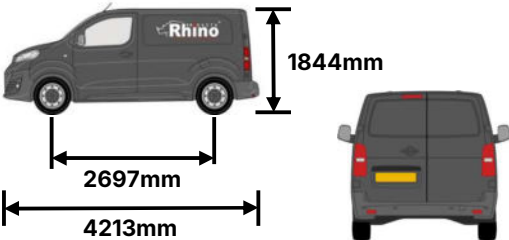
Max Load = 150kg/330lbs  L575/LB575 = 19kg/42lbs					
A FN085 Qty		B FN085 Qty		Rear Bar – End (mm)	
3		4		237	

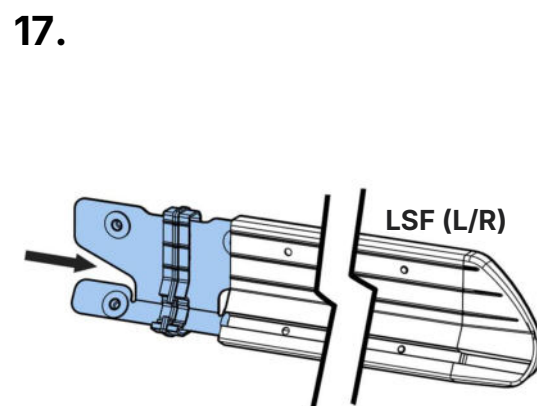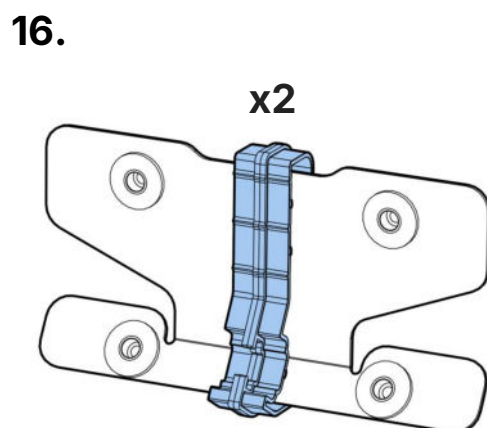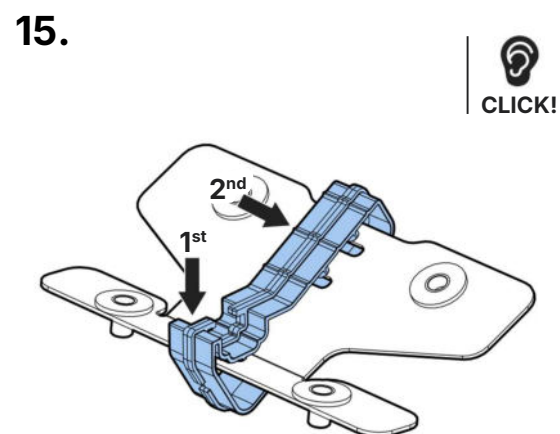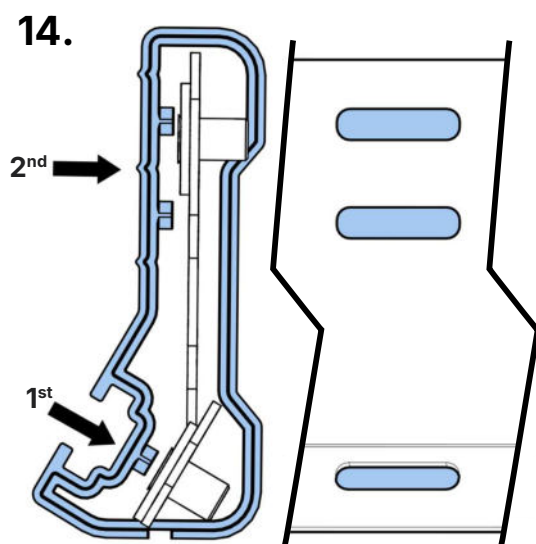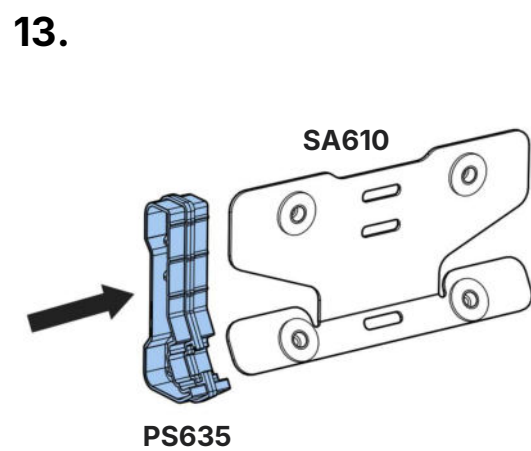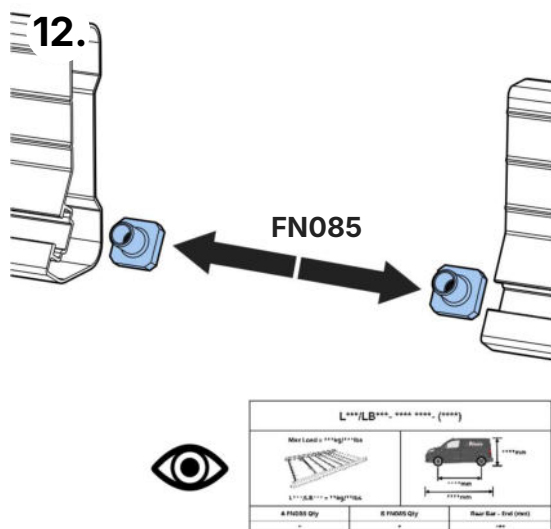


18.

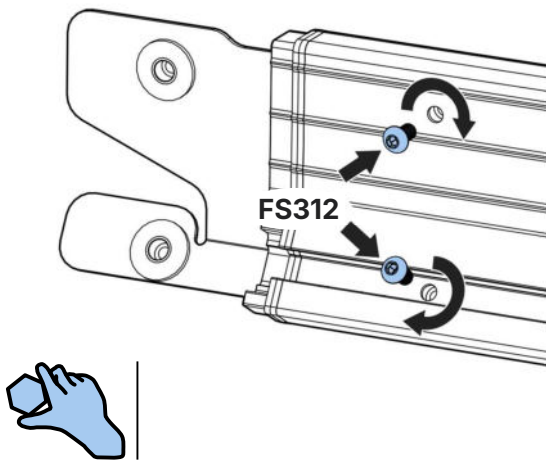


19.

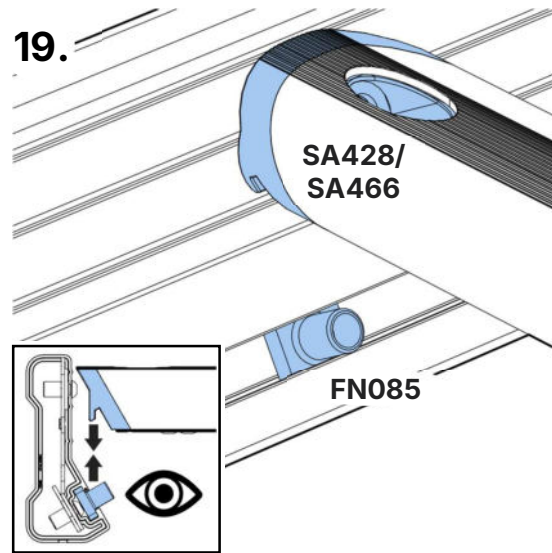


20.

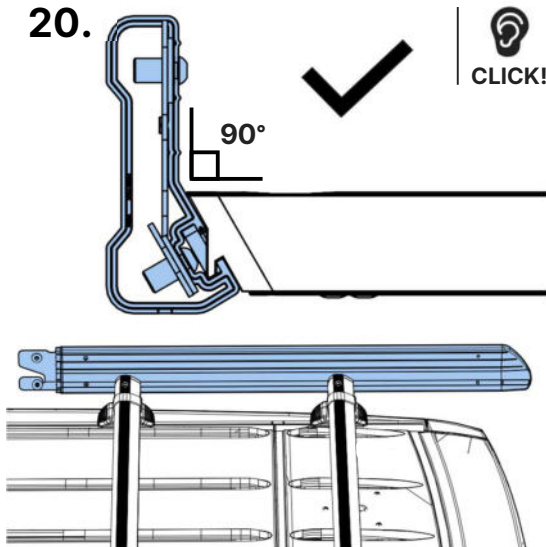

21.

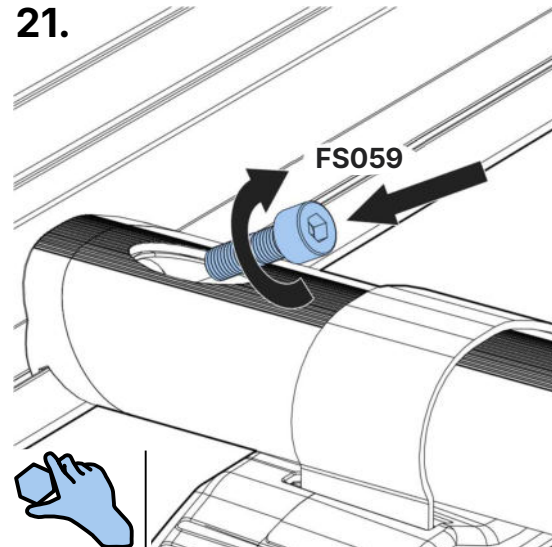

22.

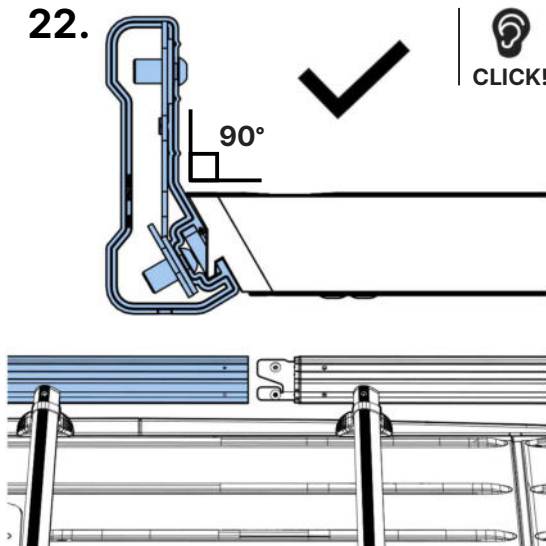

23.

