



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

PB3KE


KammEdge.

Instructions

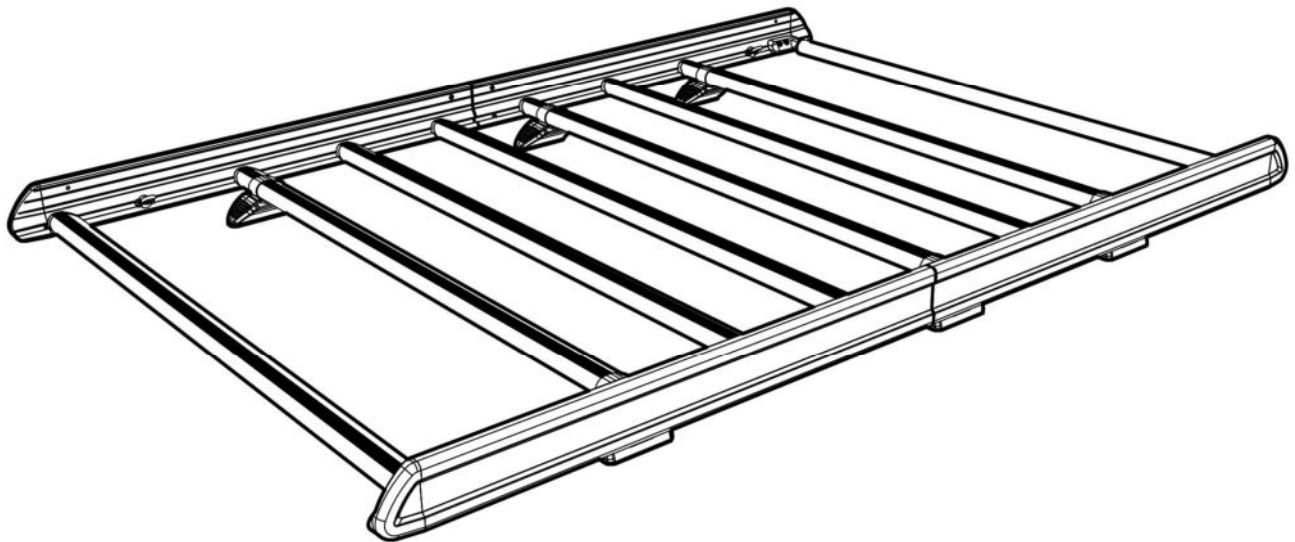


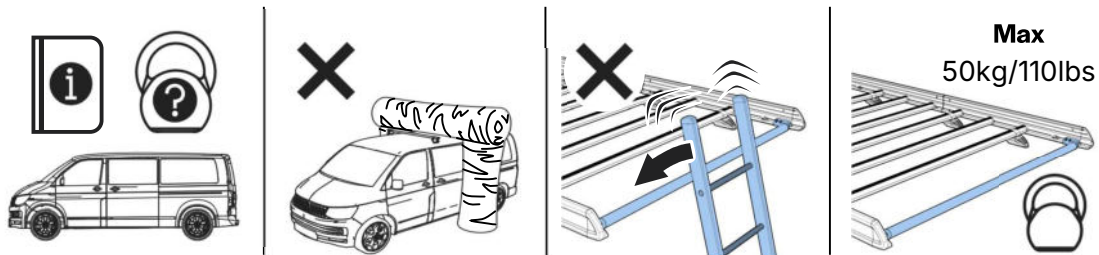

KammEdge.

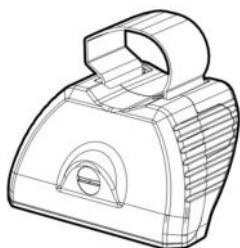


SA397U x 3

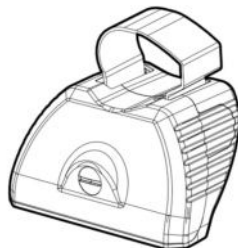


SA398U x 3




SA428/SA466 x 6

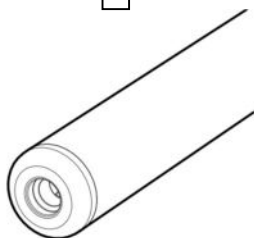


SA436 x 1

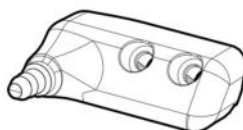

PS519 x 1

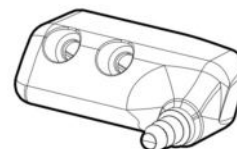

PS520 x 1

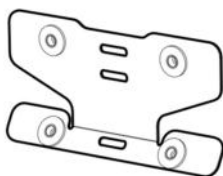


SA610 x 2




PS635 x 2



FS323
(M6 x 16) x 8

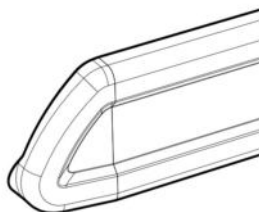

LSF (L) x 2

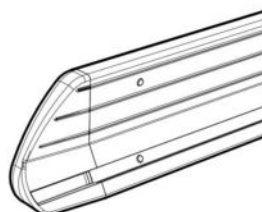


LSF (R) x 2




C04 x 6
optional upgrade

Fitting Kit




PS023 x 6



PS176 x 4




FS059
(M8 x 25) x 16

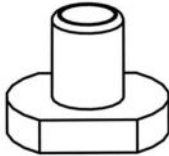


FN085 x 16



FW009 (M8) x 6

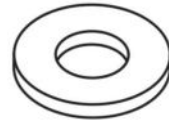

FW002 (M8) x 6



FS081
(M8 x 50) x 4




FB014
(M8 x 30) x 2



FT05 x 1




FT01 x 1

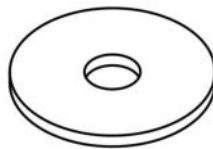


PS208 (M8) x 6



1.

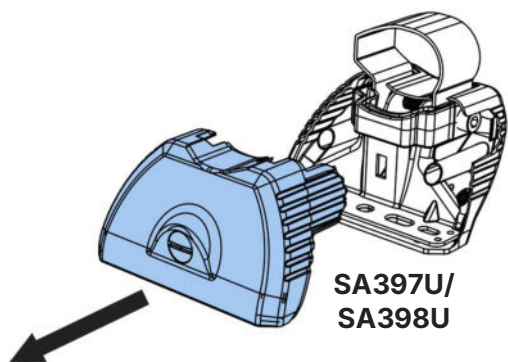

2.

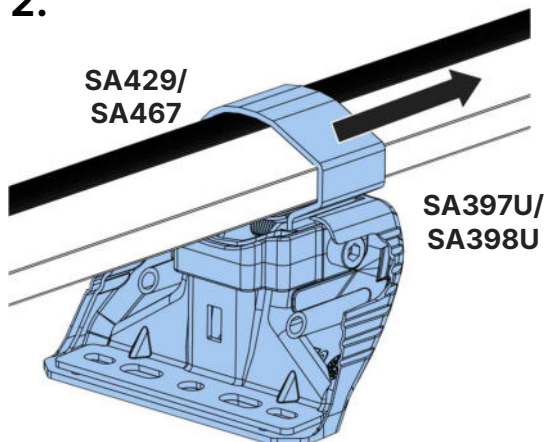

3.



SA397U
PS176




SA397U



SA397U
PS176

R

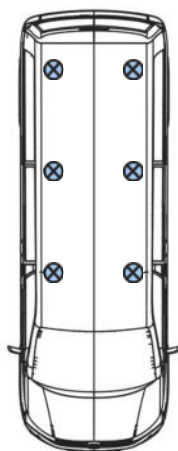

SA398U
PS176




SA398U




SA398U
PS176







F

4.

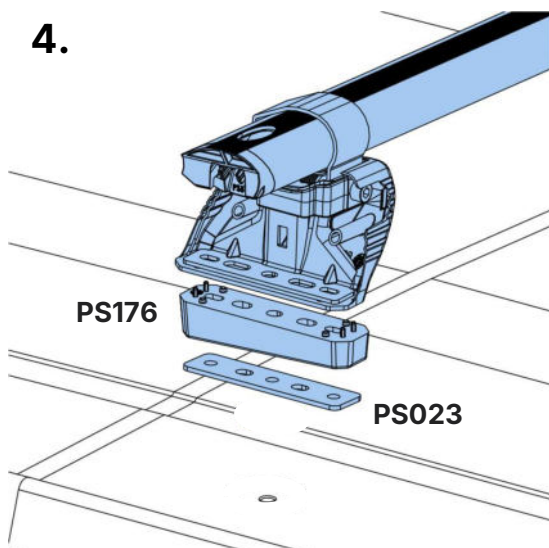


5.


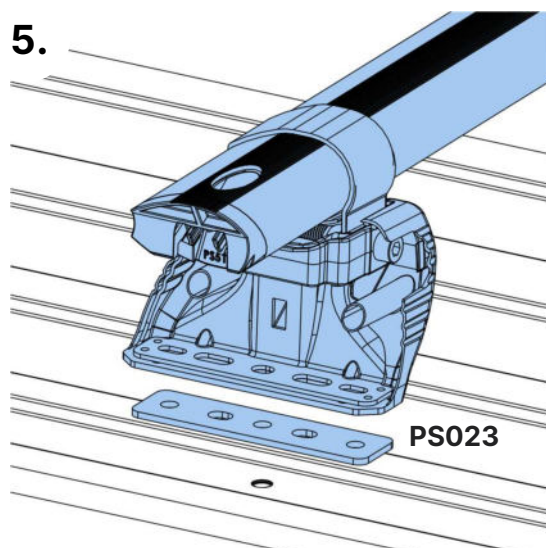


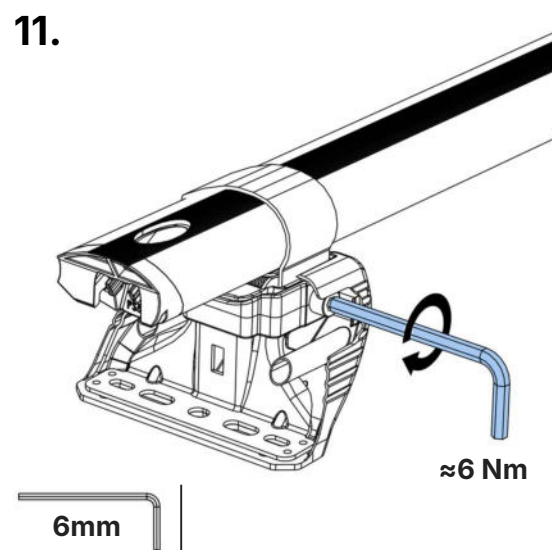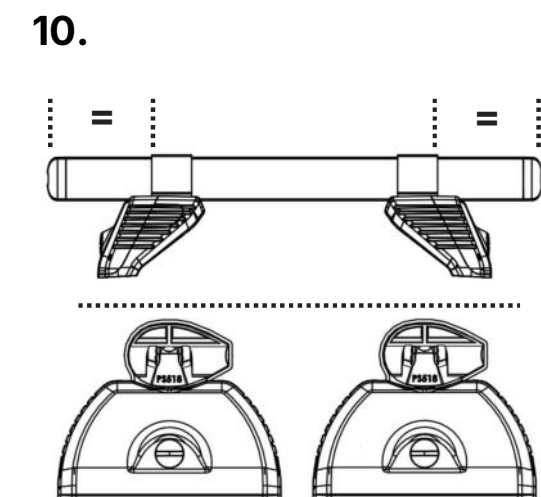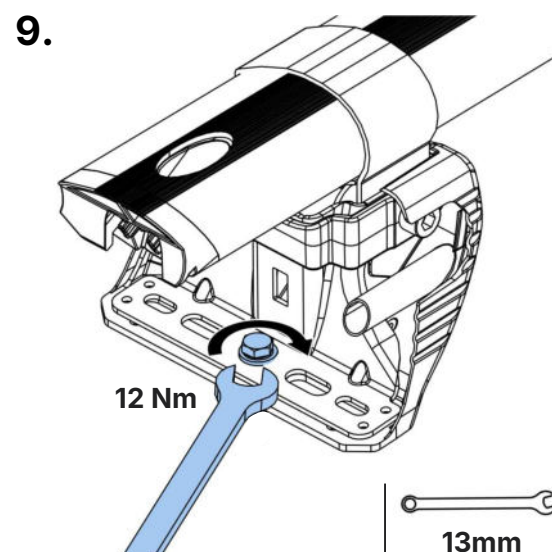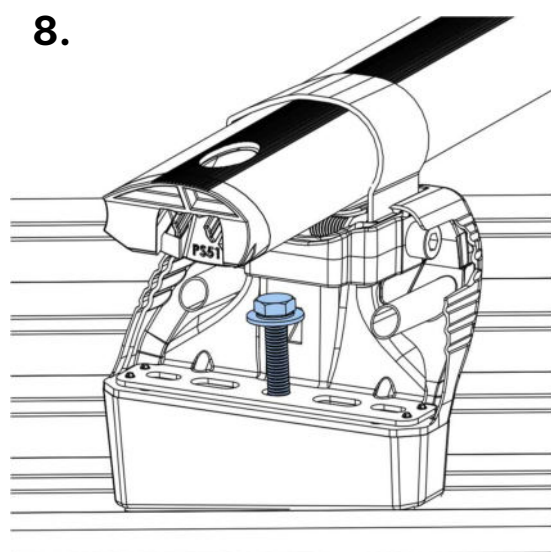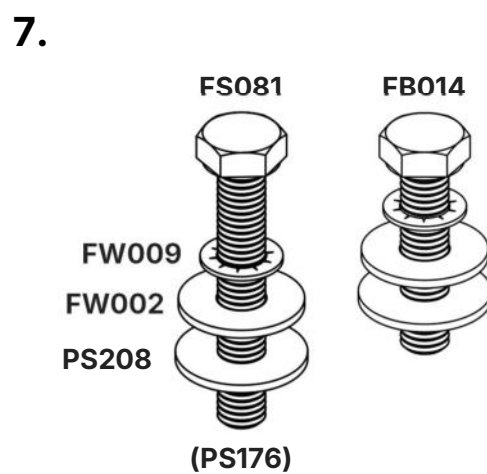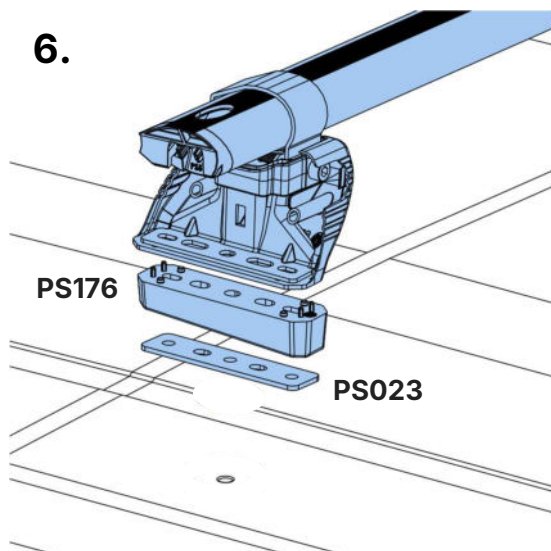

12.

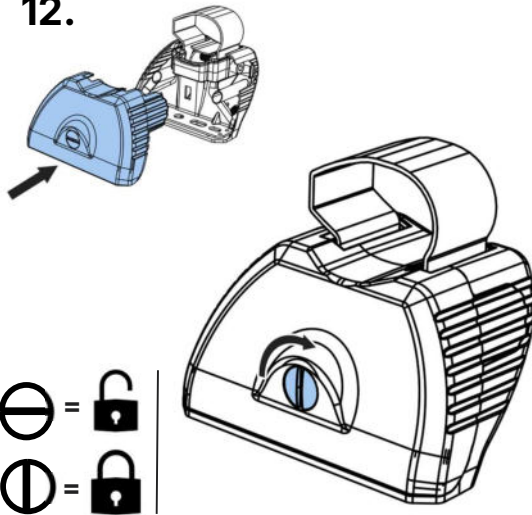

13.

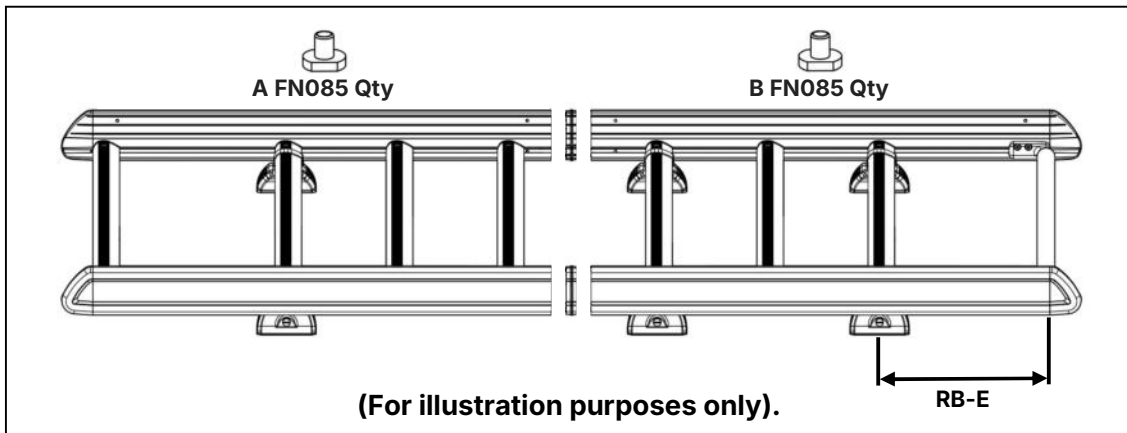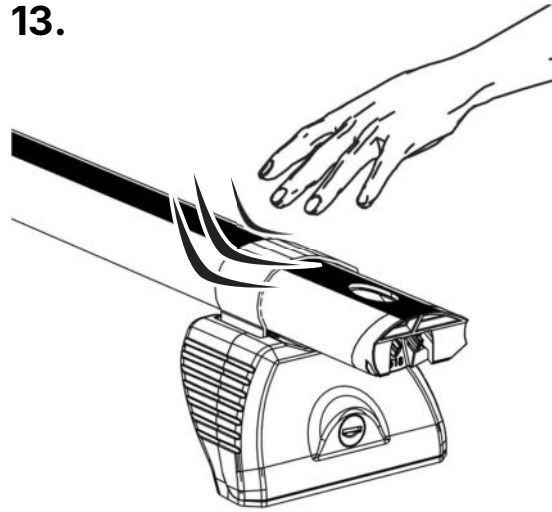


L687/LB687- Kangoo 3/Citan/Townstar 2021-, L1-H1 (Twin)

Max Load = 150kg/330lbs



L687/LB687 = 20kg/45lbs

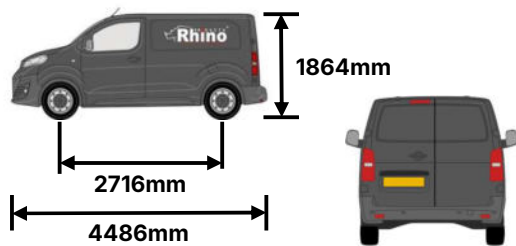


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	5	140

L690/LB690- Kangoo 3/Citan/Townstar 2021-, L2-H1 (Twin)







Max Load = 150kg/330lbs




L690/LB690 = 22kg/48lbs

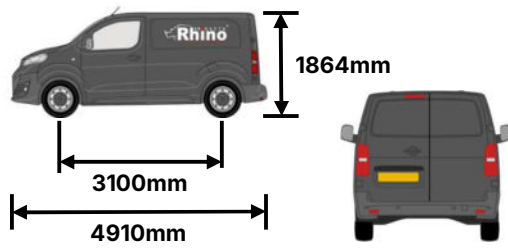


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	5	140

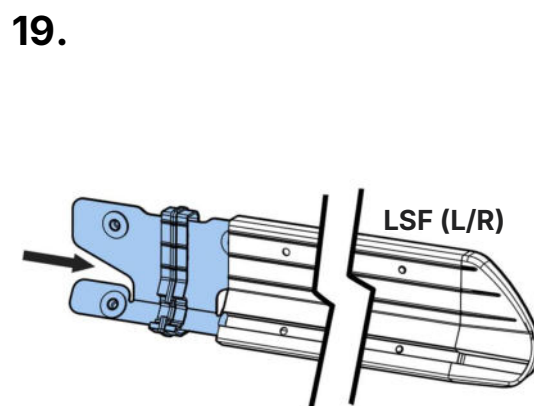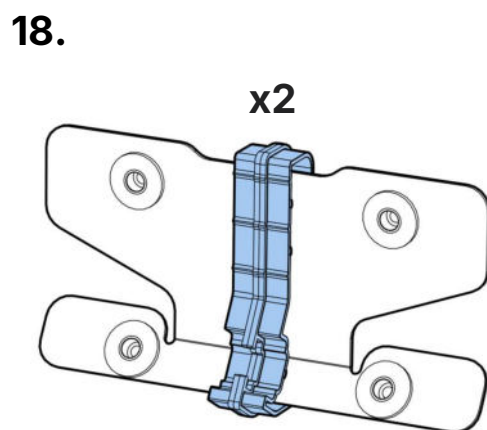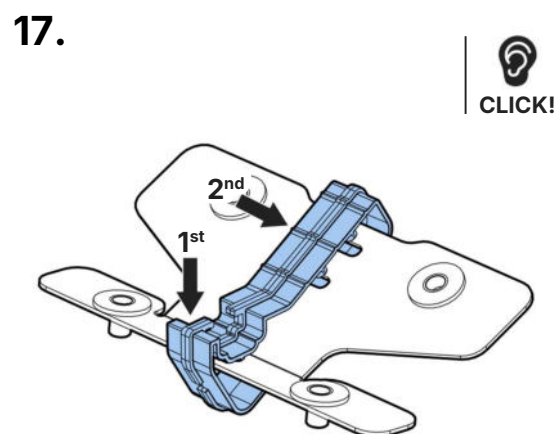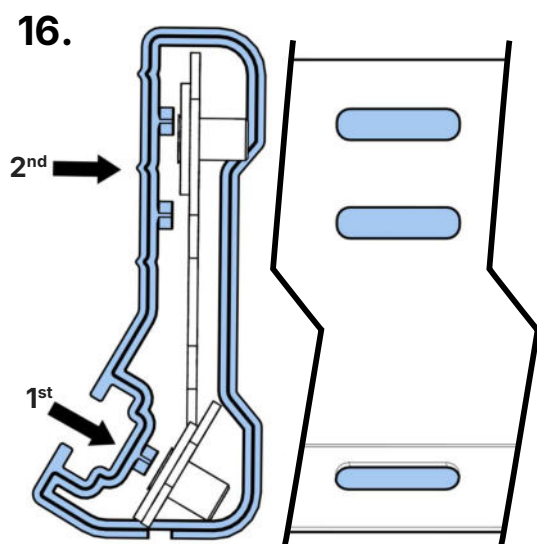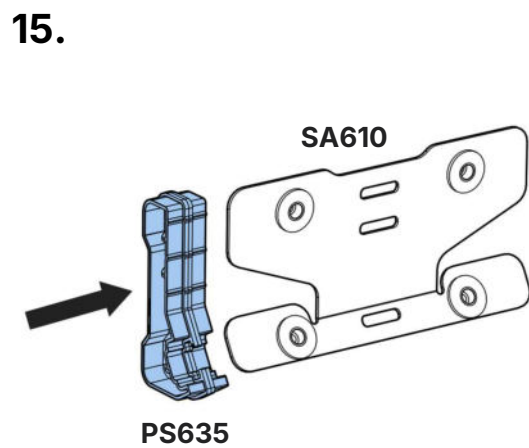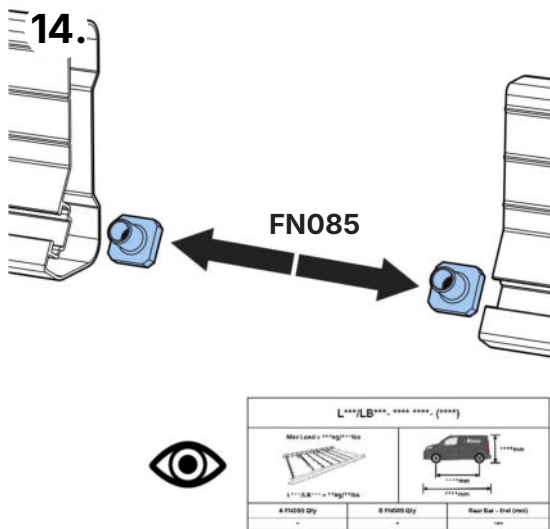


20.

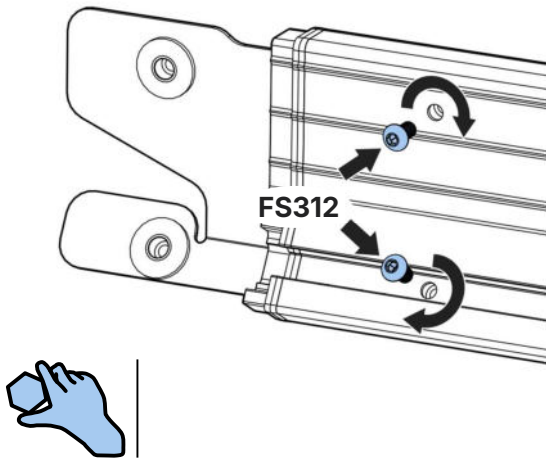


21.

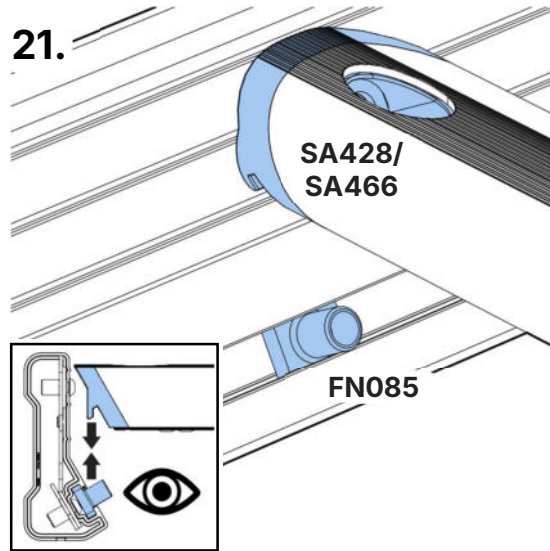


22.

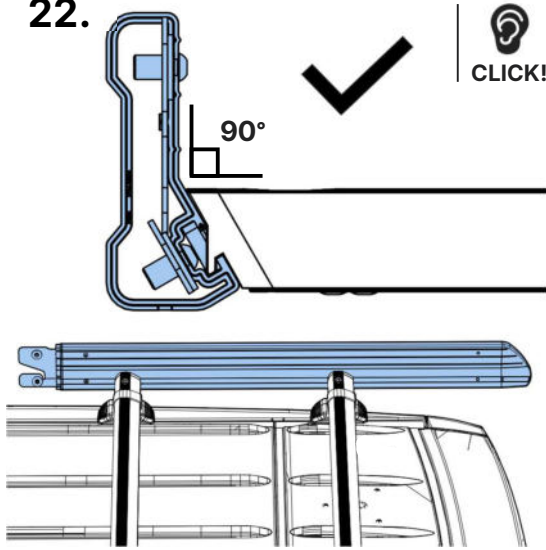

23.

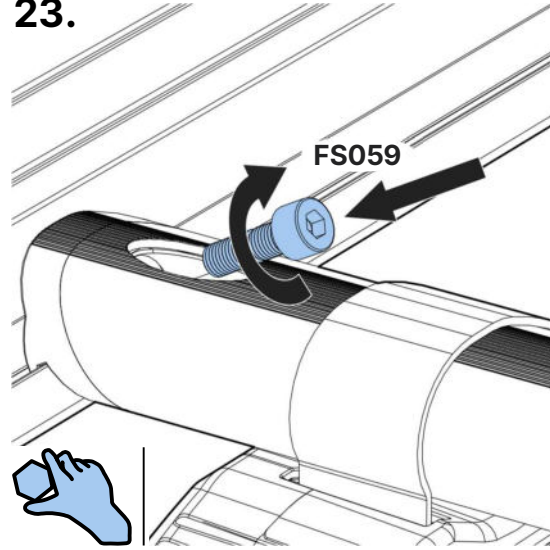

24.

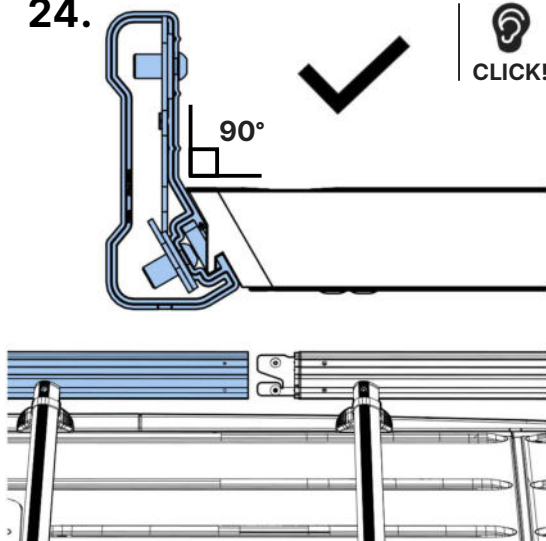

25.

