



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

WD3KE


KammEdge.

Instructions

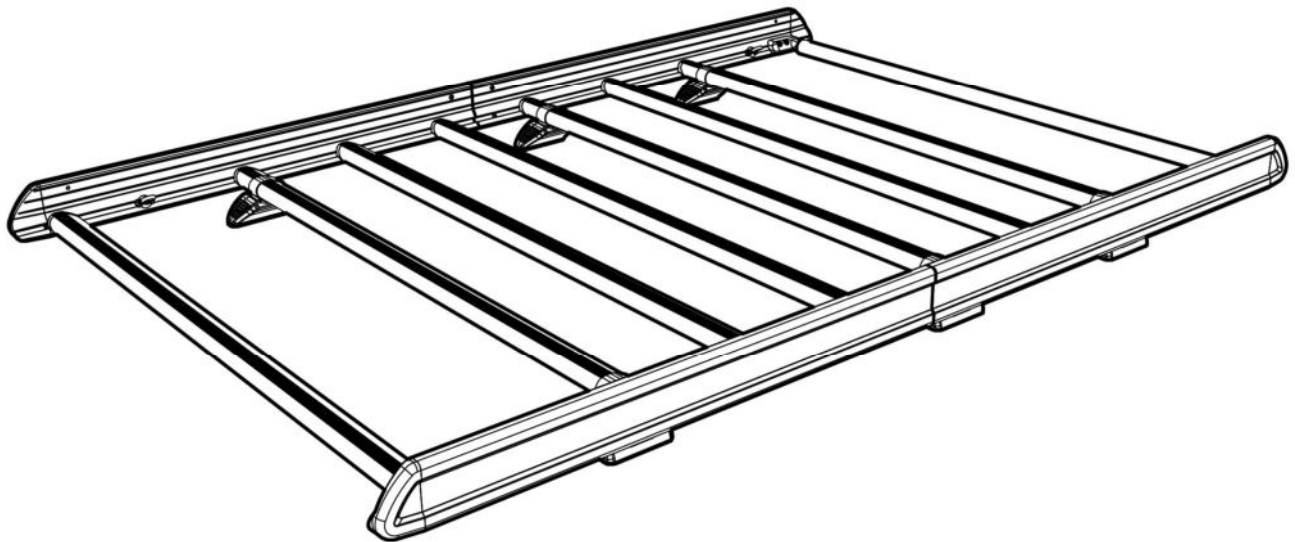


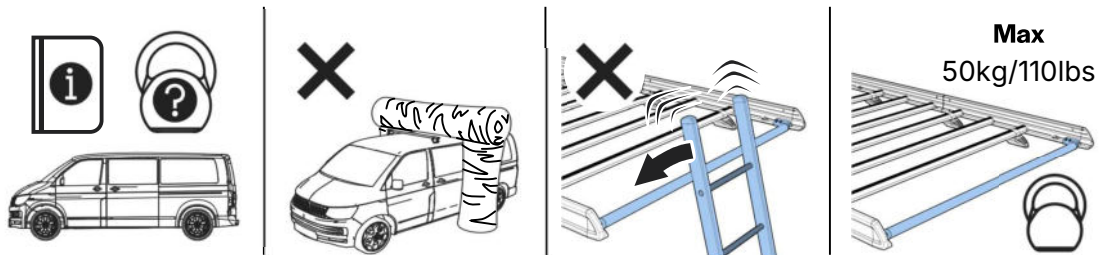

KammEdge.

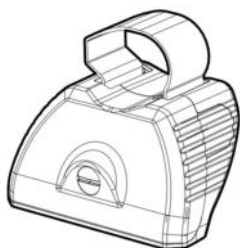


SA397U x 3

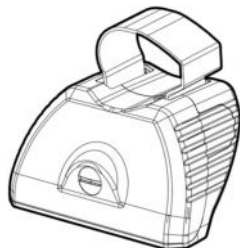


SA398U x 3




SA428/SA466 x 6

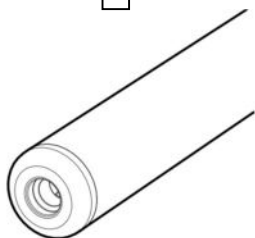


SA436 x 1

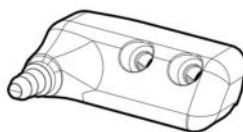

PS519 x 1

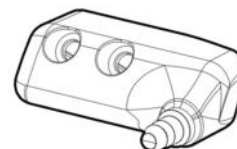

PS520 x 1

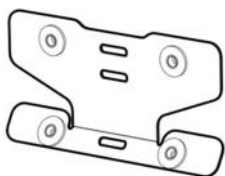


SA610 x 2




PS635 x 2



FS323
(M6 x 16) x 8

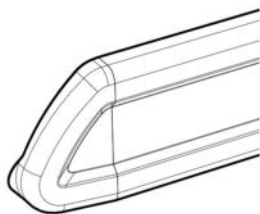

LSF (L) x 2

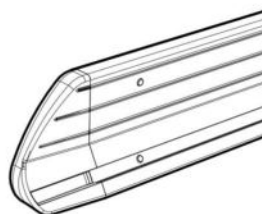


LSF (R) x 2




C04 x 6
optional upgrade


Fitting Kit




PS030 x 4



PS178 x 2




PS176 x 4

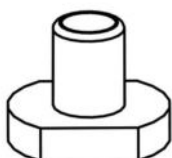

FN085 x 16



FW008 (M6) x 10

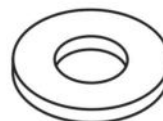

FW001 (M6) x 10



FS042
(M6 x 40) x 4



FB007
(M6 x 45) x 4




FS039
(M6 x 30) x 2




FT01 x 1



FT05 x 1



FS038
(M6 x 25) x 2




PS031 x 4




FS059
(M8 x 25) x 16




1.

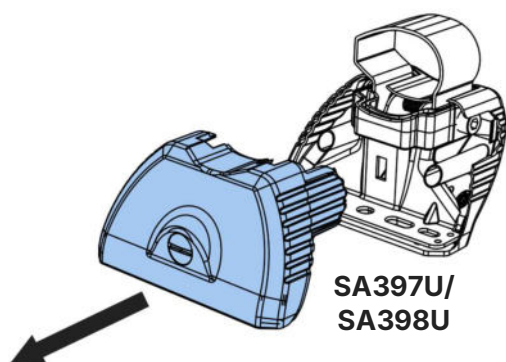


2.

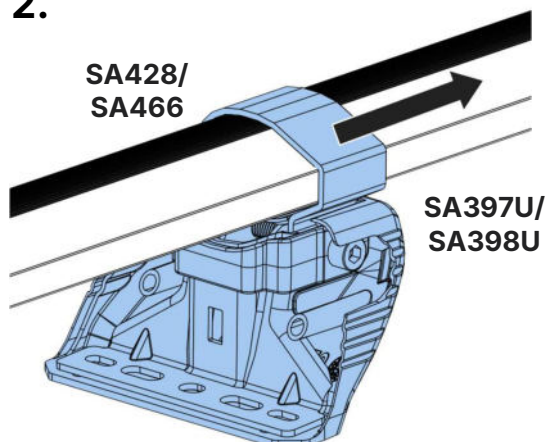


3.






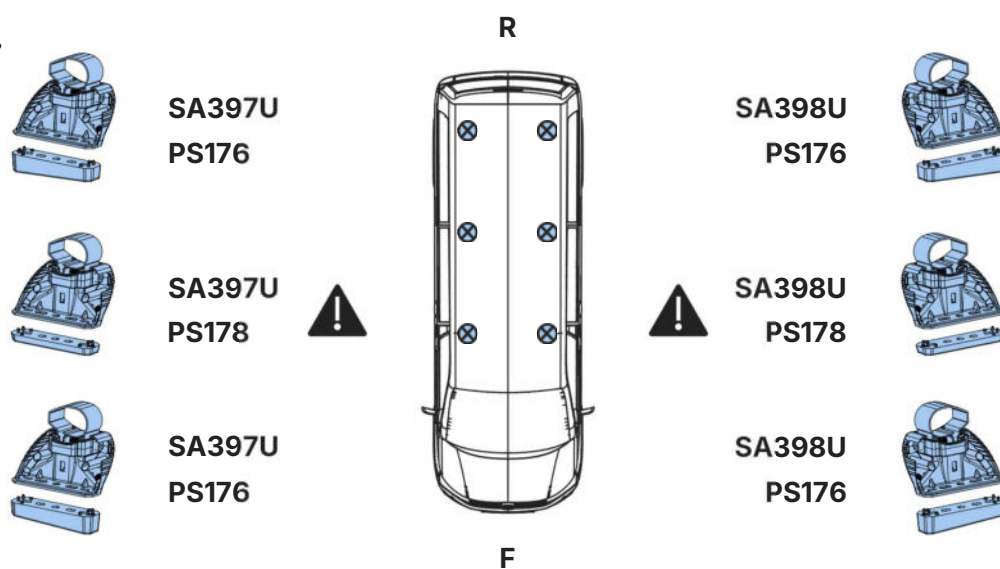


4.

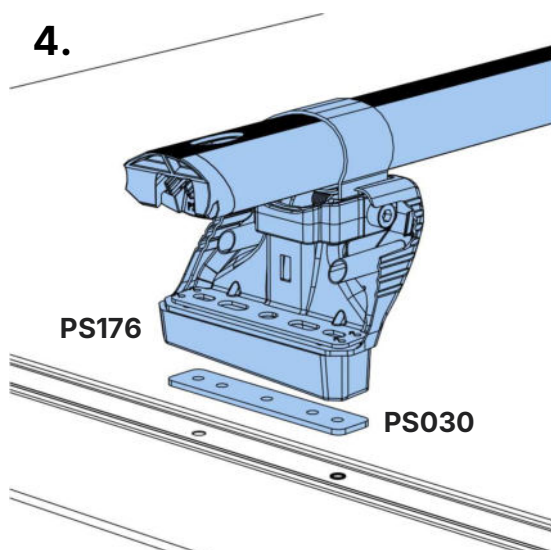


5.

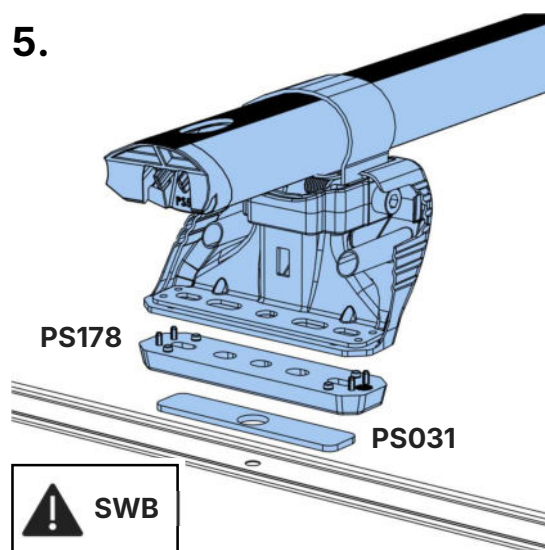


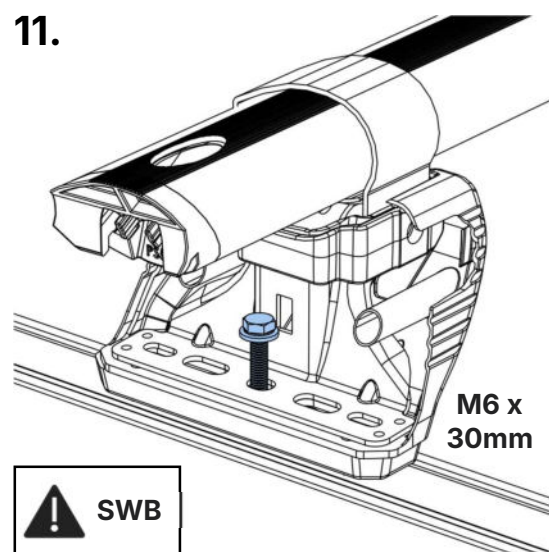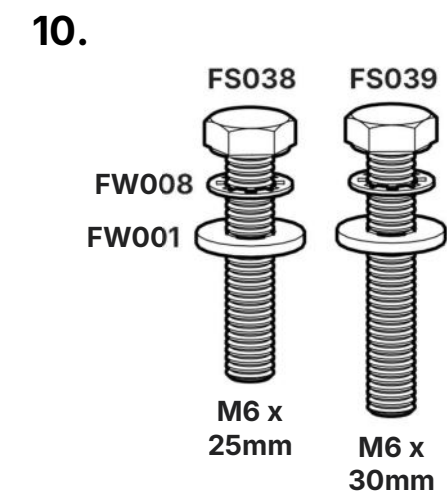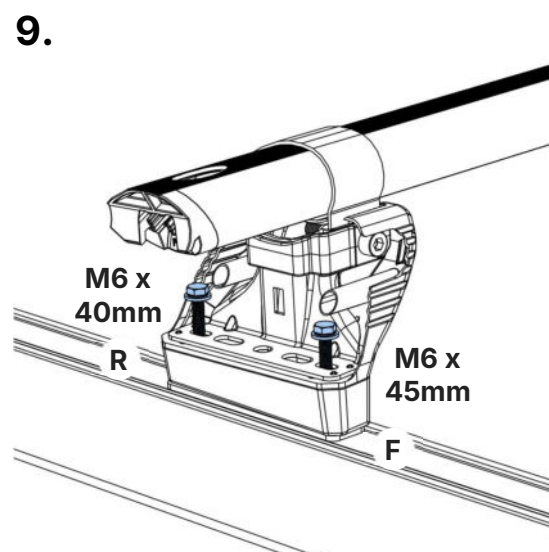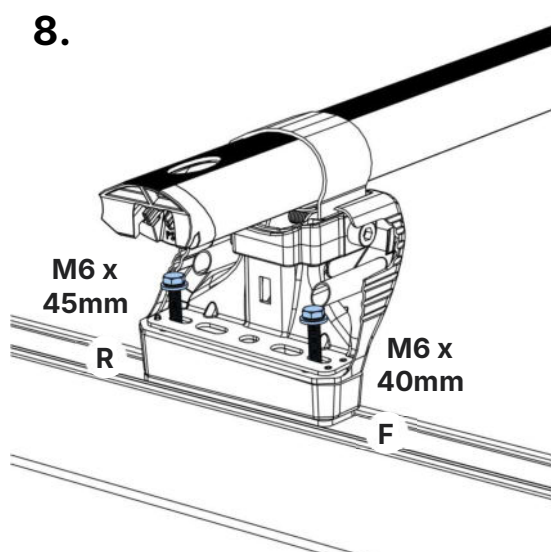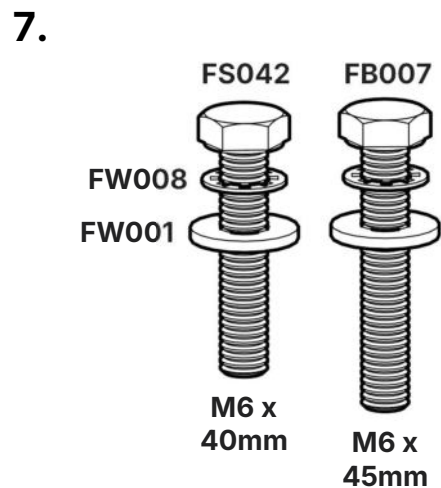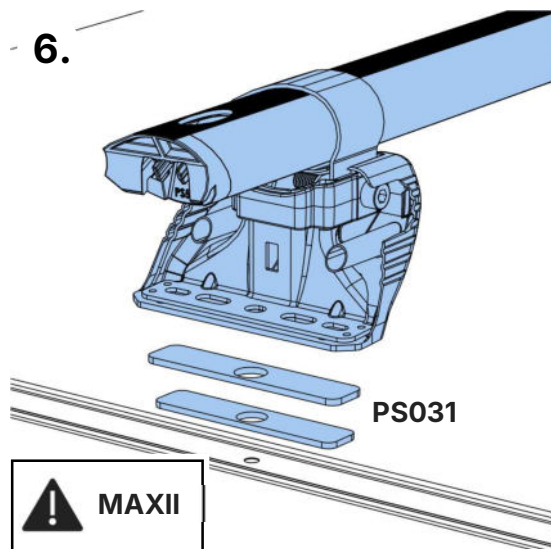


12.

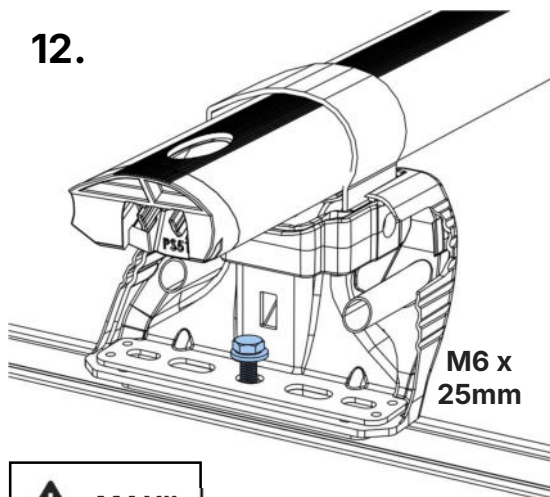


13.

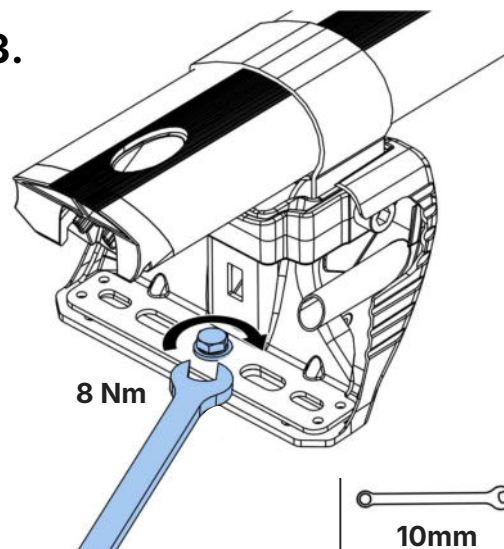


14.

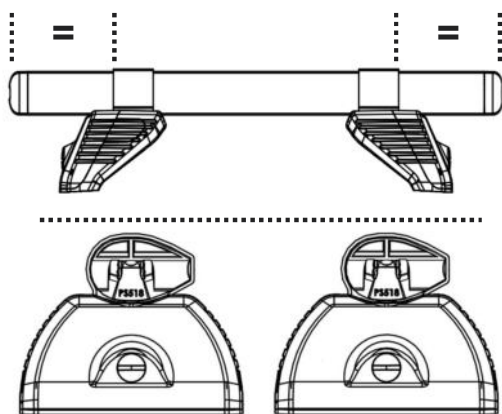

15.

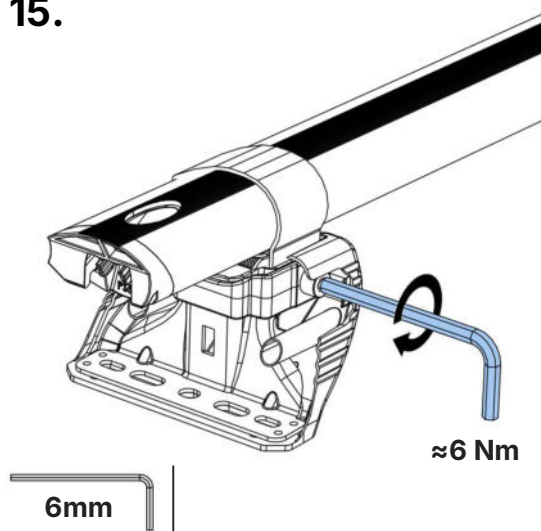


16.

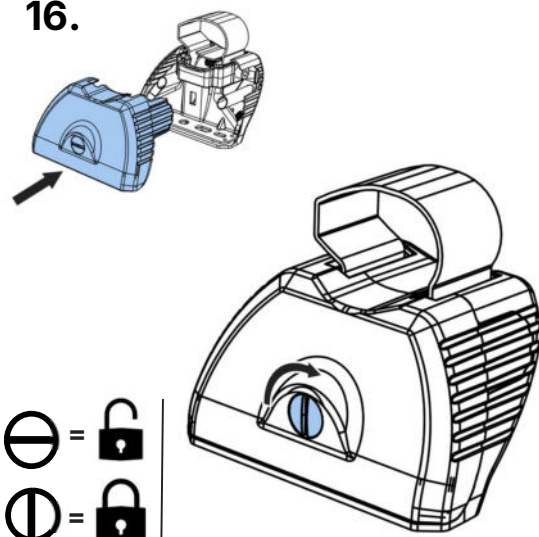


17.









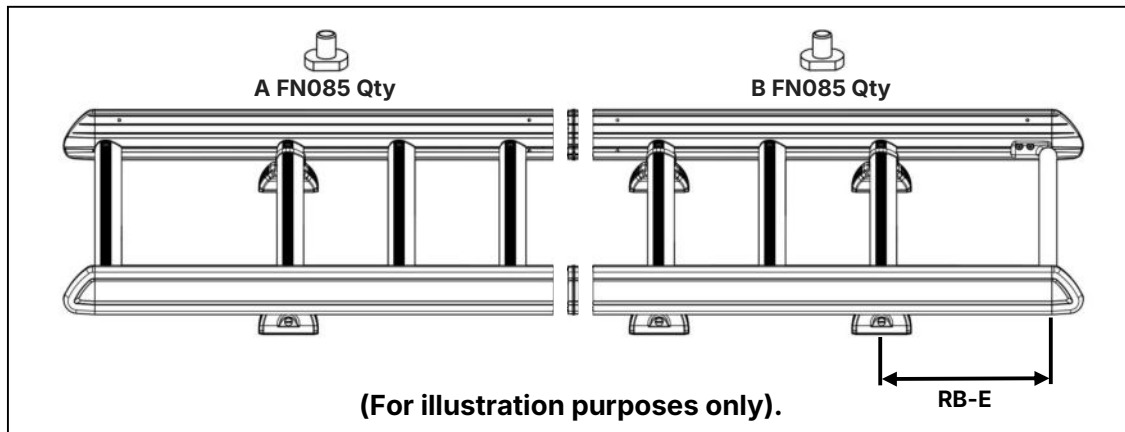


L602/LB602- Doblo 2010-2022, Combo 2012-2018, L1-H1 (Twin)

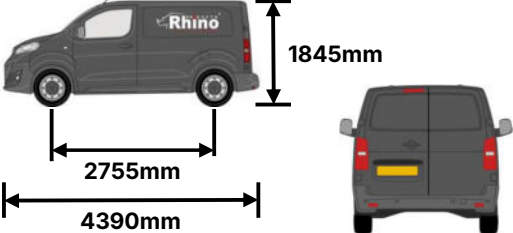
Max Load = 150kg/330lbs  L602/LB602 = 19kg/42lbs					
A FN085 Qty		B FN085 Qty		Rear Bar – End (mm)	
3		5		325	

L603/LB603- Doblo 2010-2022, Combo 2012-2018, L2-H1 (Twin)

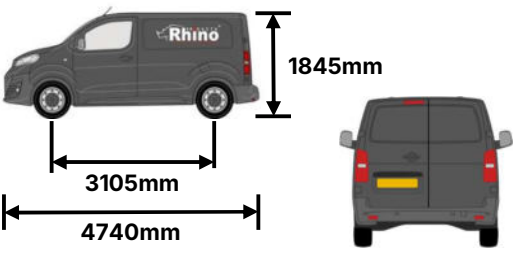
Max Load = 150kg/330lbs  L603/LB603 = 20kg/44lbs					
A FN085 Qty		B FN085 Qty		Rear Bar – End (mm)	
4		4		342	

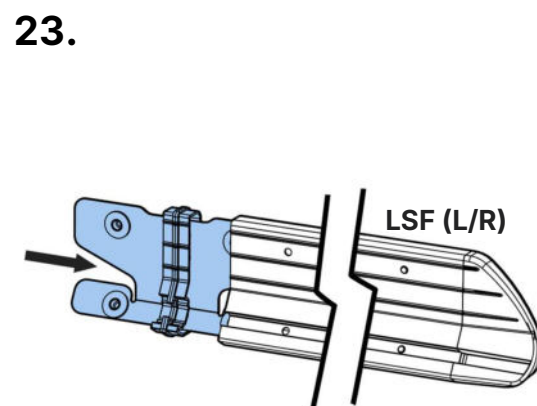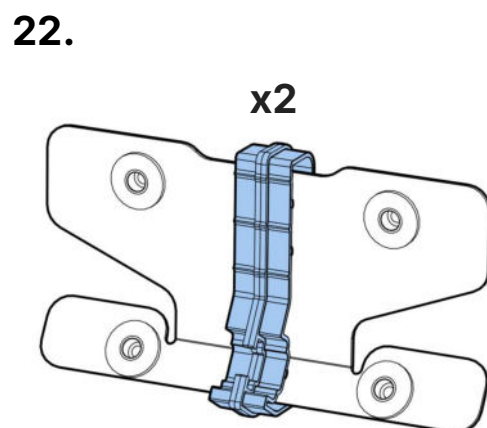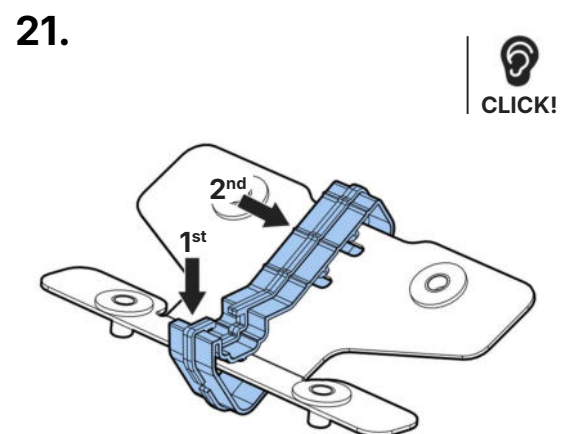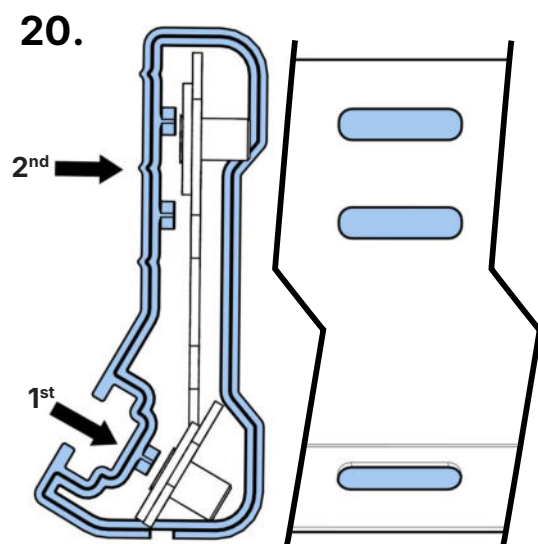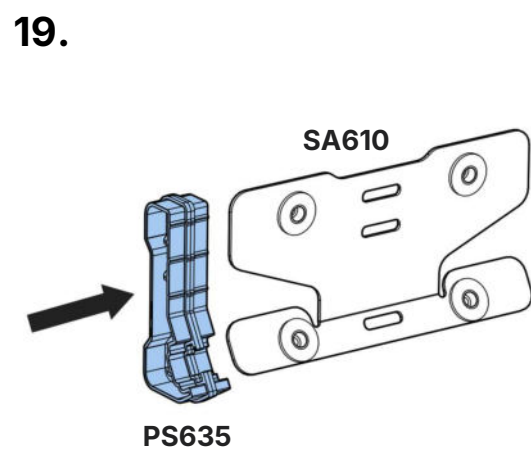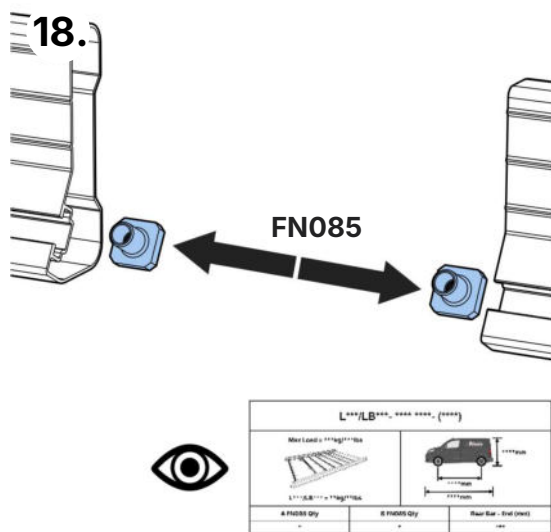


24.

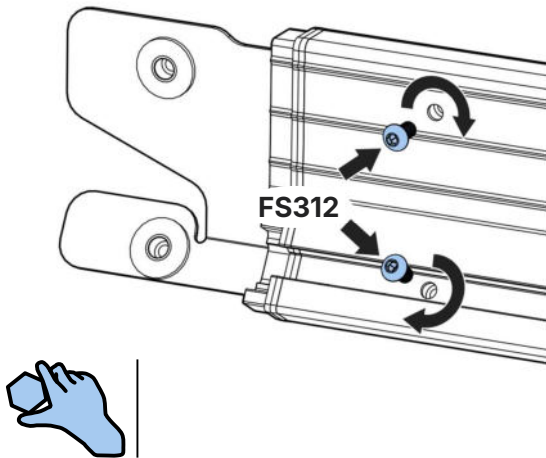


25.

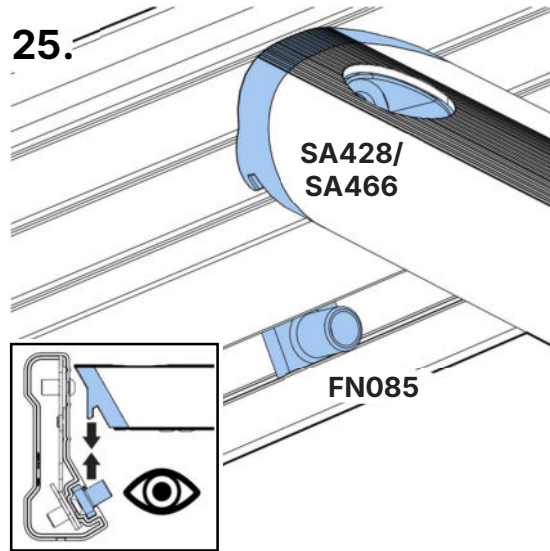


26.

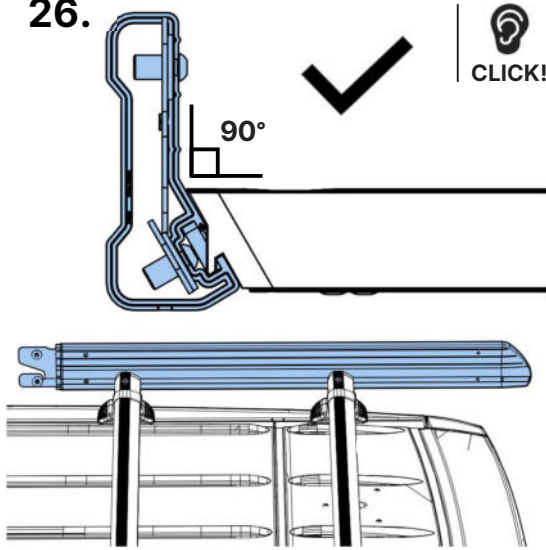

27.

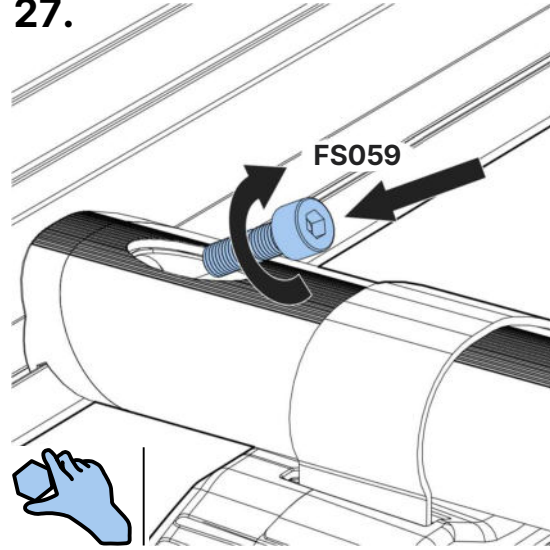

28.

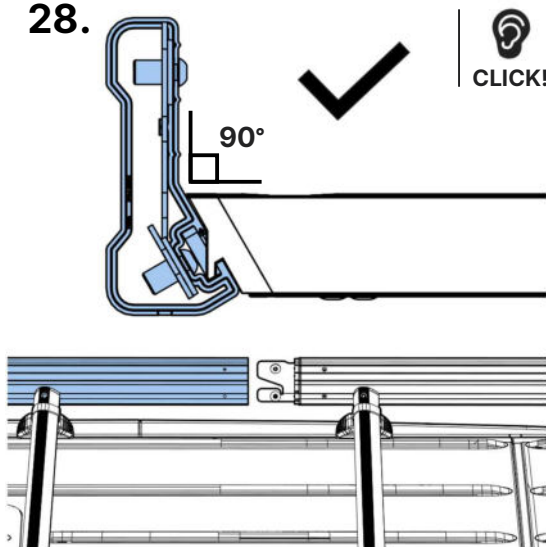

29.

