



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

XC4KE


KammEdge.

Instructions

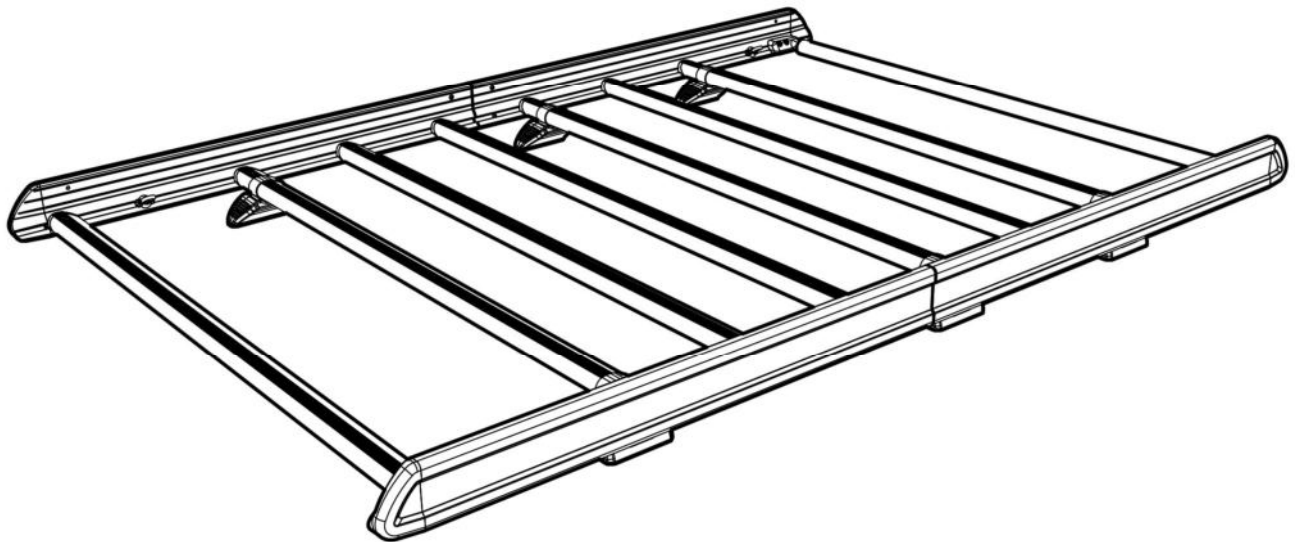


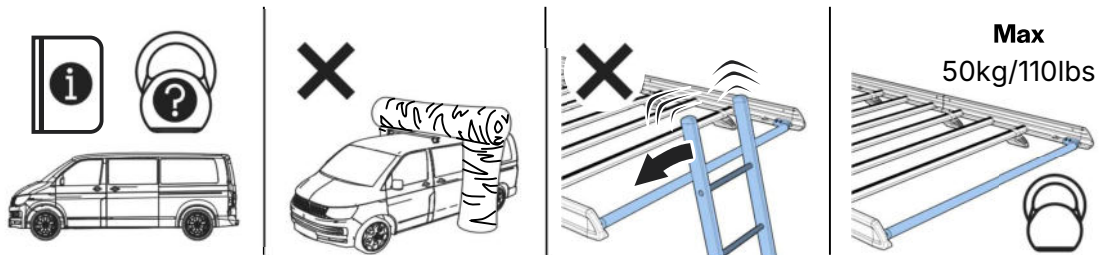

KammEdge.

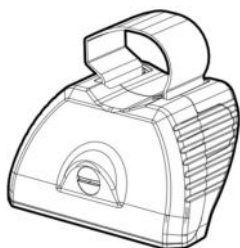


SA397U x 4

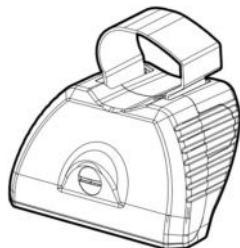


SA398U x 4




SA430/SA468 x 8

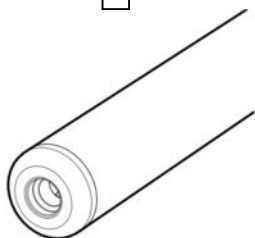


SA438 x 1

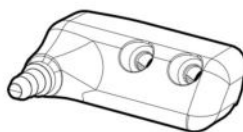

PS519 x 1

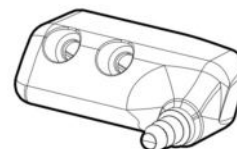

PS520 x 1

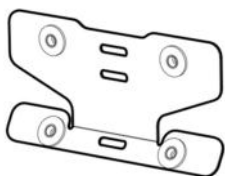


SA610 x 2




PS635 x 2



**FS323
(M6 x 16) x 8**

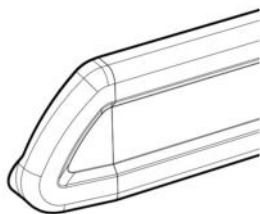

LSF (L) x 2

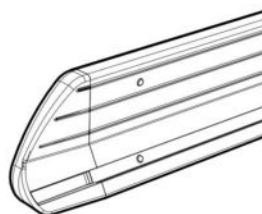


LSF (R) x 2




C04 x 8
optional upgrade

Fitting Kit




PS183 x 8

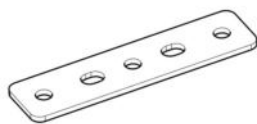


PS023 x 8




PS619 x 2

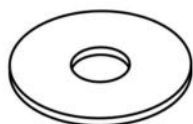

PS208 (M8) x 10

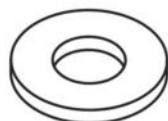


FW002 (M8) x 10



FW021 (M8) x 8



FN006 (M8) x 14



MS209 x 6




PS020 (M8) x 6



SW525 x 2



**FS059
(M8 x 25) x 20**

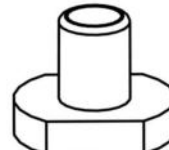

FN085 x 20



**FS024
(M8 x 100) x 6**



FT05 x 1



**FS081
(M8 x 50) x 4**









FT01 x 1




**FS067
(M8 x 20) x 4**




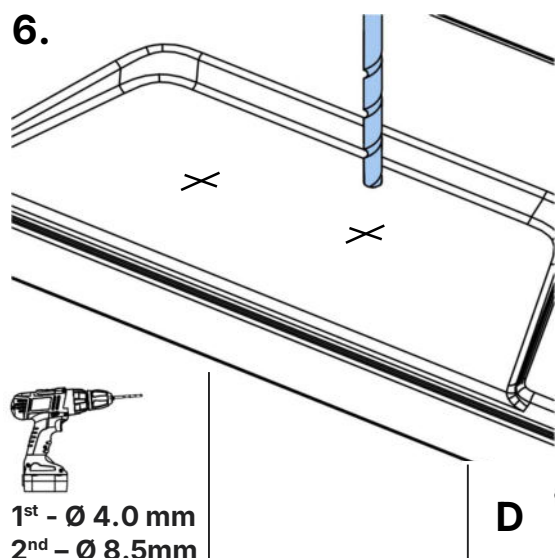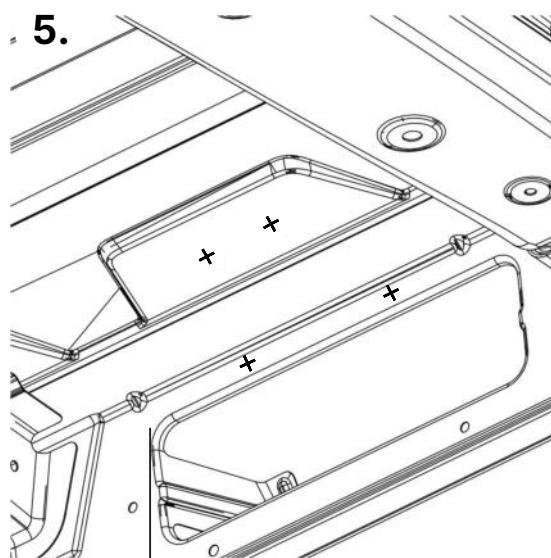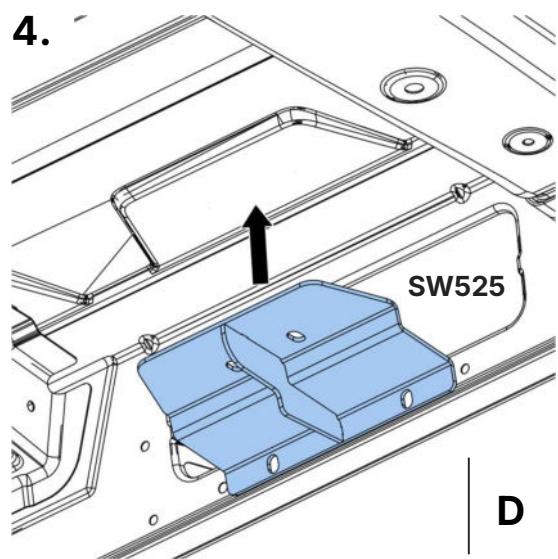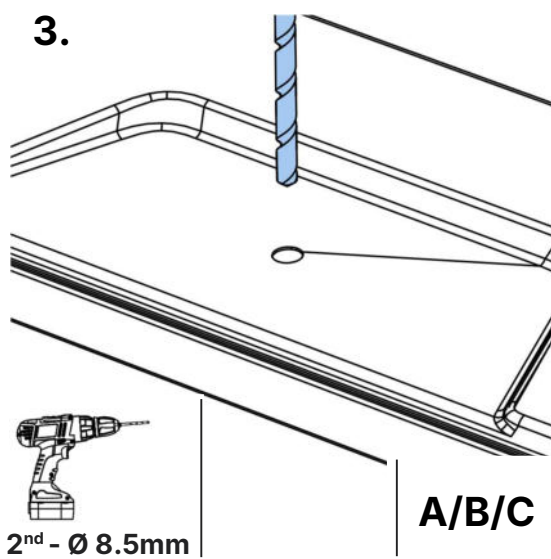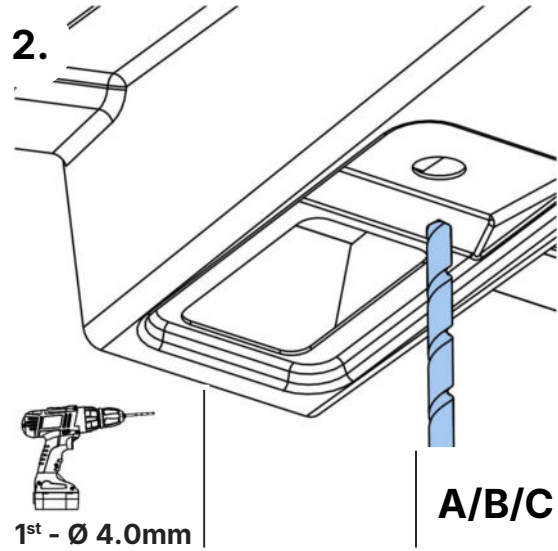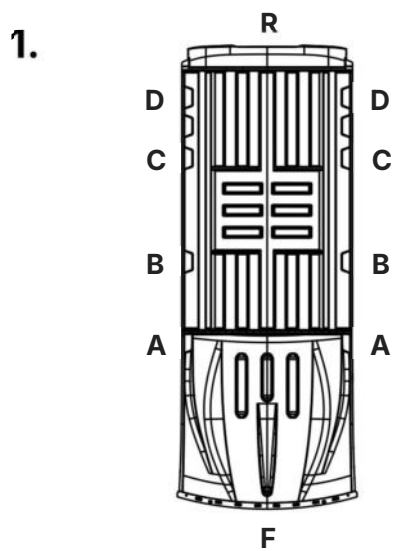


7.

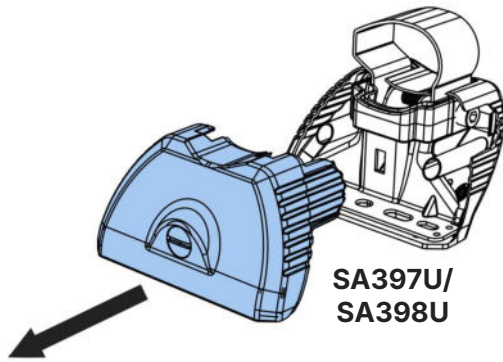


8.

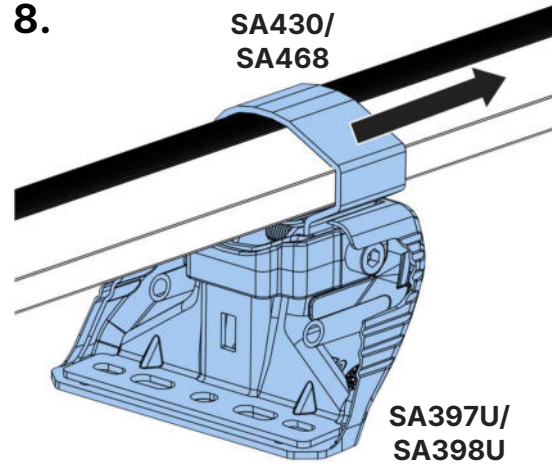


9.






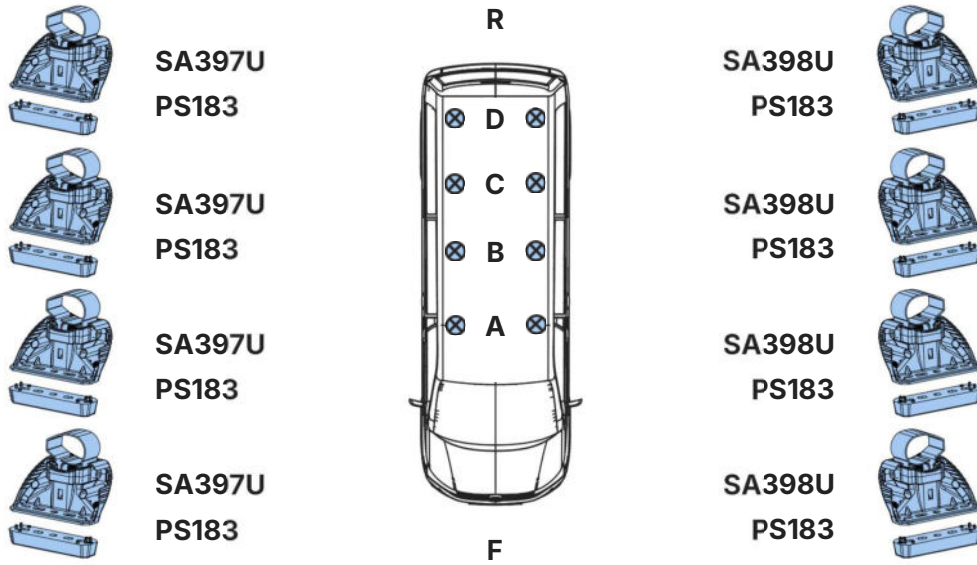







10.

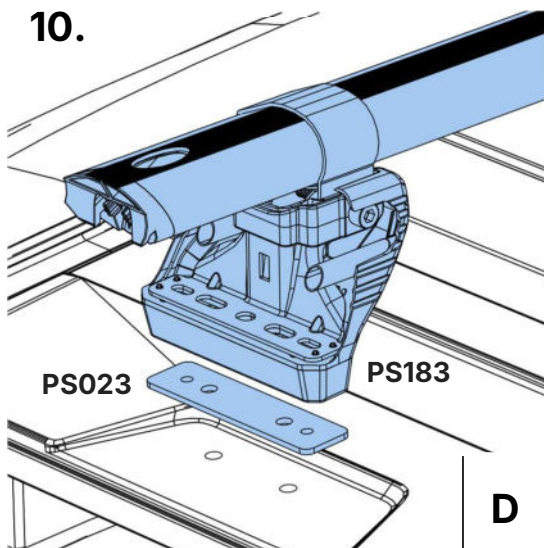


11.

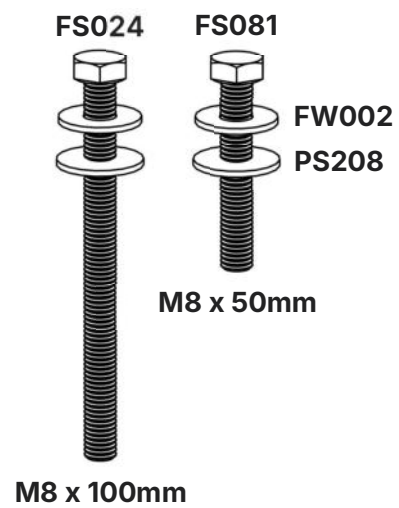

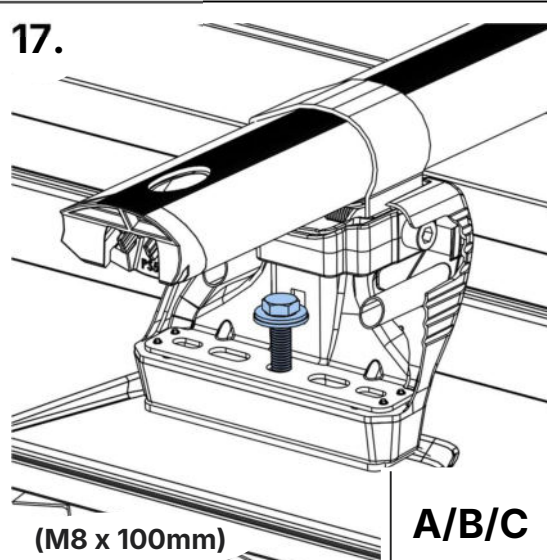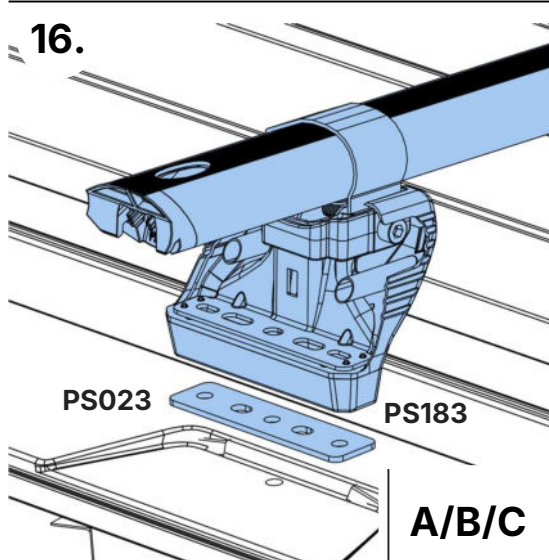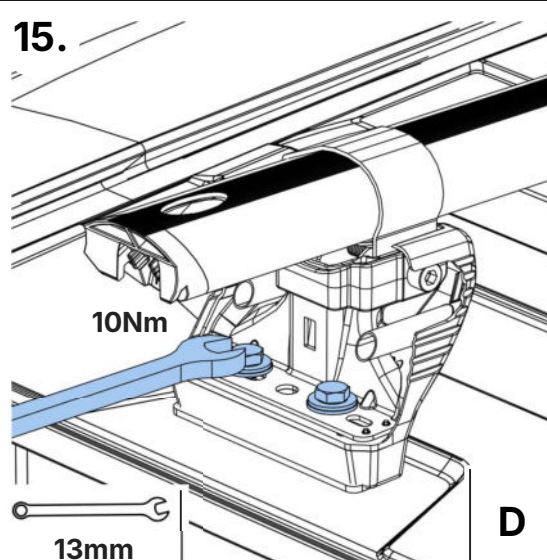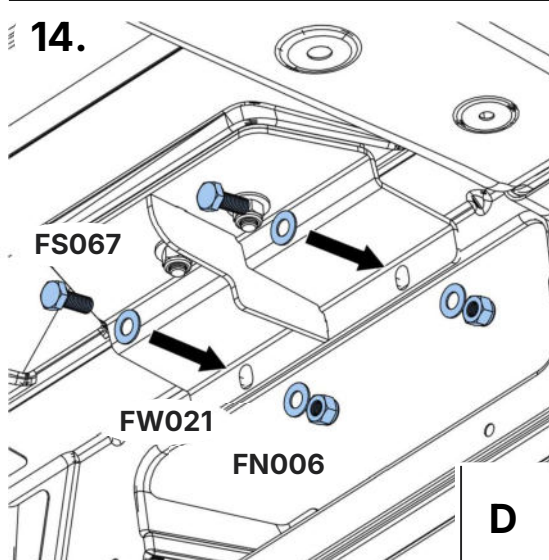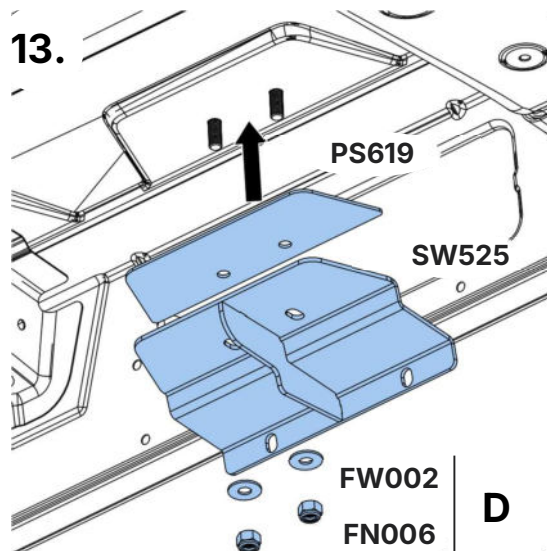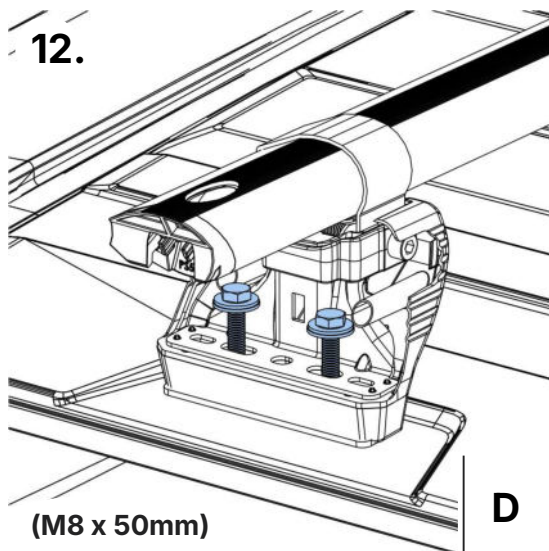

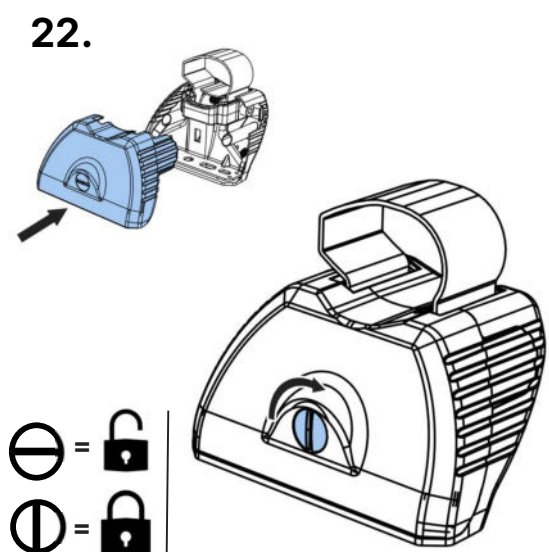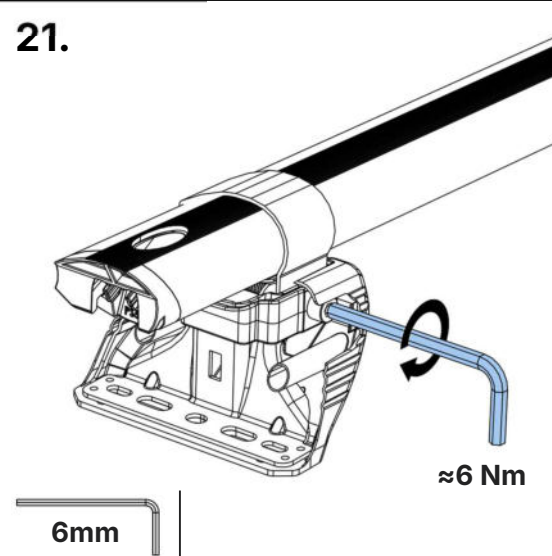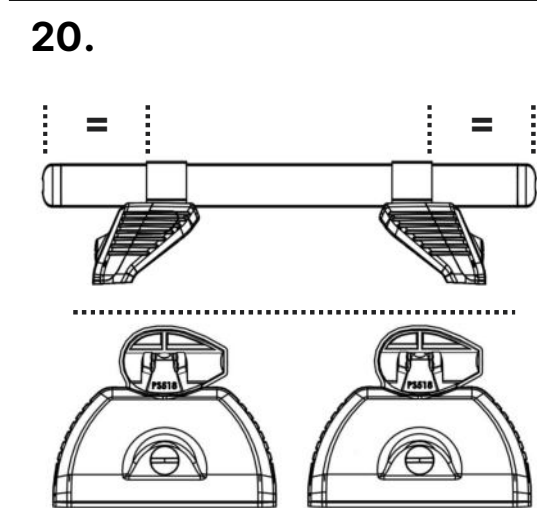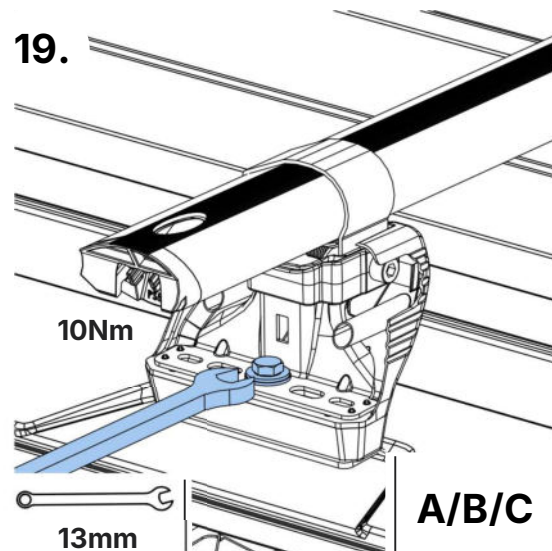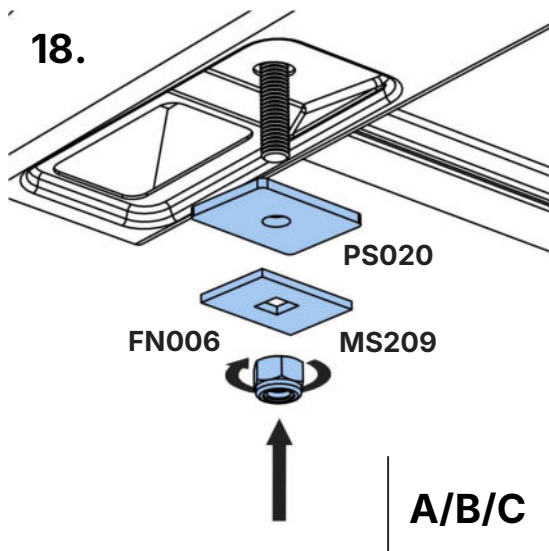

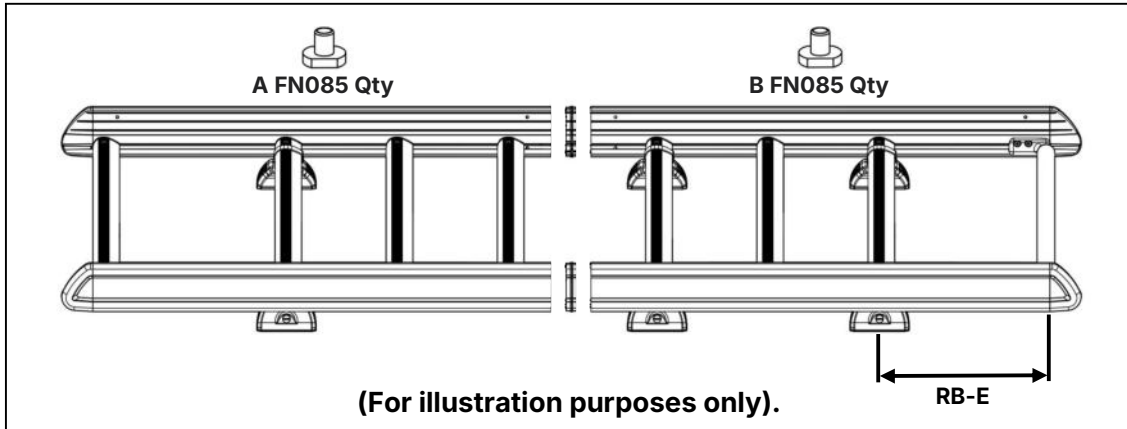


L678/LB678- Deliver 9 2020-, L3-H2 (Twin)

Max Load = 150kg/330lbs



L678/LB678 = 29kg/64lbs

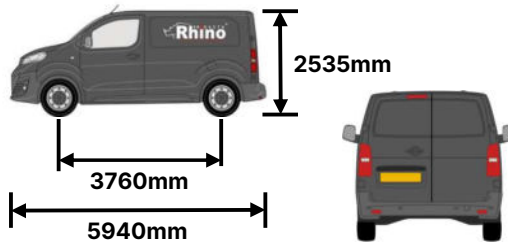


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	6	280

L679/LB679- Deliver 9 2020-, L3-H3 (Twin)







Max Load = 150kg/330lbs




L679/LB679 = 29kg/64lbs

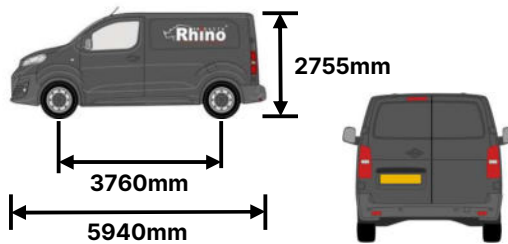


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	6	358

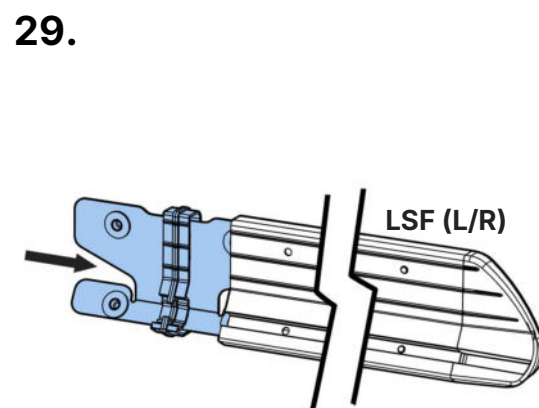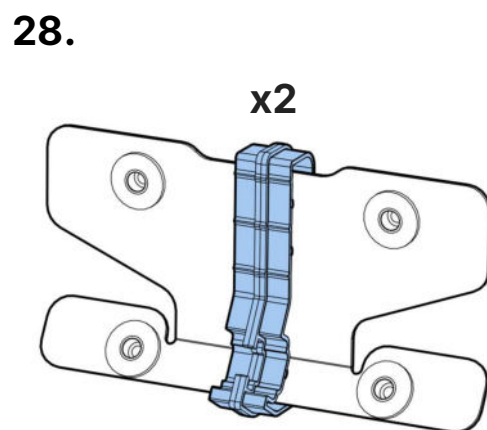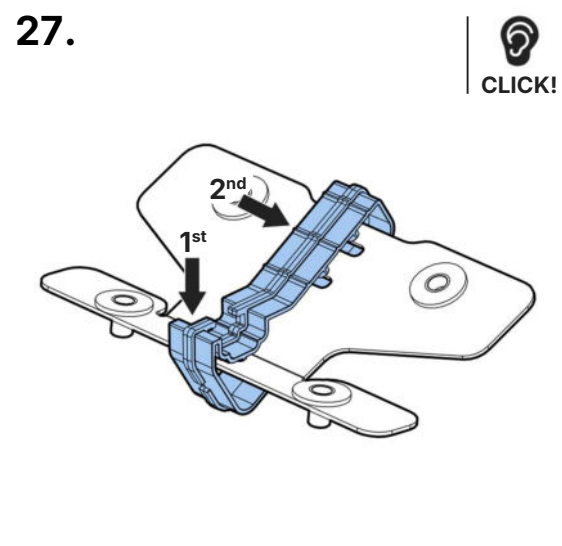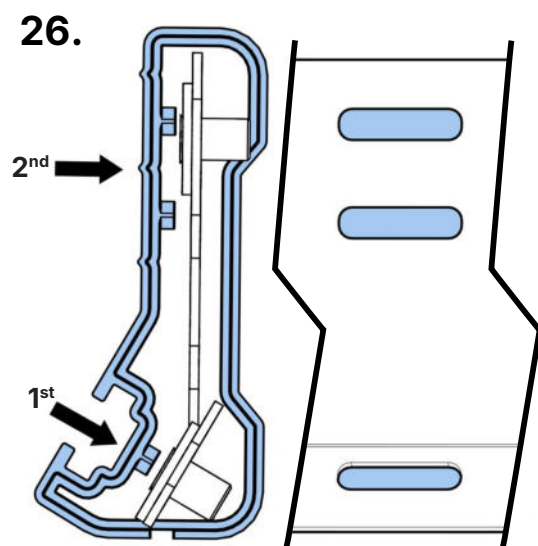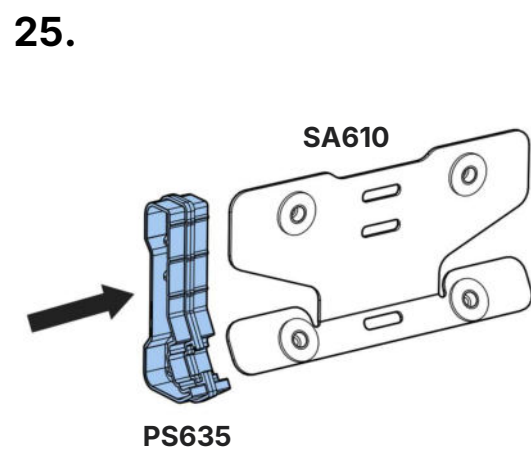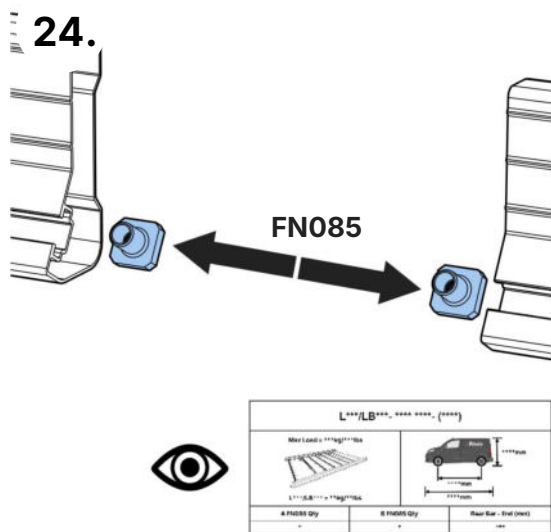


30.

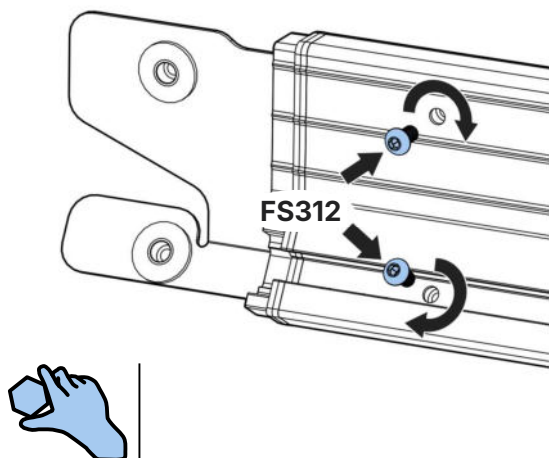


31.

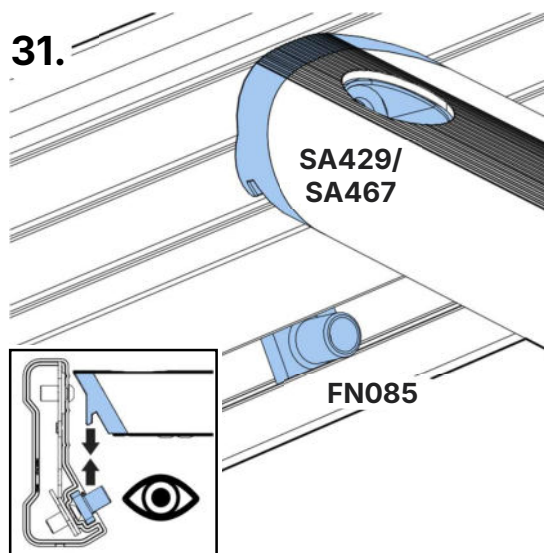


32.

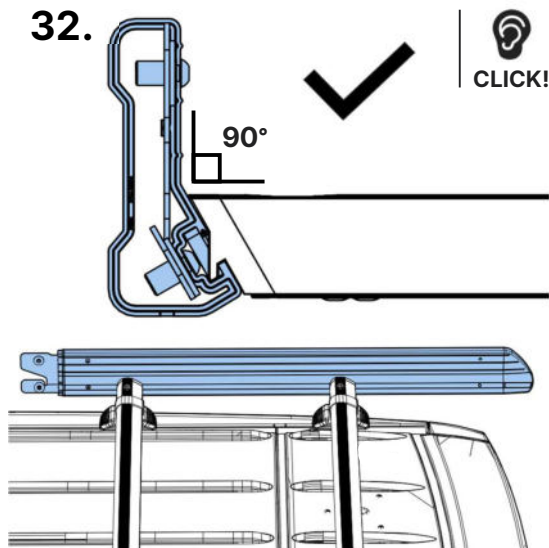

33.

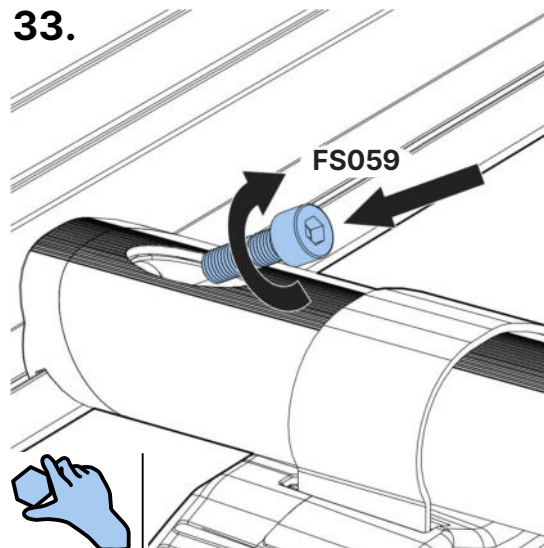

34.

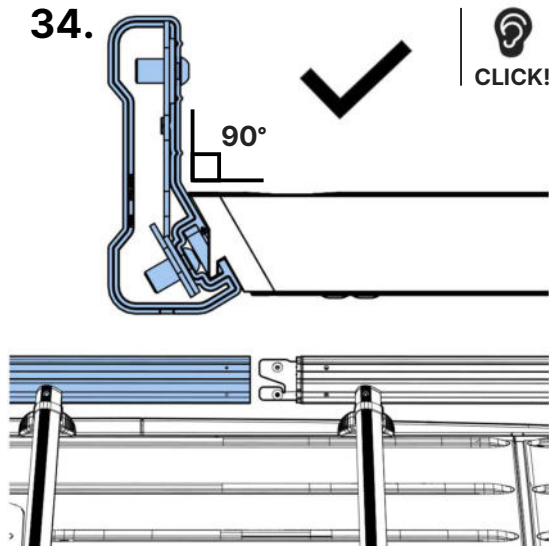

35.

