


T54KR

KammRack

Instructions

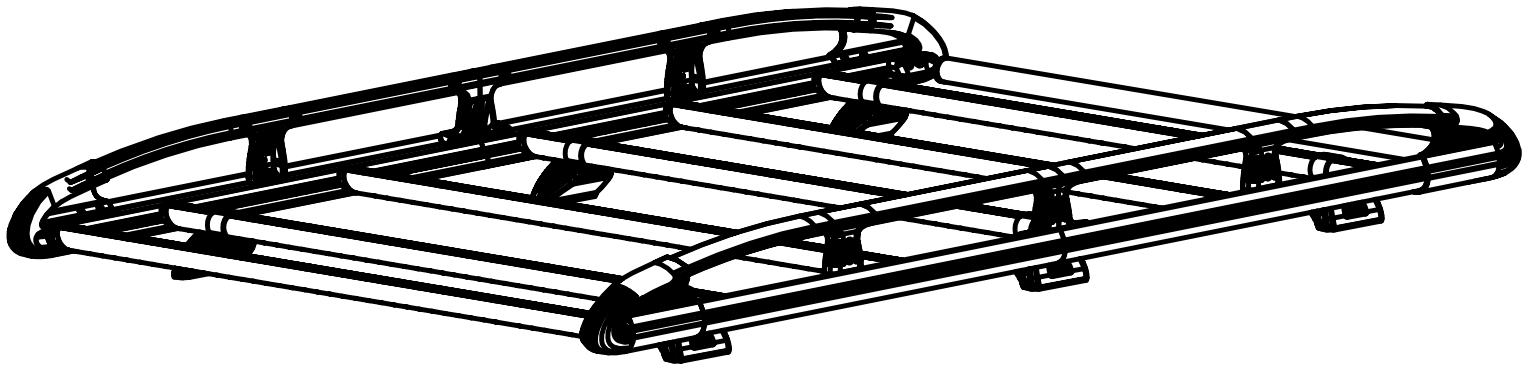




CITY CRASH (✓)

According to ISO/ PAS 11154:2006


T54KR:

VW T5, 2002 –


VW T6, 2015 –

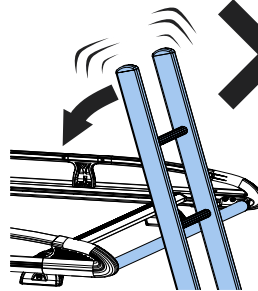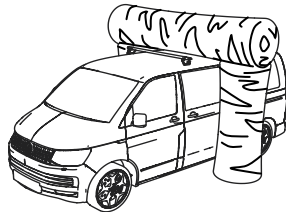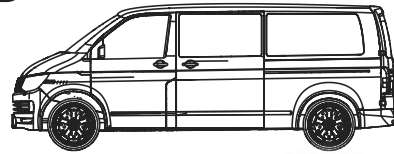


Max
50kg/110lbs

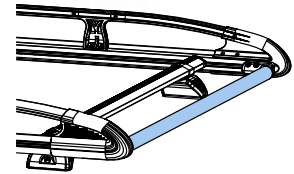


KammRack

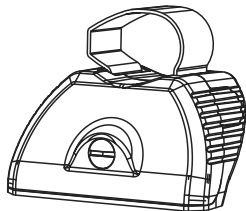


SA397U x 4 ☐

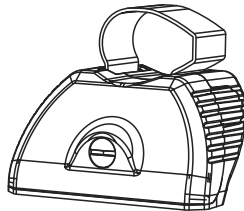


SA398U x 4 ☐

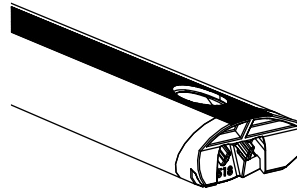


**SA429/S
A467** ☐




C04 x 8
optional upgrade

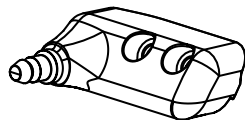


PS519 x 1 ☐

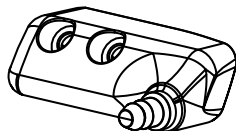

PS520 x 1 ☐

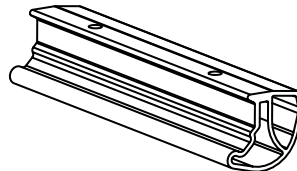

EXT15-02 ☐


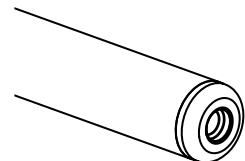


SA437 x 1 ☐

LHS x 2


RHS x 2

**Centre (L2 Twin
Doors Only)**

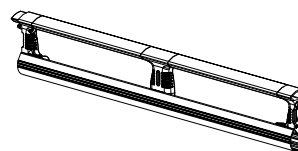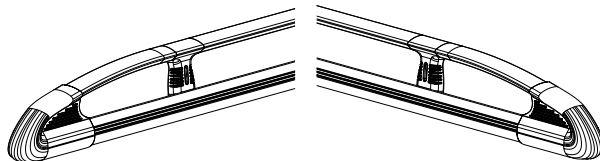


ASF x 1 ☐


Fitting Kit




PS183 x 4 ☐




PS178 x 4 ☐




PS023 x 8 ☐

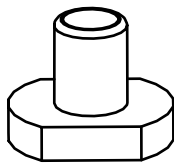

FN085 x 20 ☐



PS009 x 16 ☐




FW001 (M6)
x 24 ☐



FN001 (M6)
x 16 ☐




FW008
(M6) x 8 ☐

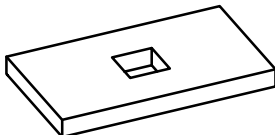


MS098 x 16 ☐



FS104
(M6 x 45) x ☐
8



FS042
(M6 x 40) x ☐
4




FS048
(M6 x 35)
x 8 ☐



FS039
(M6 x 30) x ☐
4



FT01 x 1 ☐




FS059 ☐ (M8
x 25) x 20




FT05 x 1 ☐


1.

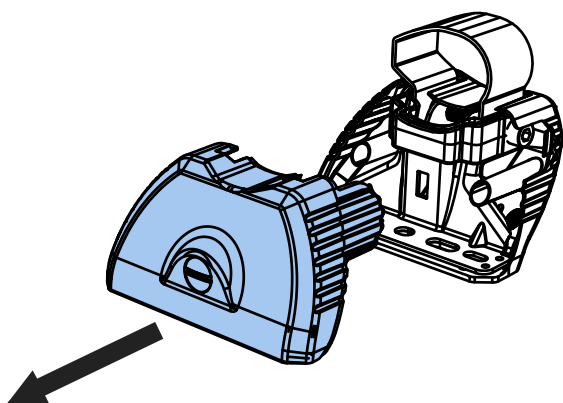

2.

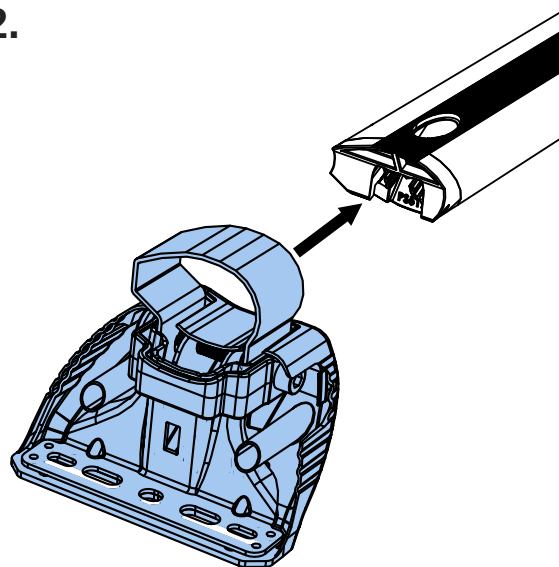


3.

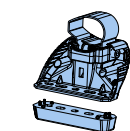


SA397U

PS183




SA397U

PS178



SA397U


PS178



SA397U

PS183

R

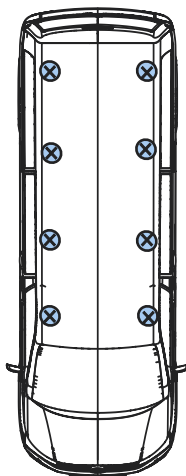

F

SA398U

PS183




SA398U

PS178



SA398U

PS178




SA398U

PS183




4.






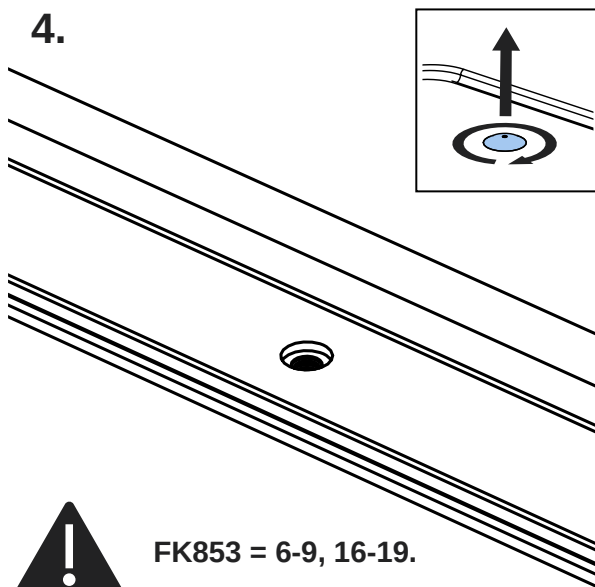


FK853 = 6-9, 16-19.


5.

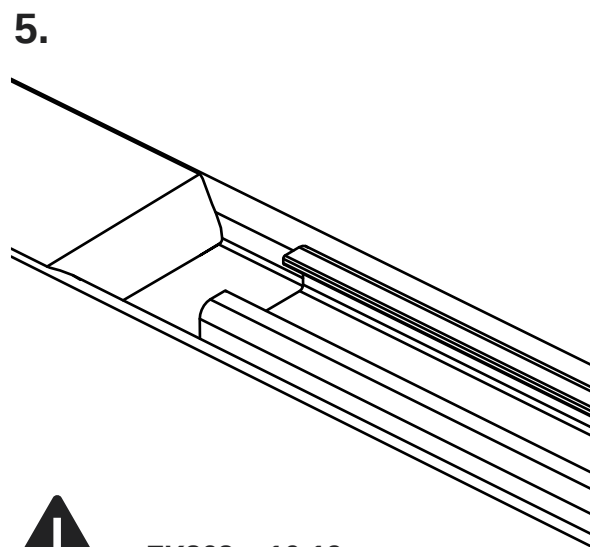


FK862 = 10-19.

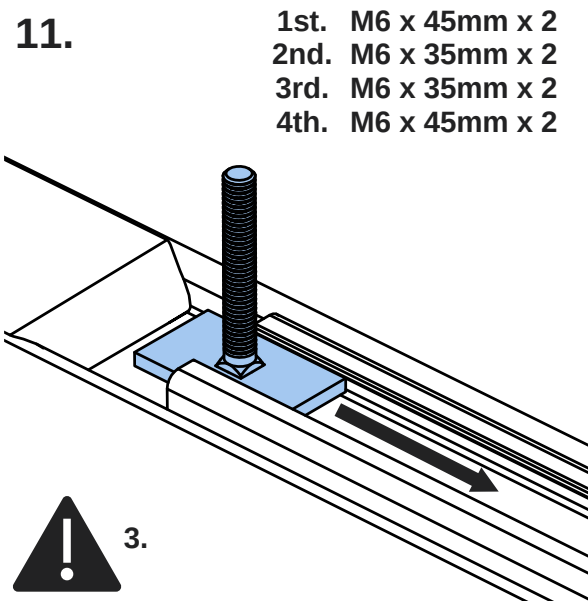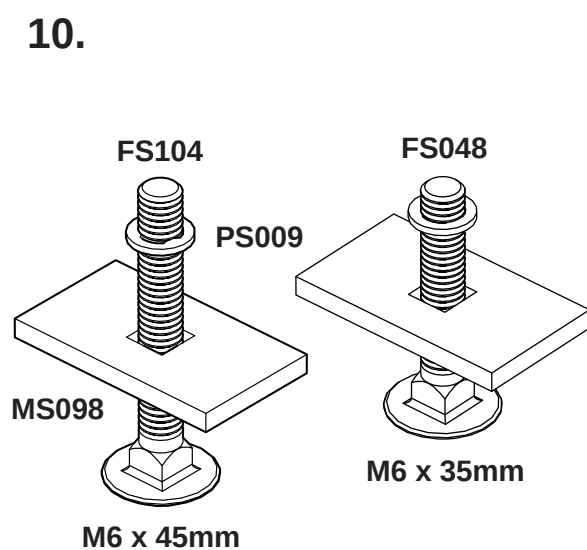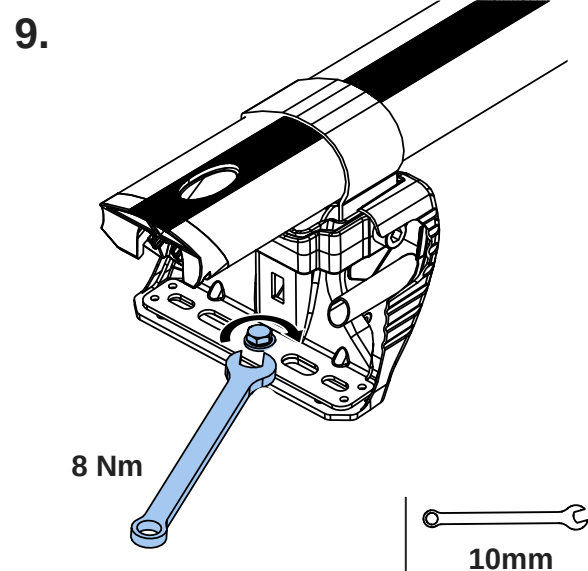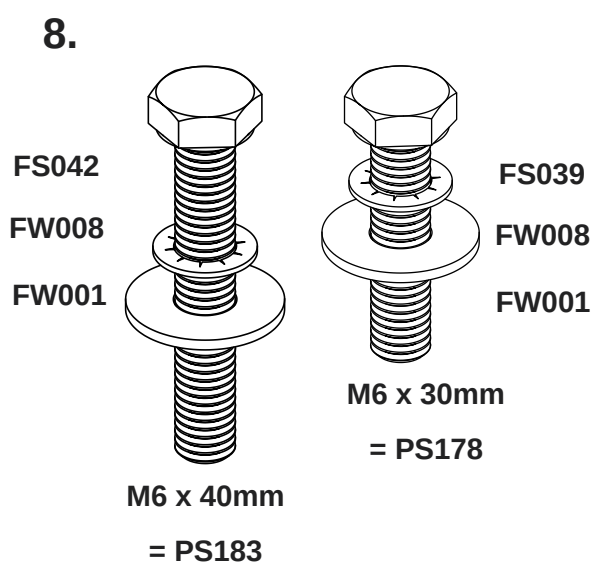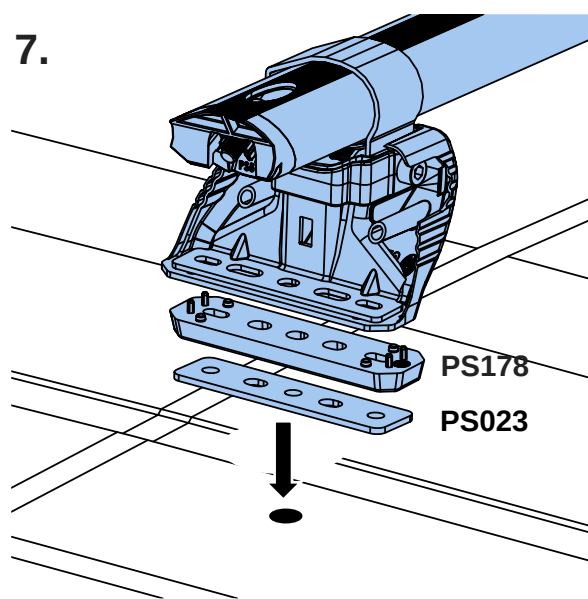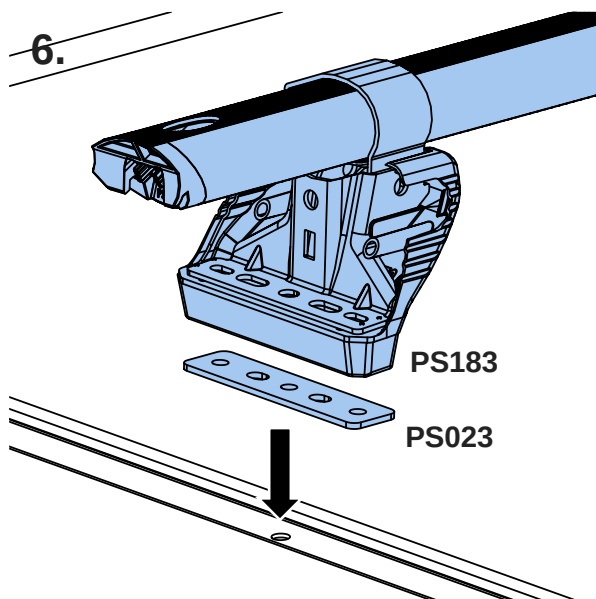


12.

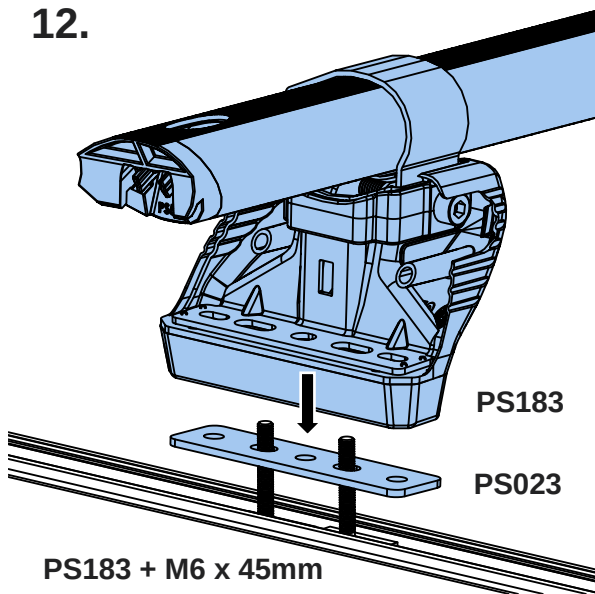


13.

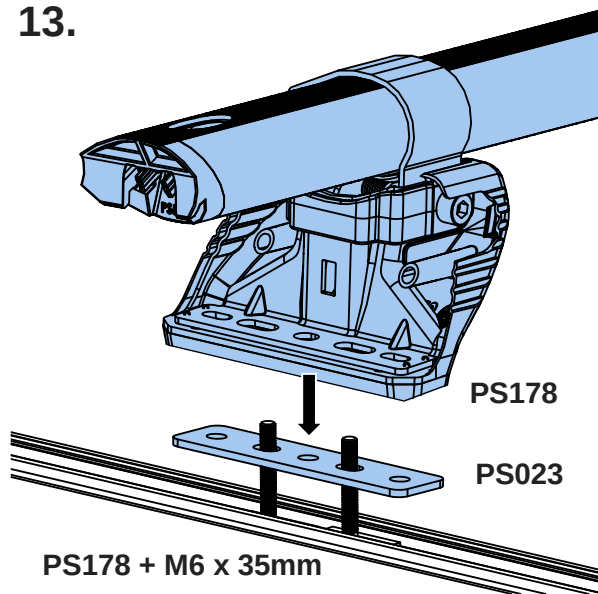


14.

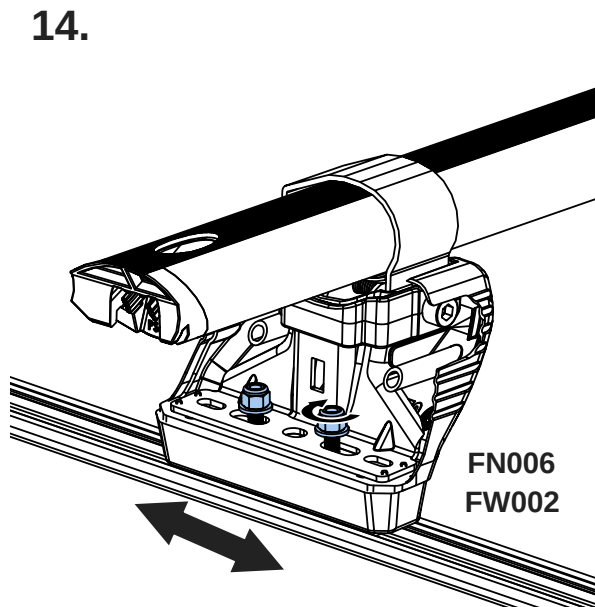


15.

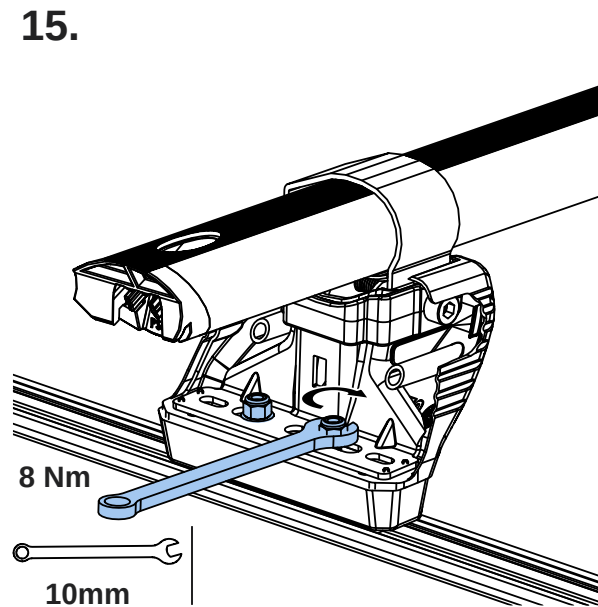


16.

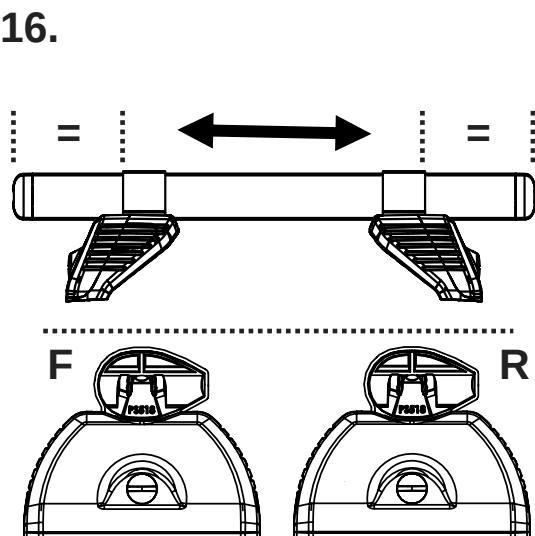


17.

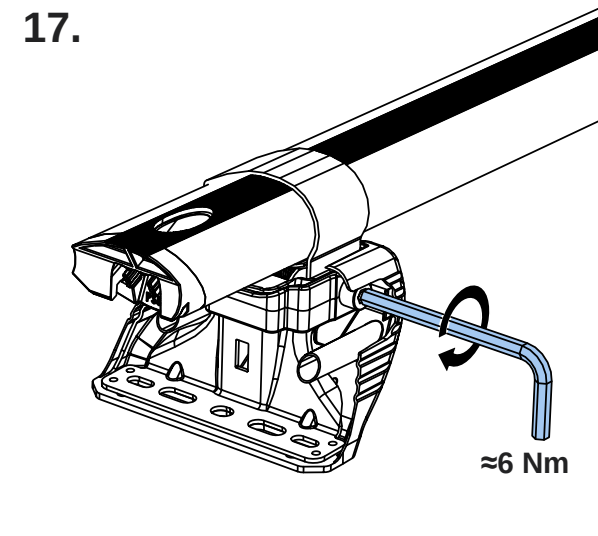


18.

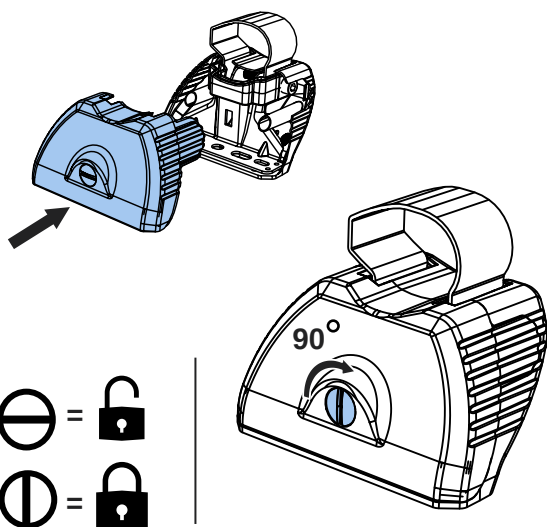


19.

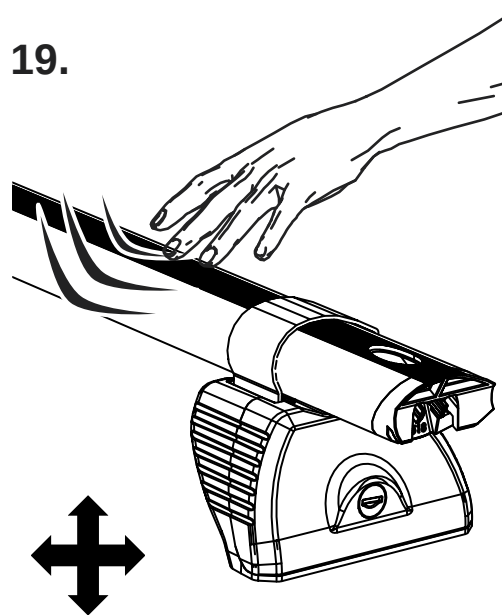

K507/B507- T5/T6/T6.1 Transporter L1, H1 Twin Doors

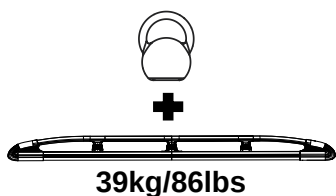


= 150kg
Max

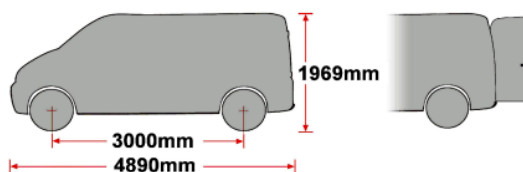


Step 14-30, 53-62


A

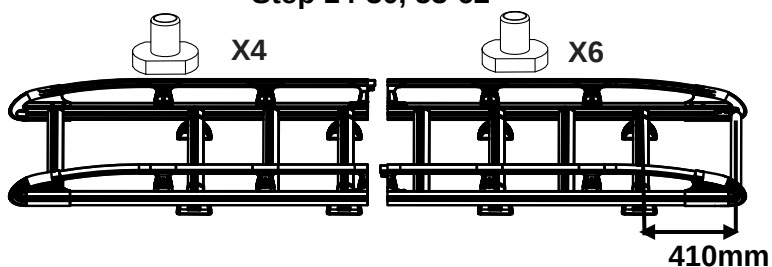

K508/B508- T5/T6/T6.1 Transporter L1, H1, Tailgate

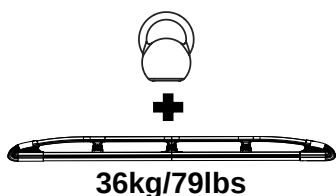


= 150kg
Max

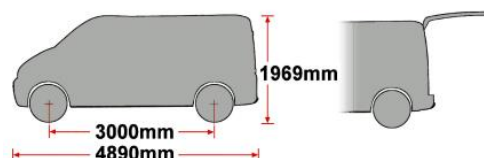


Step 14-30, 53-62


A

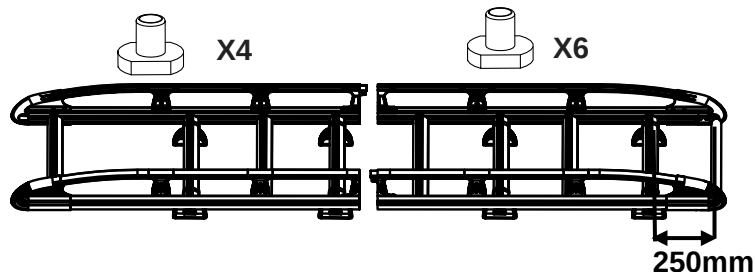

K510/B510- T5/T6/T6.1 Transporter L2, H1, Twin Doors

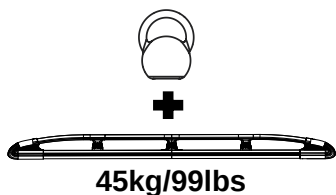


= 150kg
Max

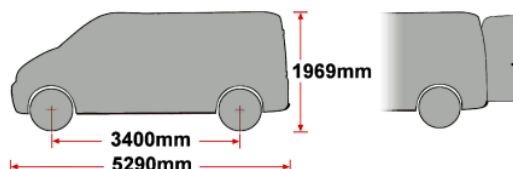


Step 31-62


B

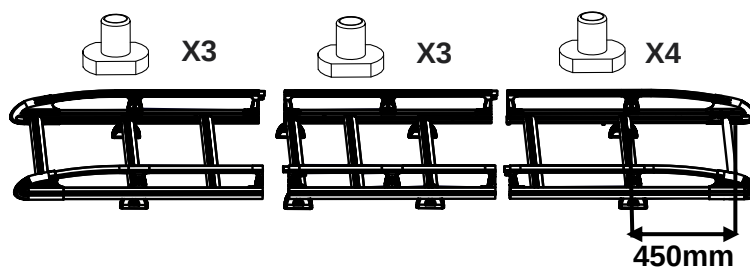

K509/B509- T5/T6/T6.1 Transporter L2, H1, Tailgate

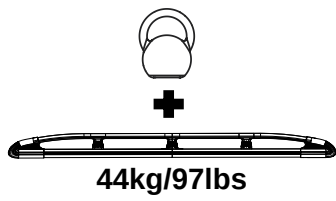








= 150kg
Max

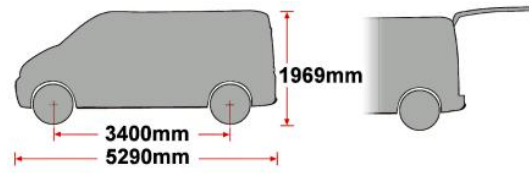


Step 14-30, 53-62

A

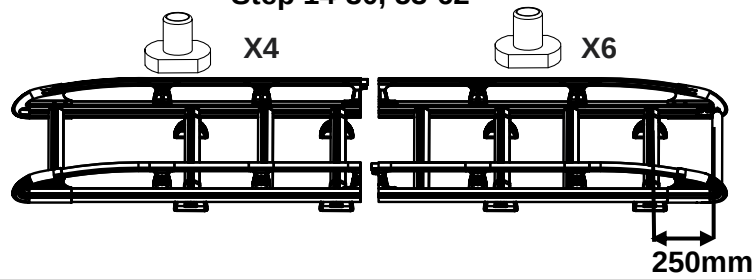


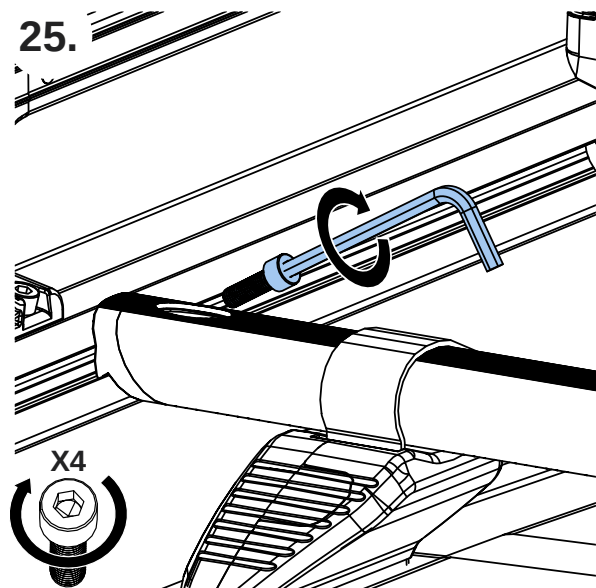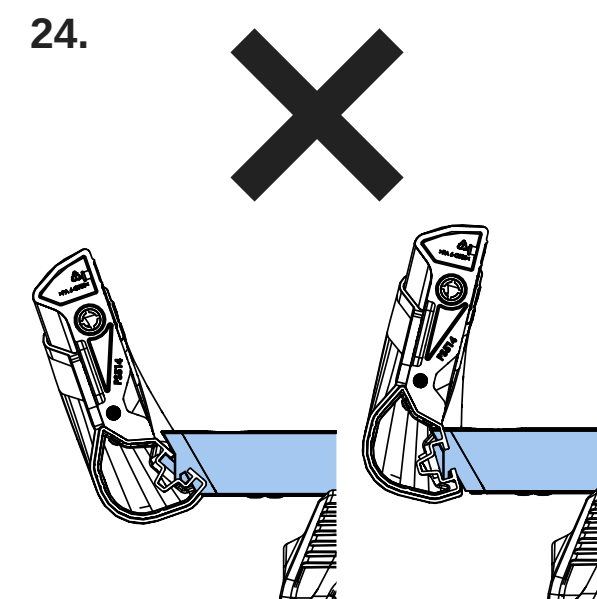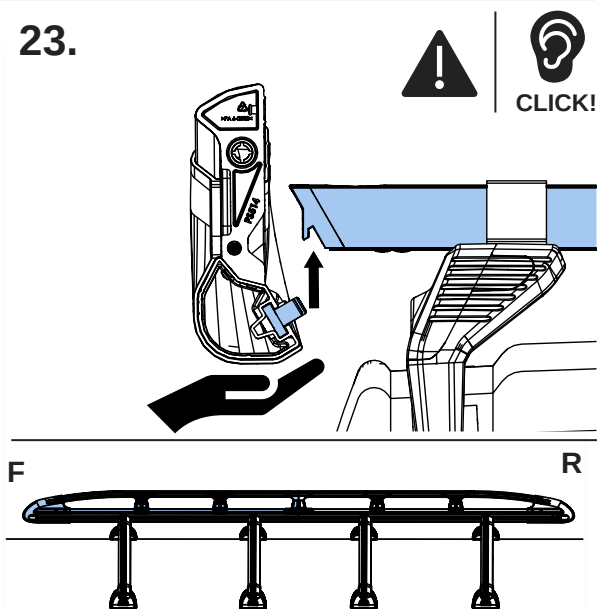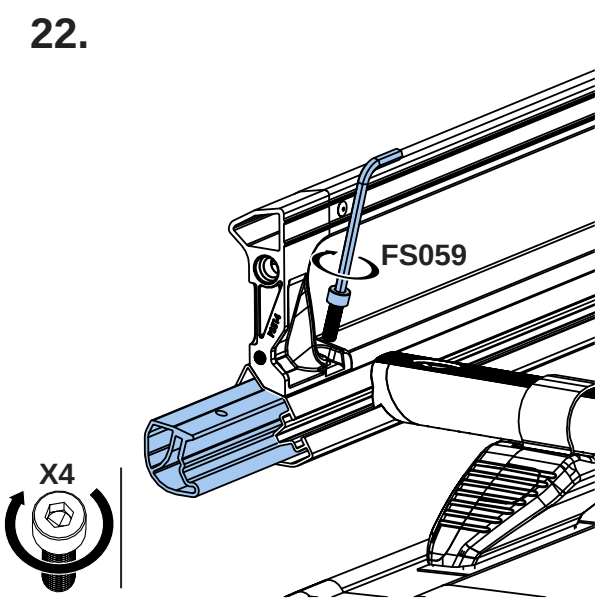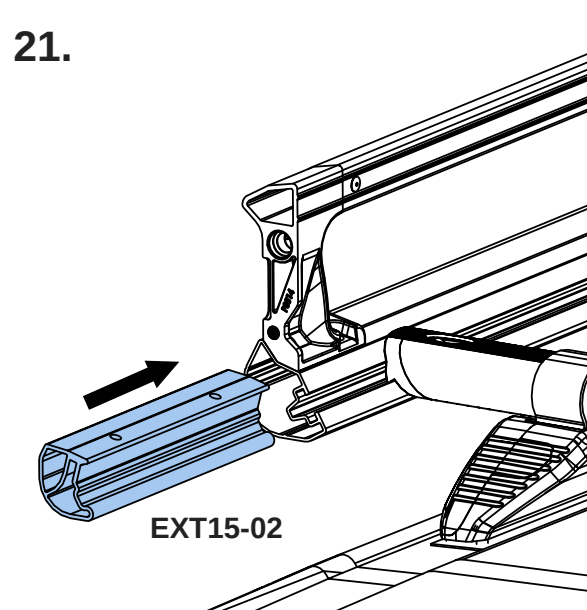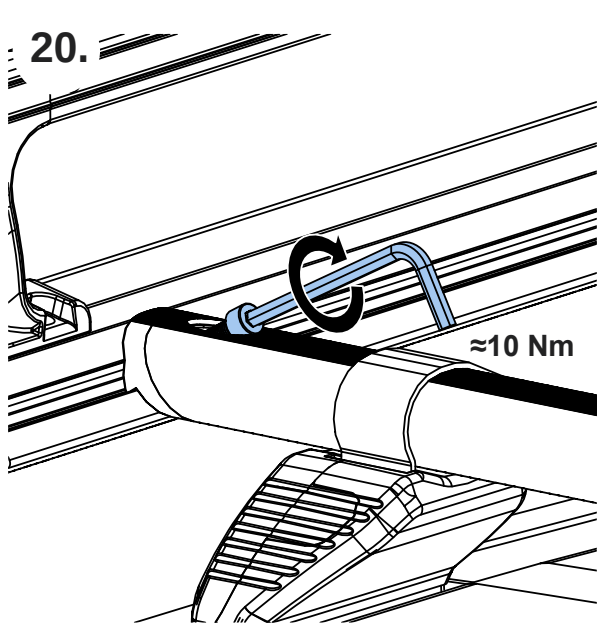


26.

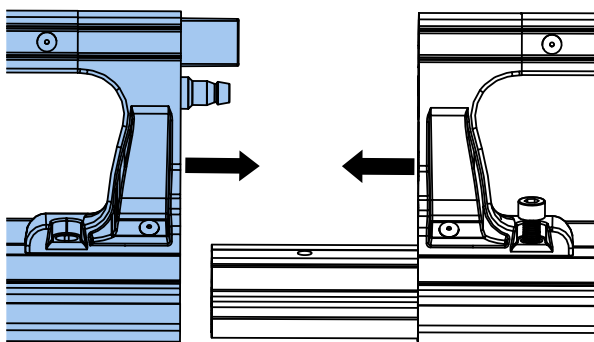


27.

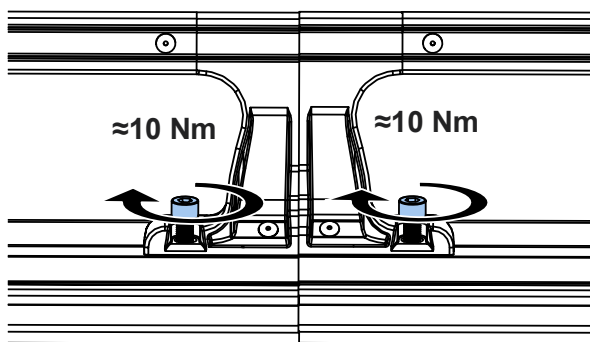


28.

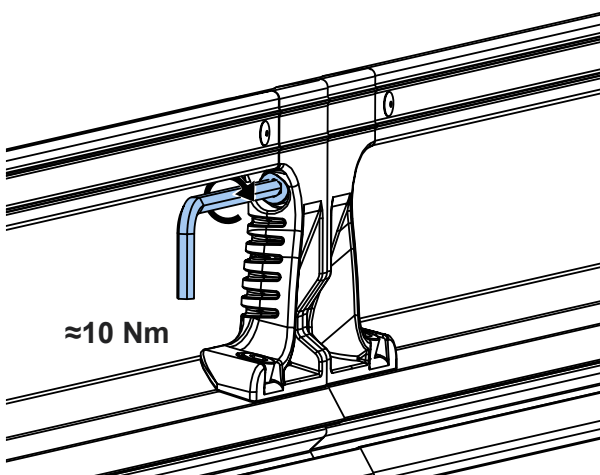


29.

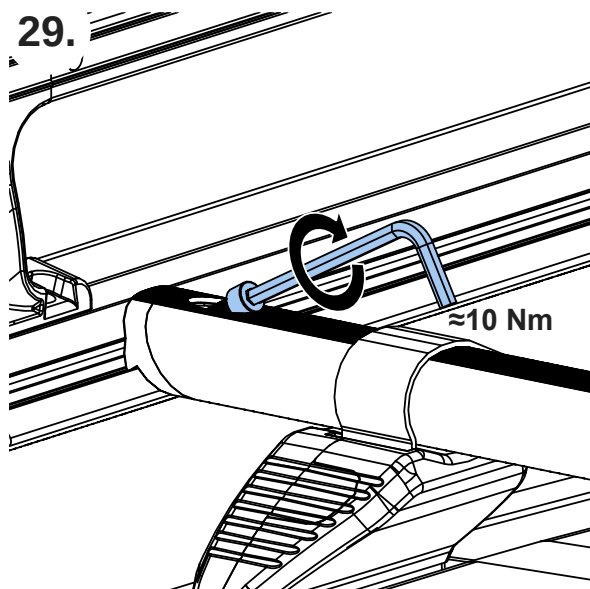


30.

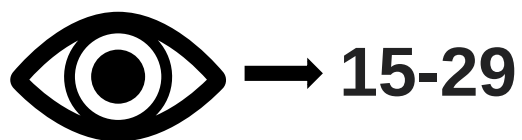


31.

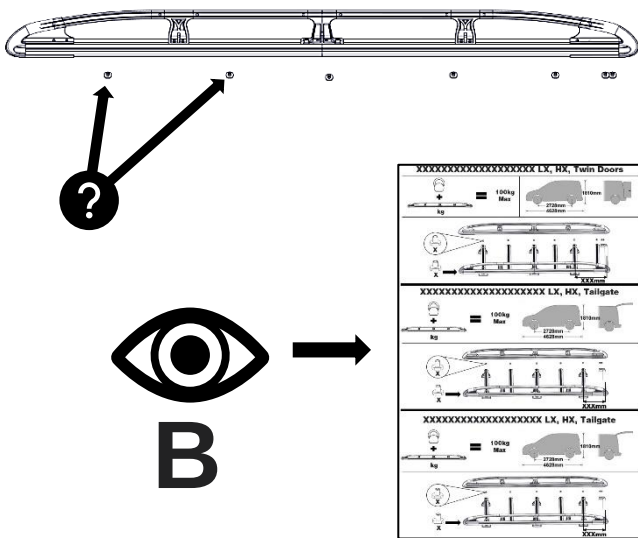


32.

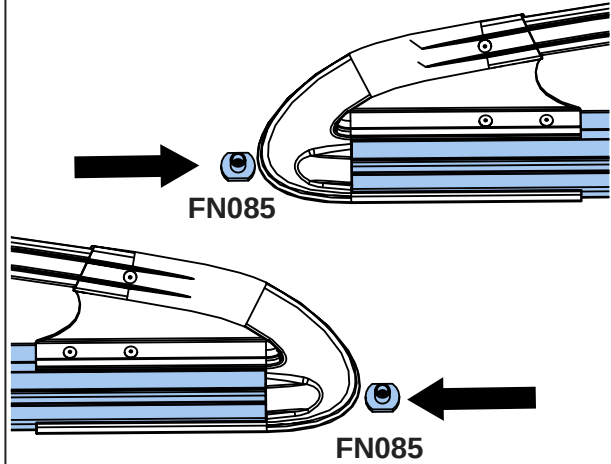


33.

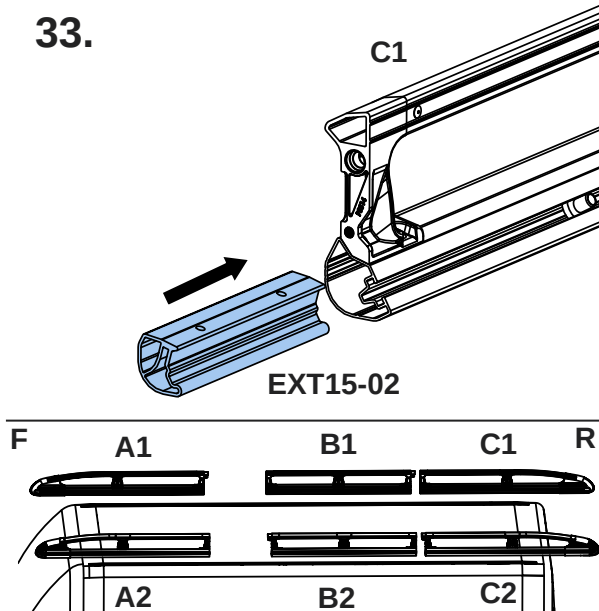


34.

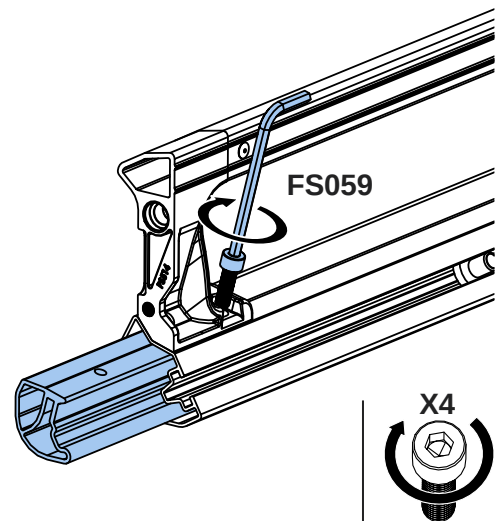


35.

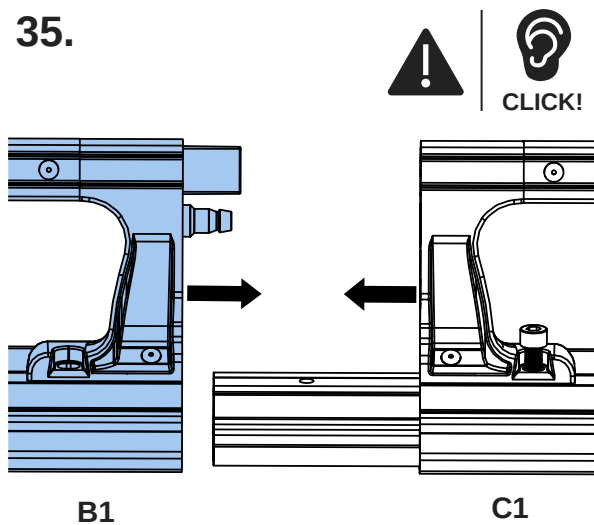


36.

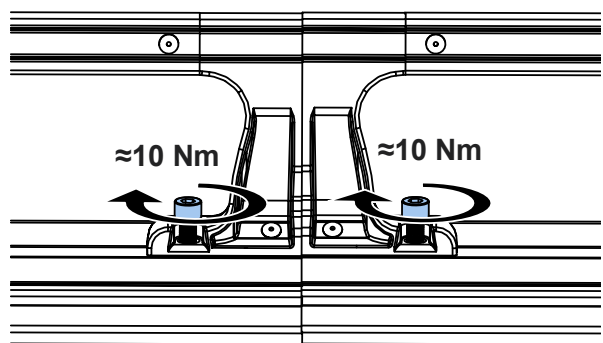


37.

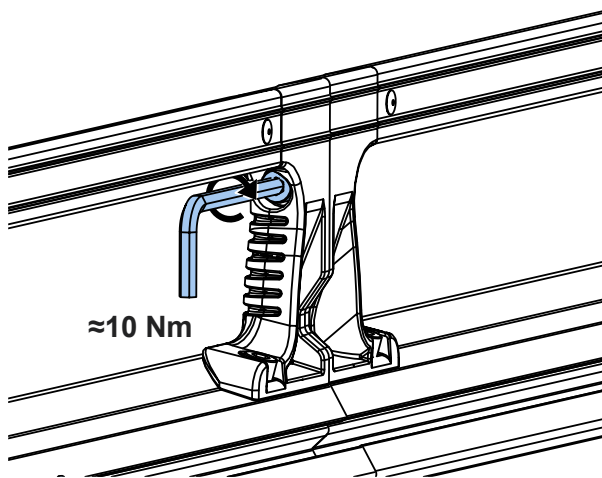


38.

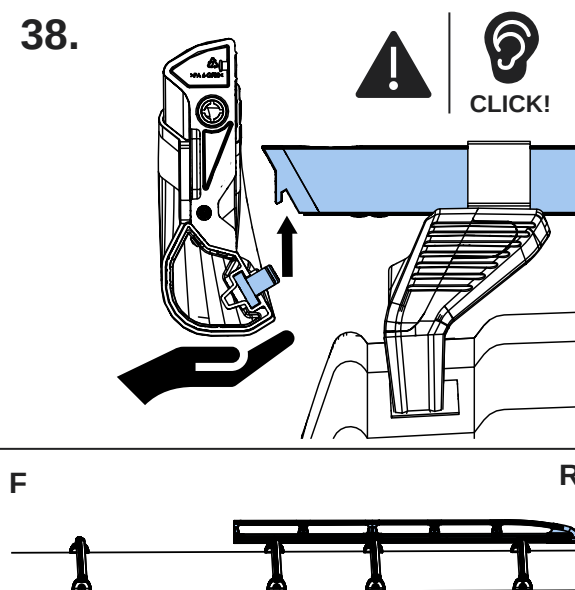


39.

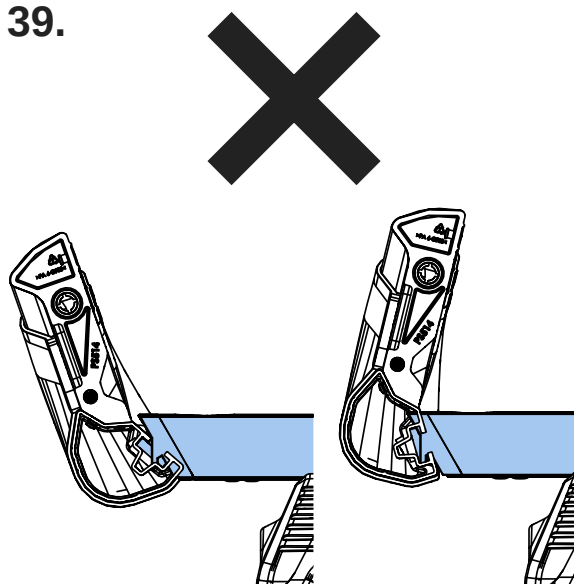


40.

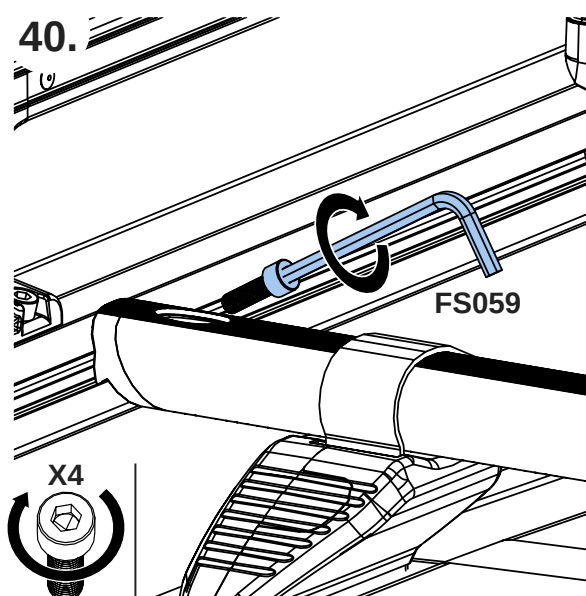


41.

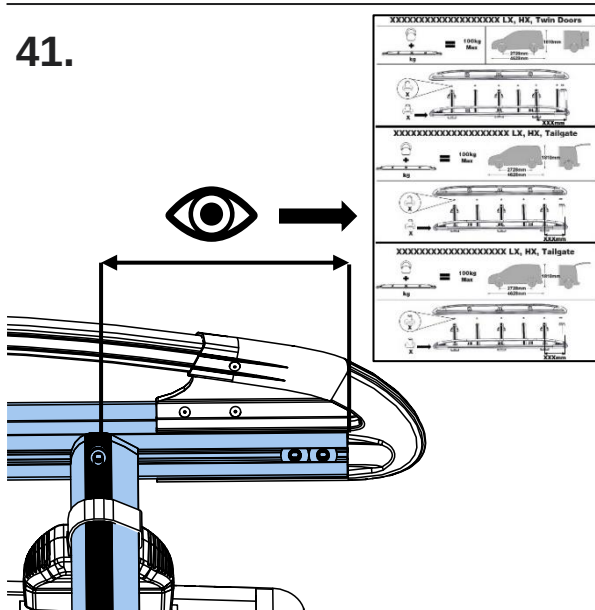


42.

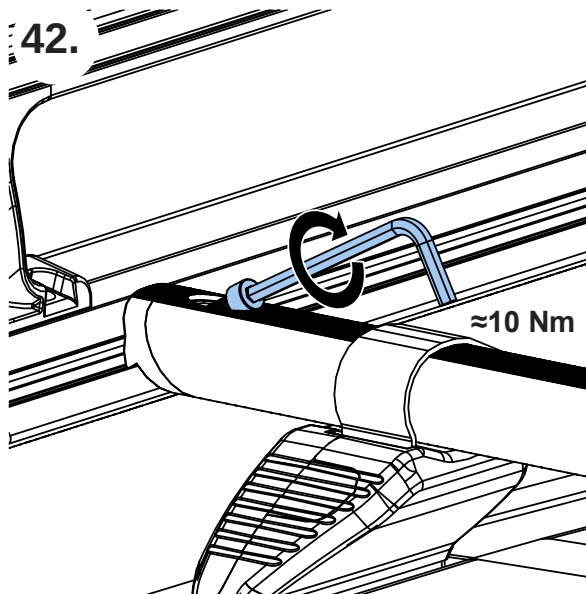


43.

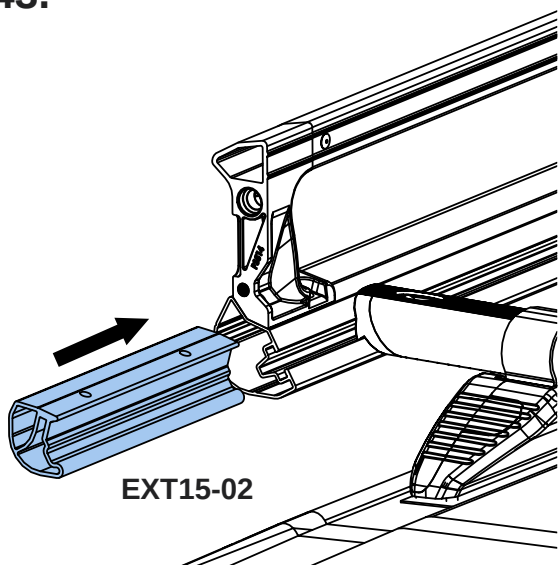


44.

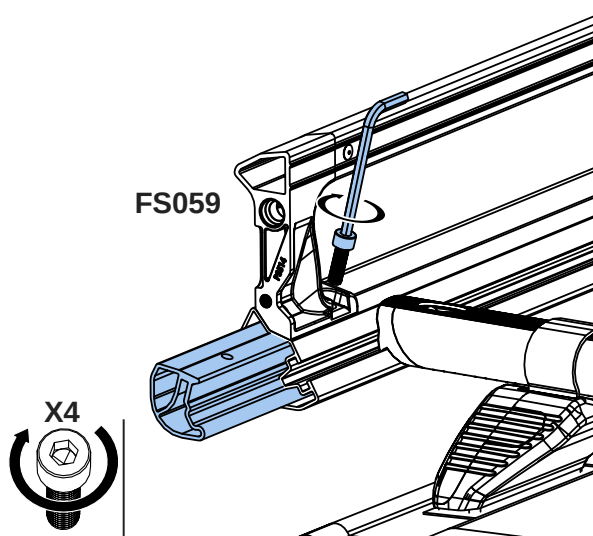


45.

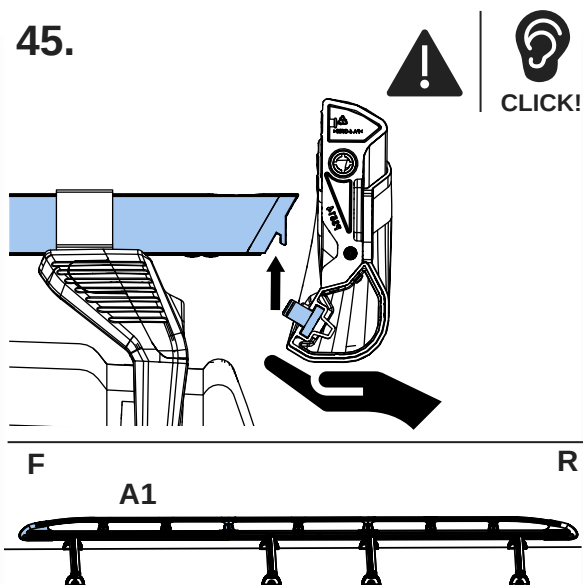


46.

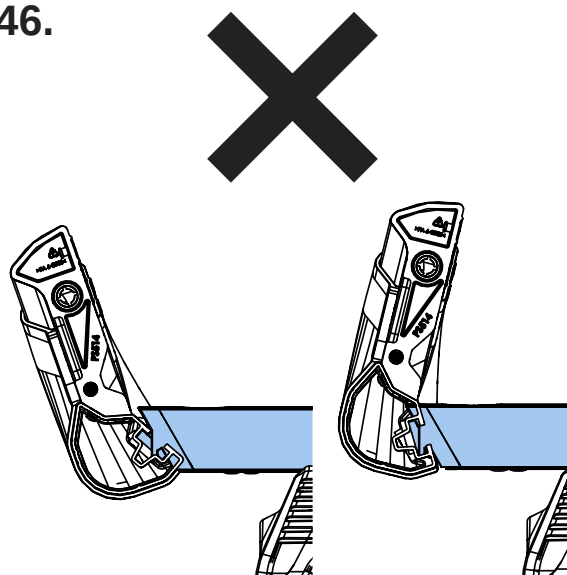


47.

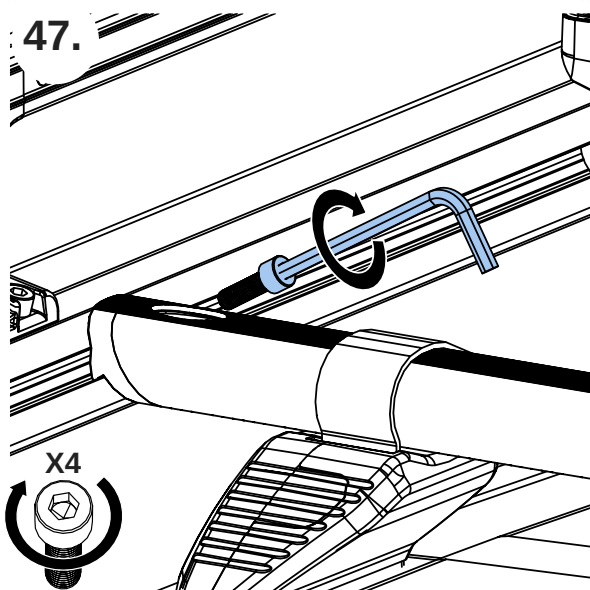


48.

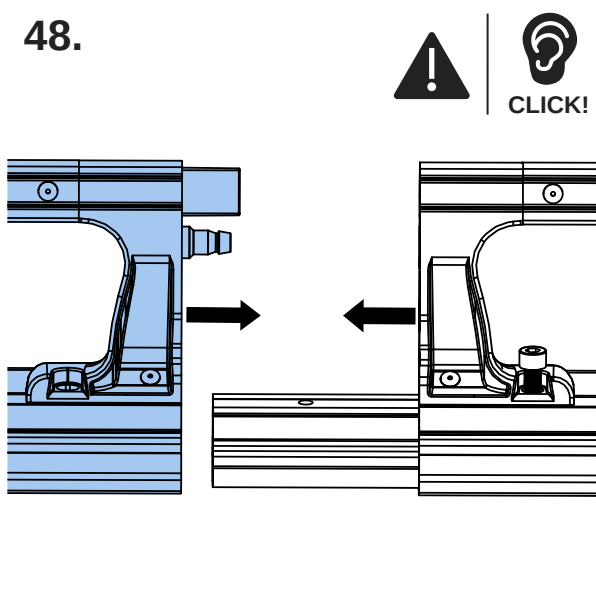


49.

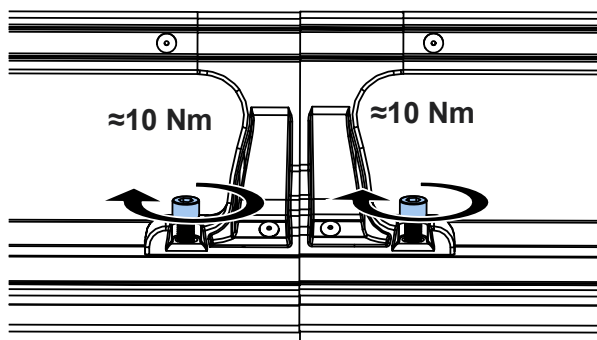



50.

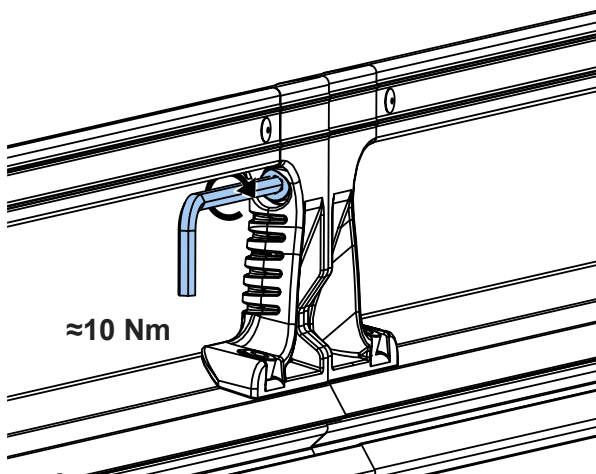


51.

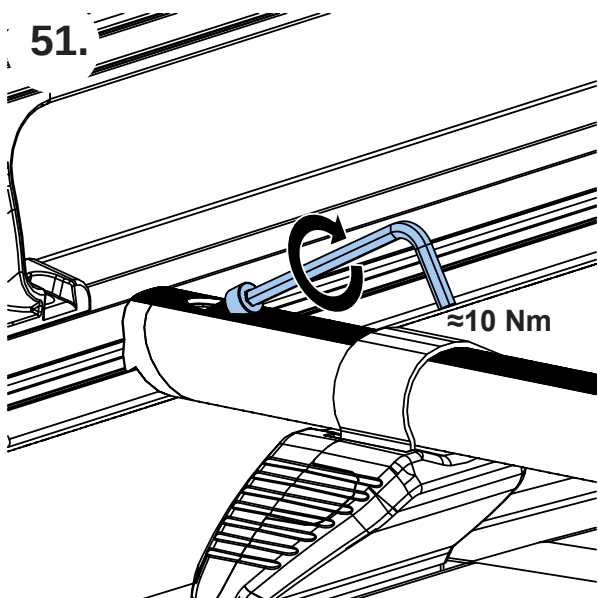


52.

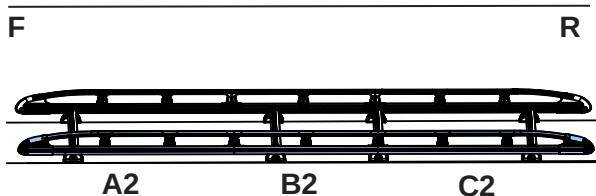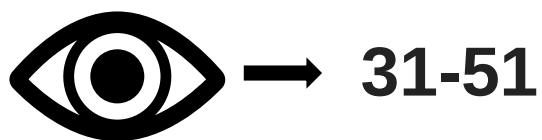

53.

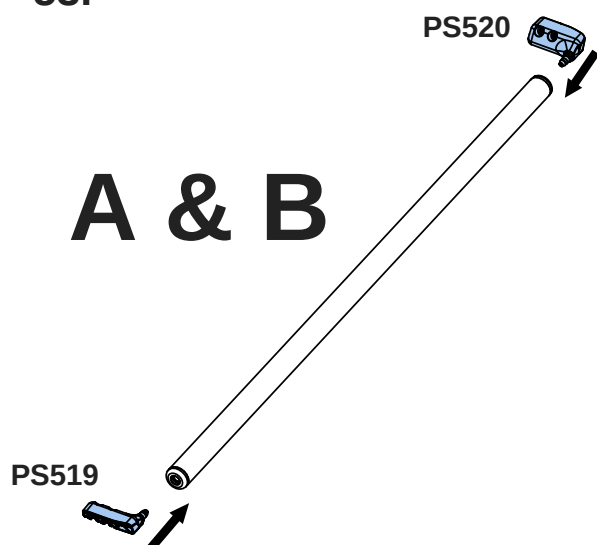


54.

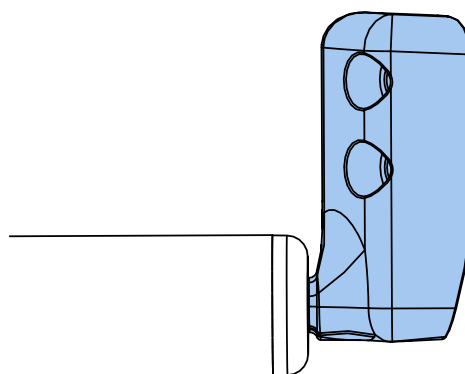

55.




CLICK!

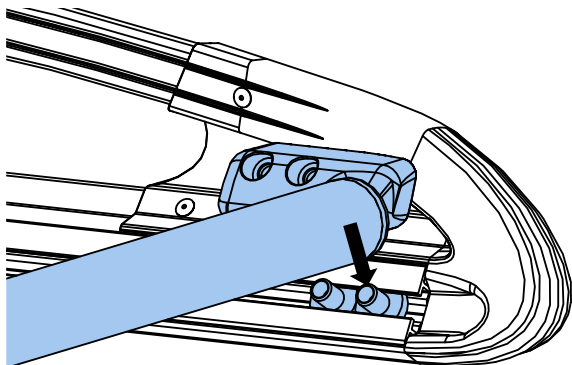


56.

30mm MAX

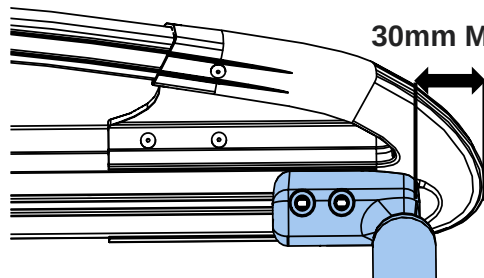


57.

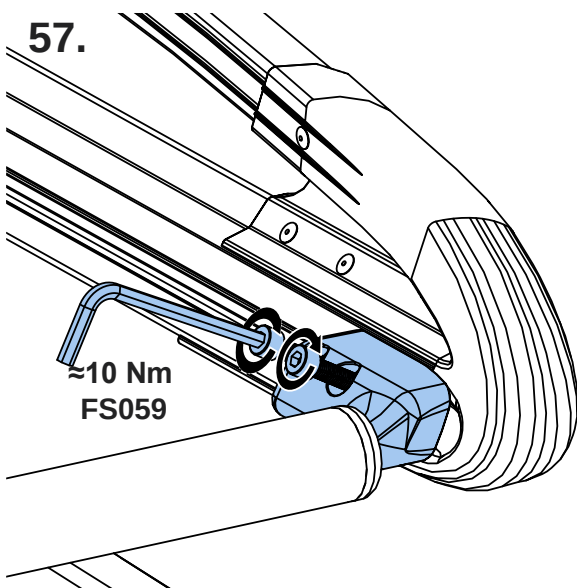


58.




CLICK!

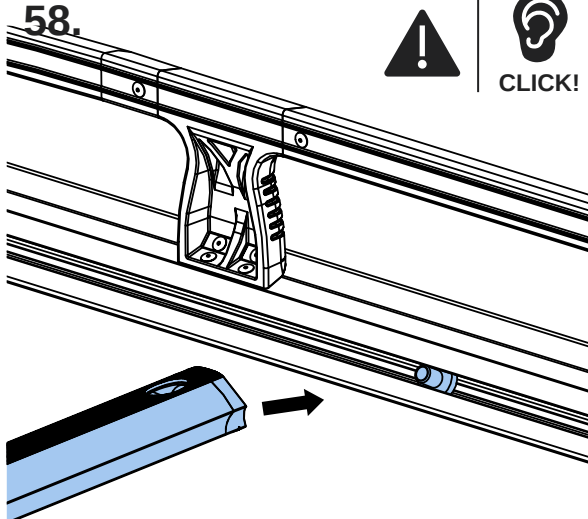


59.

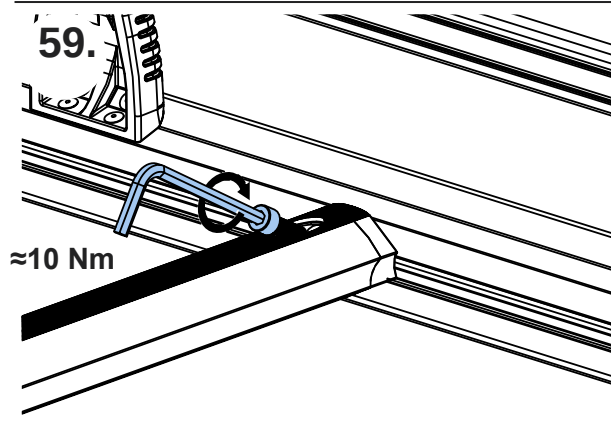

60.

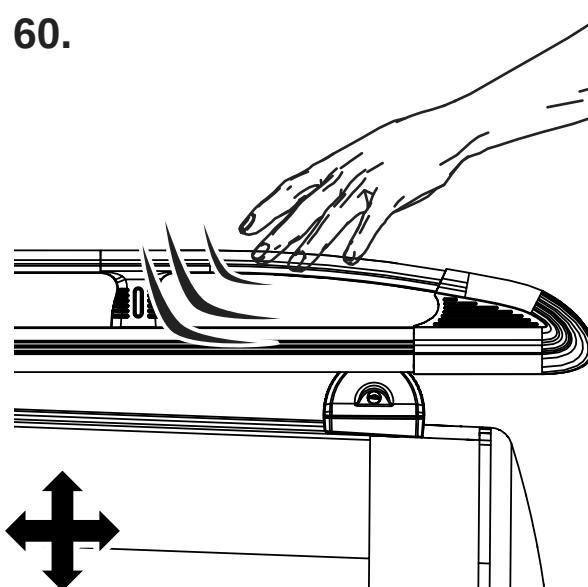

61.

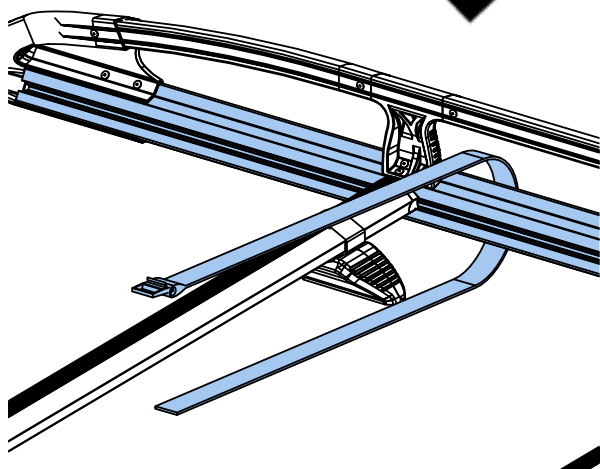

62.

