

MS504 - Electric Plate x 1

MS492 - Packer Plate x 1



FS137 M5 x 40 x 3

FS140 M5 x 16 x 3



FN029 M5 x 6



FS132 (M16 x 50) x 2



FW024 (M16) x 2



FN043 (M16 x 50) x 2



FS136 (M10 x 50) x 4



FW023 (M10) x 4



FN045 (M10) x 4



PS367 x 4



PS366 x 4










PS397 x 2














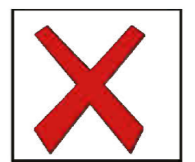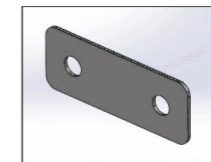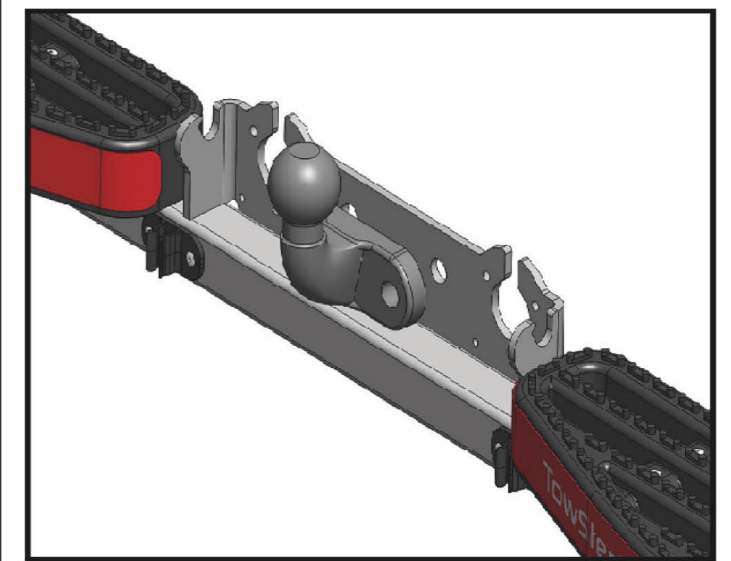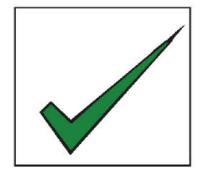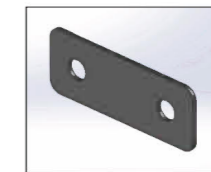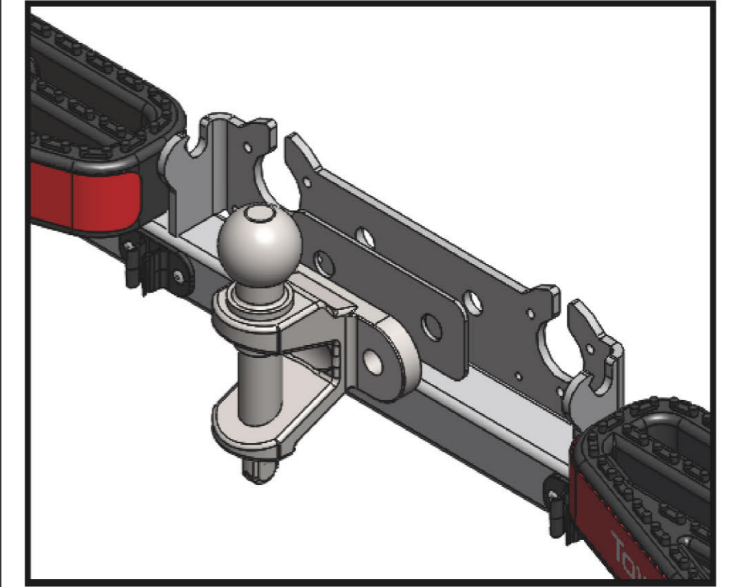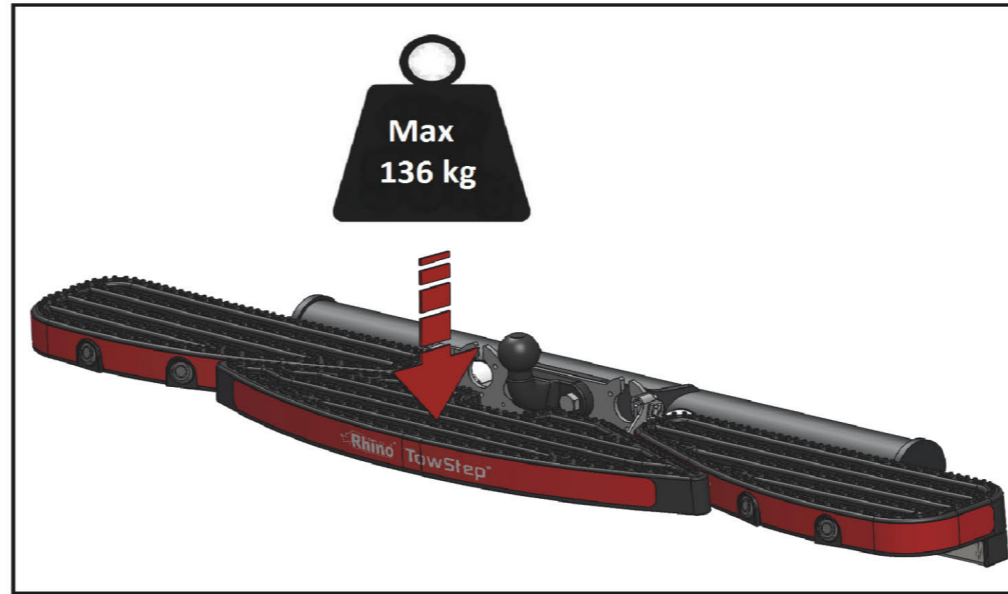

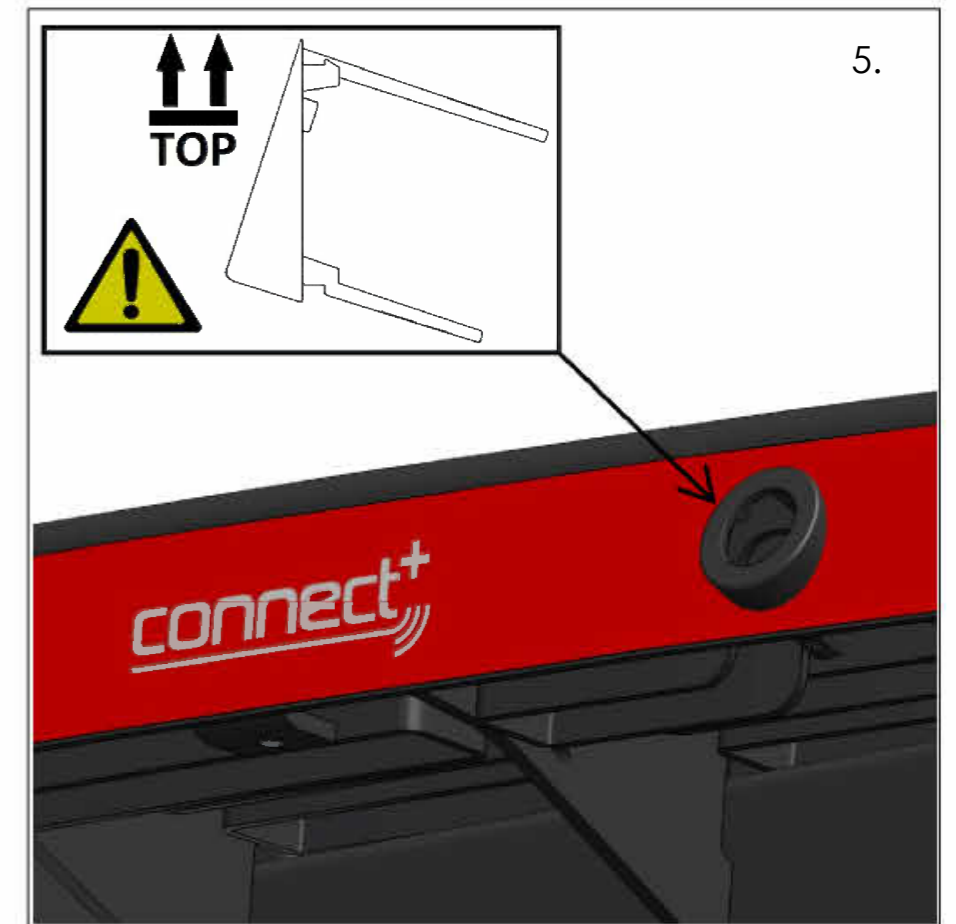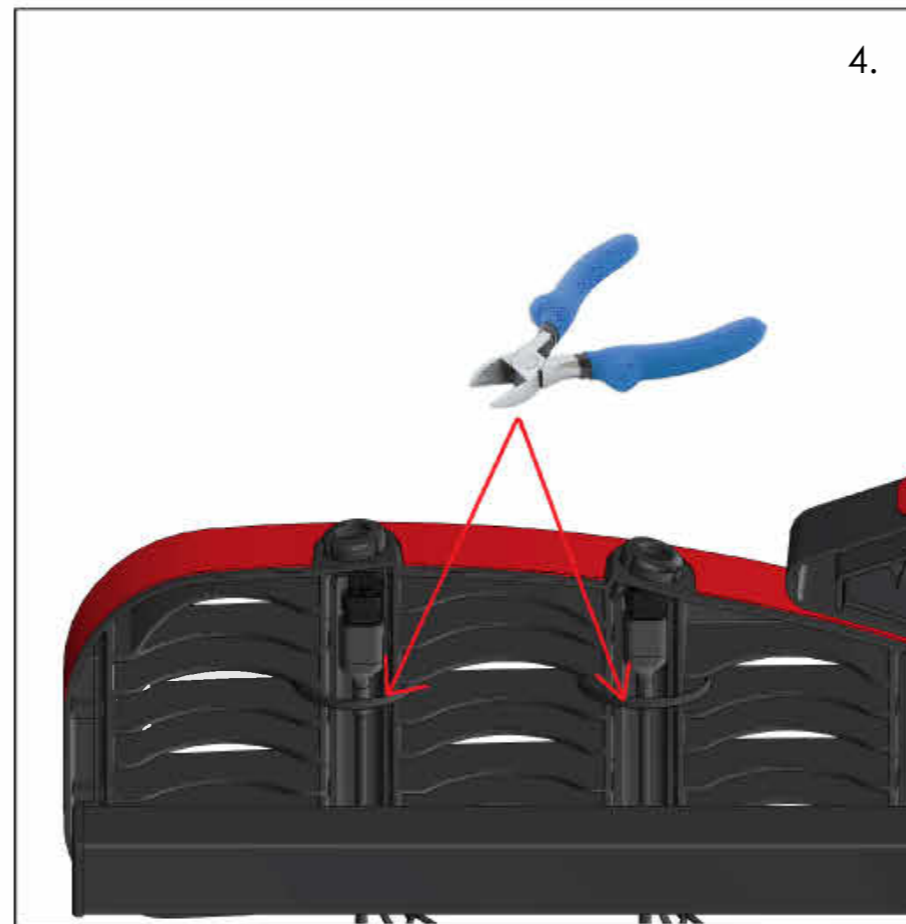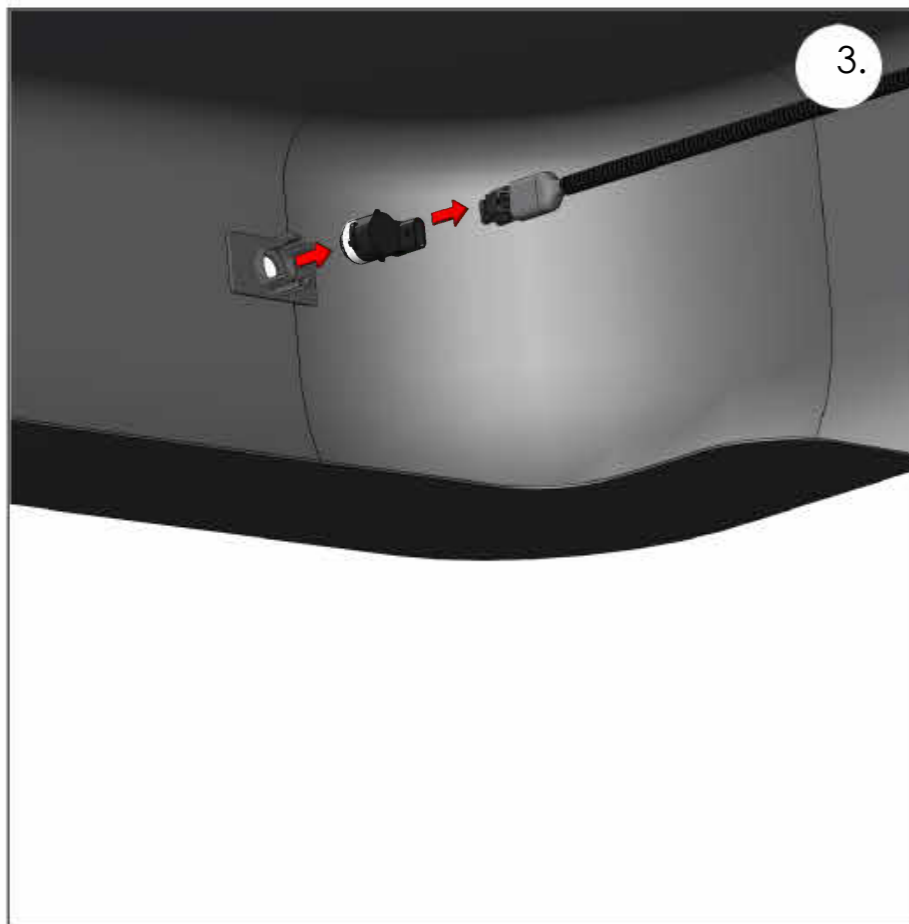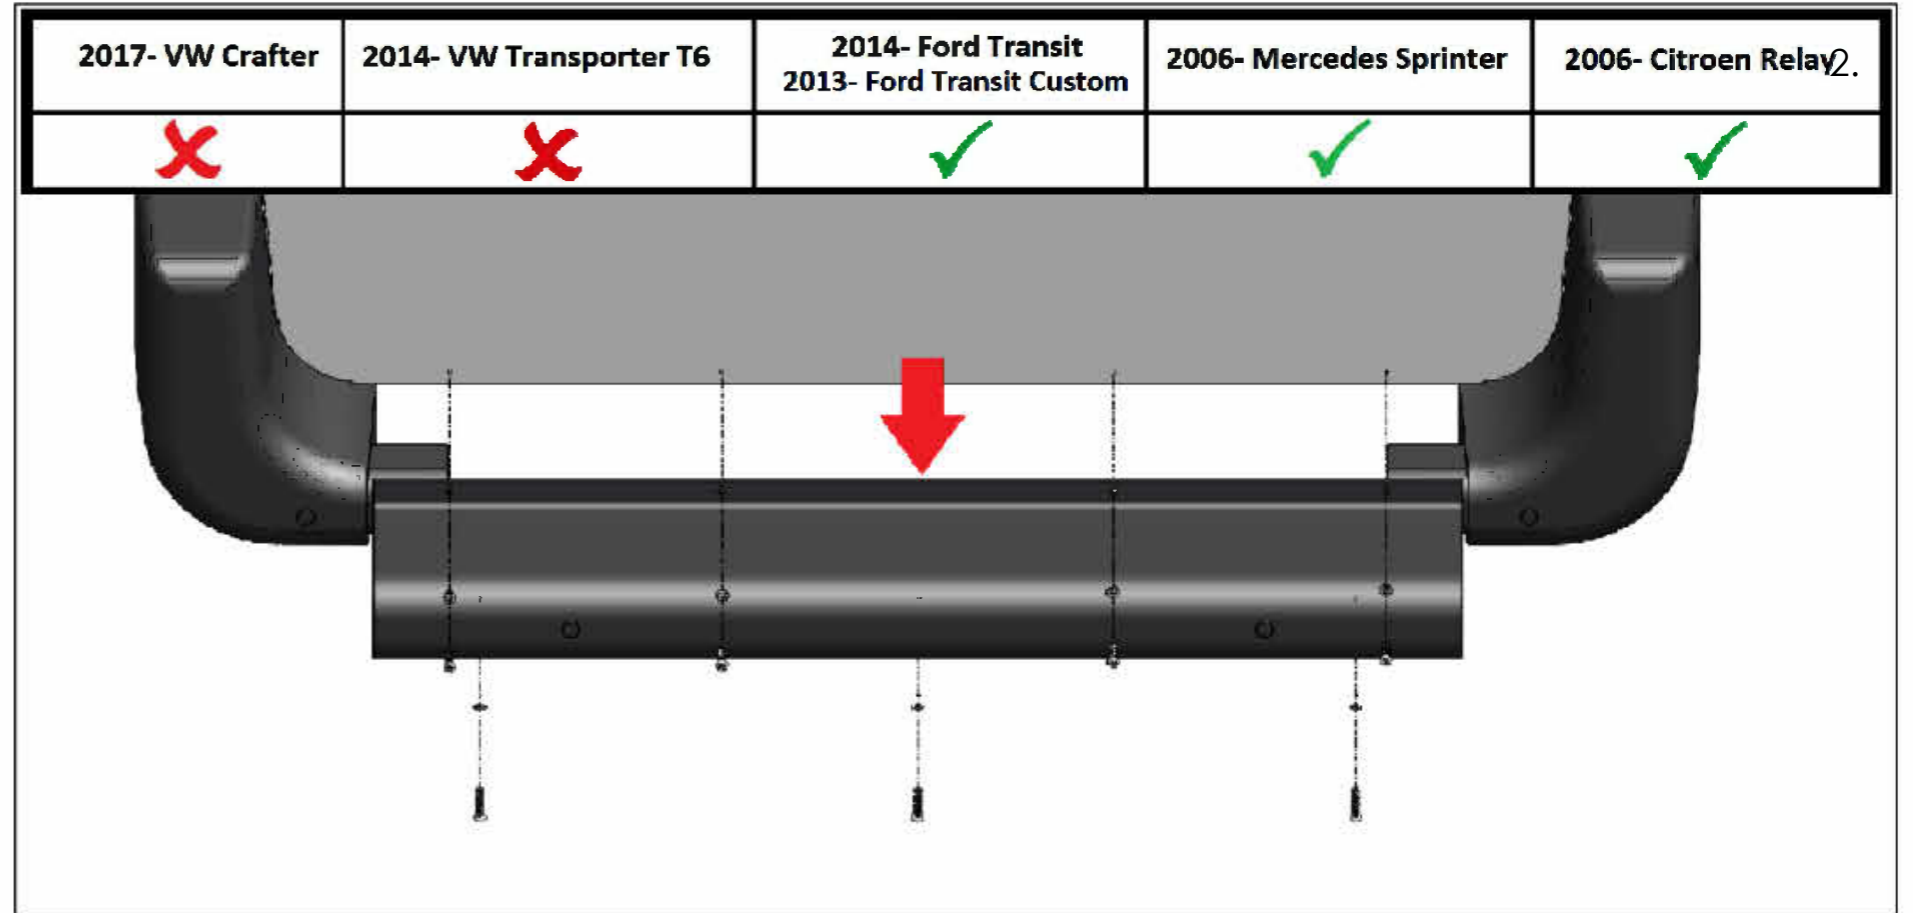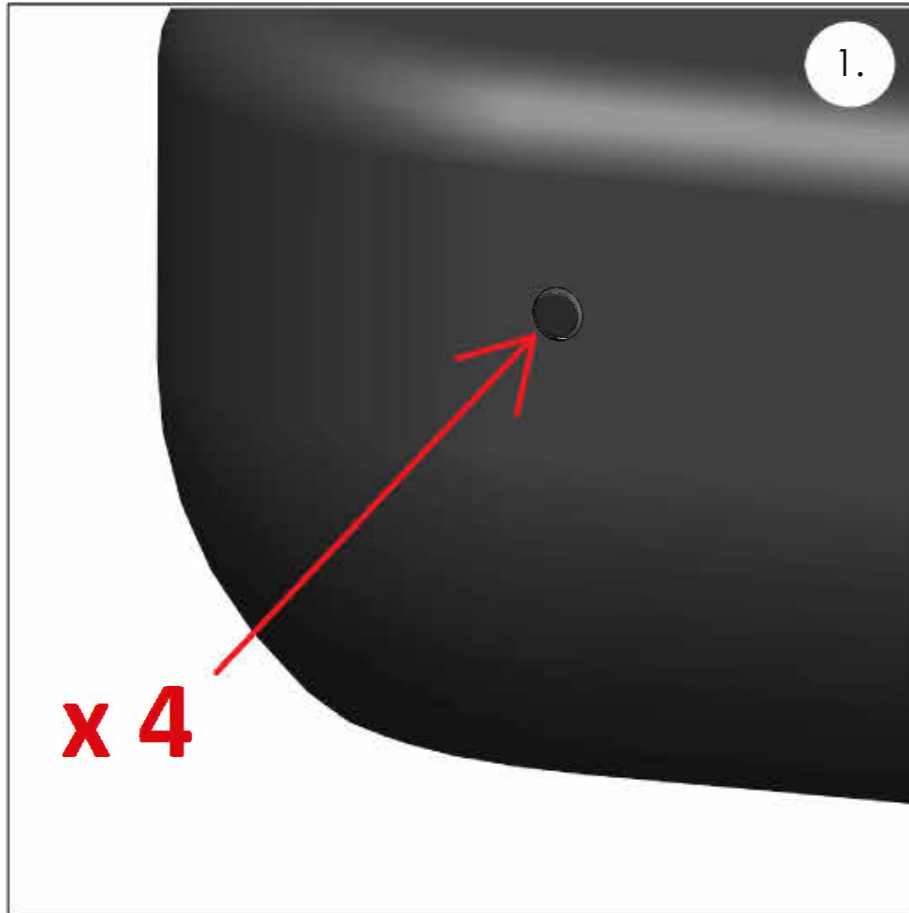
2010172 - PS043 x 4



PS064 x 4





2017- VW Crafter 	2014- VW Transporter T6 	2014- Ford Transit 2013- Ford Transit Custom 	2006- Mercedes Sprinter 	2006- Citroen Relay 6. 
PS366 	PS366 	PS366 	PS366 	PS366 