



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 3

TA1008 Audi A3 Hatch 2003> A3 Cabrio 2008>

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	2	M16 x 50 Bolts Nuts & S/P Washers
B	2	Handed Side Arms	E	2	M12 x 85 Bolts Grade 10.9 Bolts & Nyloc Nuts
C	1	Extension Bar	F	4	M10 x 40 Bolts & S/P Washers
			G	4	M12 x 40 Bolts, 2 Nuts & 4 S/P Washers
			H	4	10 x 30 Flat Washers
			J	4	12 x 25 Flat Washers

1. Remove rear light clusters. Remove plastic nut from behind the cover inside the boot. Pull light clusters sideways and remove from clips in the body.
2. Remove rear bumper. Two fixings on lower edge, two fixings under each light cluster, four fixings around each bumper tip, one fixing behind plastic covers each side inside the boot. NOTE: Care must be taken not to lose fixings inside rear panels. Pull bumper out sideways at each tip then pull rearward to remove the bumper.
3. Remove the rear bumper shock absorbers (these are not fitted with the towbar).
4. Temporarily remove one fixing from the lower edge of each wheel arch liner (into the side of each chassis).
5. Remove the tape from the outside face of each chassis; this will reveal the mounting holes for each side arm (item B).
6. Locate item B into each chassis and using item F with item H loosely bolt into place through the existing holes.
7. Using item G bolt item A to item B.
8. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
9. Cut a section centrally from the lower edge of the bumper 65mm wide x 40mm deep. If required trim to suit.
10. Replace bumper and light clusters.
11. Using item E with item J bolt item C to item A.
12. Using item D bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

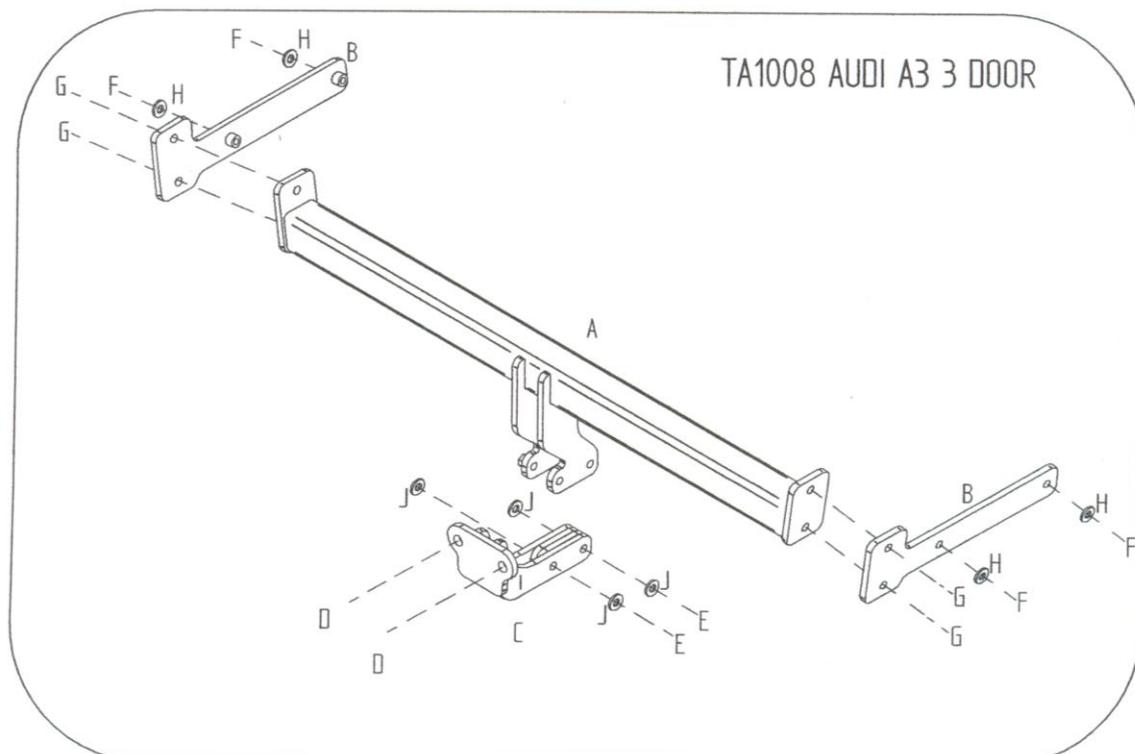

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.