




Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

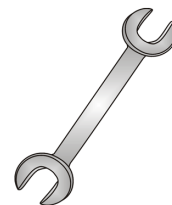


Issue 4

TF 152 Ford Focus Hatchback 1998 - 2005

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	D	4	M16 x 50 Bolts, Nuts & S/P Washers
B	1	Extension Bar	E	4	M10 Nuts & S/P Washers only
C	2	Clamp Plates	F	4	10 x 40 Flat Washers
			G	2	M16 Bolt Caps

1. Remove the rear bumper (two plastic push in plugs on the lower edge four along the top edge one torx head bolt in the wheel arch each side) pull back the wheel arch shield and remove the rubber grommet and nut each side, disconnect the light looms each side.
2. Remove the bumper beam (this is no longer required) lower the exhaust from the rear rubber hanger, lower and remove the heat shield.
3. Locate item **A** into the ends of each chassis member and bolt into place using items **C**, **E** and **F**, fully tighten. Note: item **C** is placed on the outer face of the towbar inside each chassis member.
4. Replace the heat shield and exhaust, refit the bumper and reconnect the light looms.
5. Using item **D** bolt item **B** to item **A**.
6. Using item **D** bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

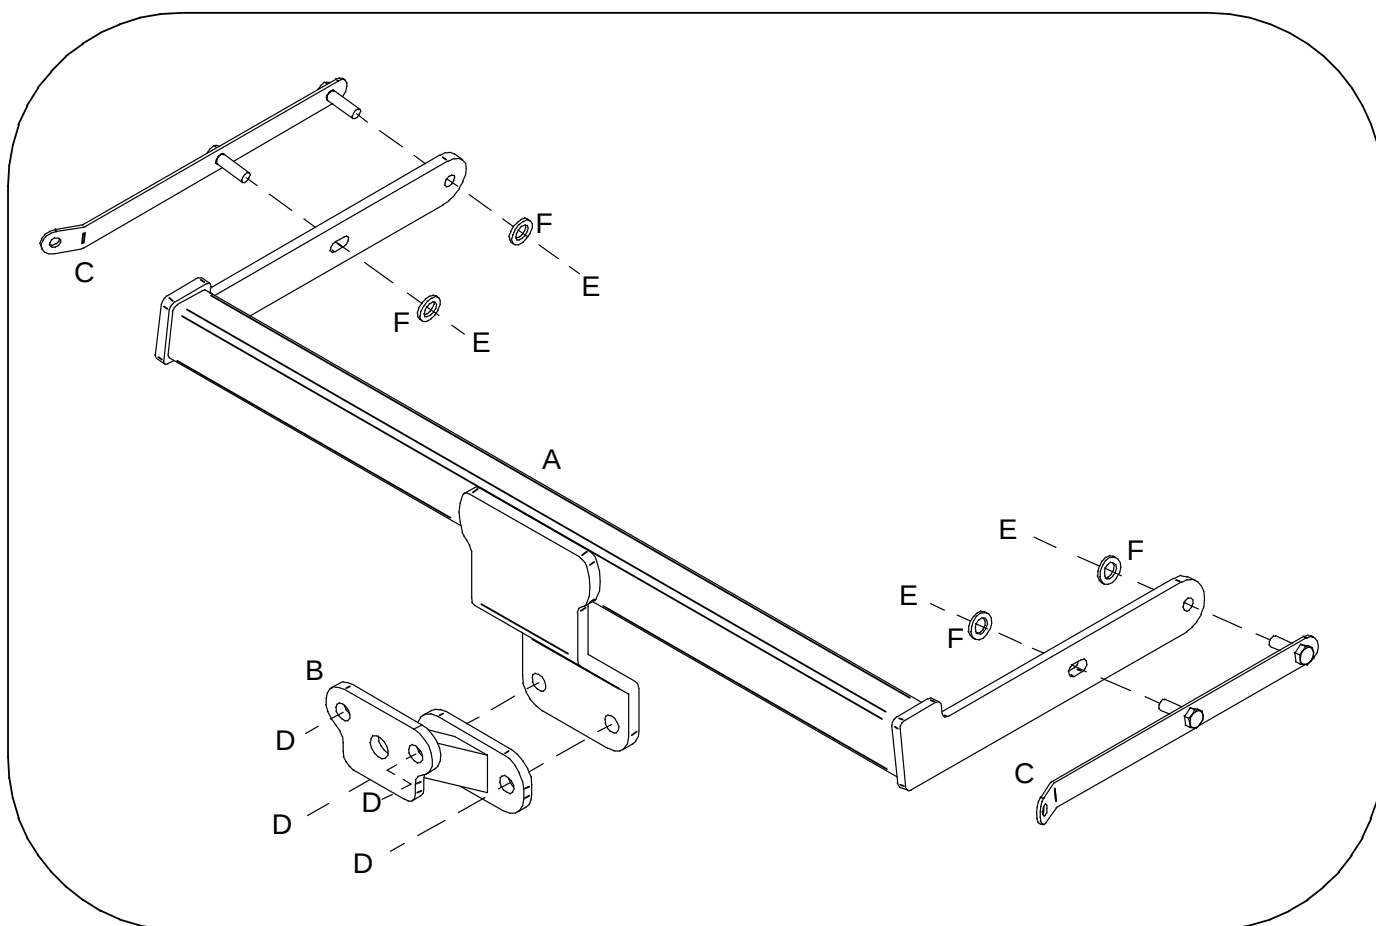

Note: Nose load limits and vehicle manufacturers' trailer / caravan weight limits must be observed.