



# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 2

## TK1 KIA SORENTO 2002 - 2006

Item	Qty	Description	Item	Qty	Description
A	1	Towbar	E	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	1 L/H Side Arm	F	11	M12 x 35 x 1.5 Bolts, 4 Nuts & 11 S/P Washers
C	1	1 R/H Side Arm	G	1	M12 x 30 x 1.5 Bolt & S/P Washer
D	1	Coupling Spacer	H	16	12 x 25 Flat Washers
			J	1	Exhaust Rubber

1. Remove rearmost exhaust rubber.
- 1A. Temporarily lower the spare wheel.
- 1B. To gain better clearance for item A it may be necessary to trim the lower corner of the right side lower bumper tag.
2. Using item F (and item G on the right hand side) with item H loosely bolt item A to the existing mounting points in each chassis member.
3. Using item F with item H loosely bolt item B and item C to the existing mounting points in each chassis member.
4. Using item F with item H bolt item B and item C to item A.
5. Using item E bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.
6. Push item A upwards and rearwards and fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
7. Raise spare wheel.
8. Refit exhaust using replacement exhaust rubber (Item J).

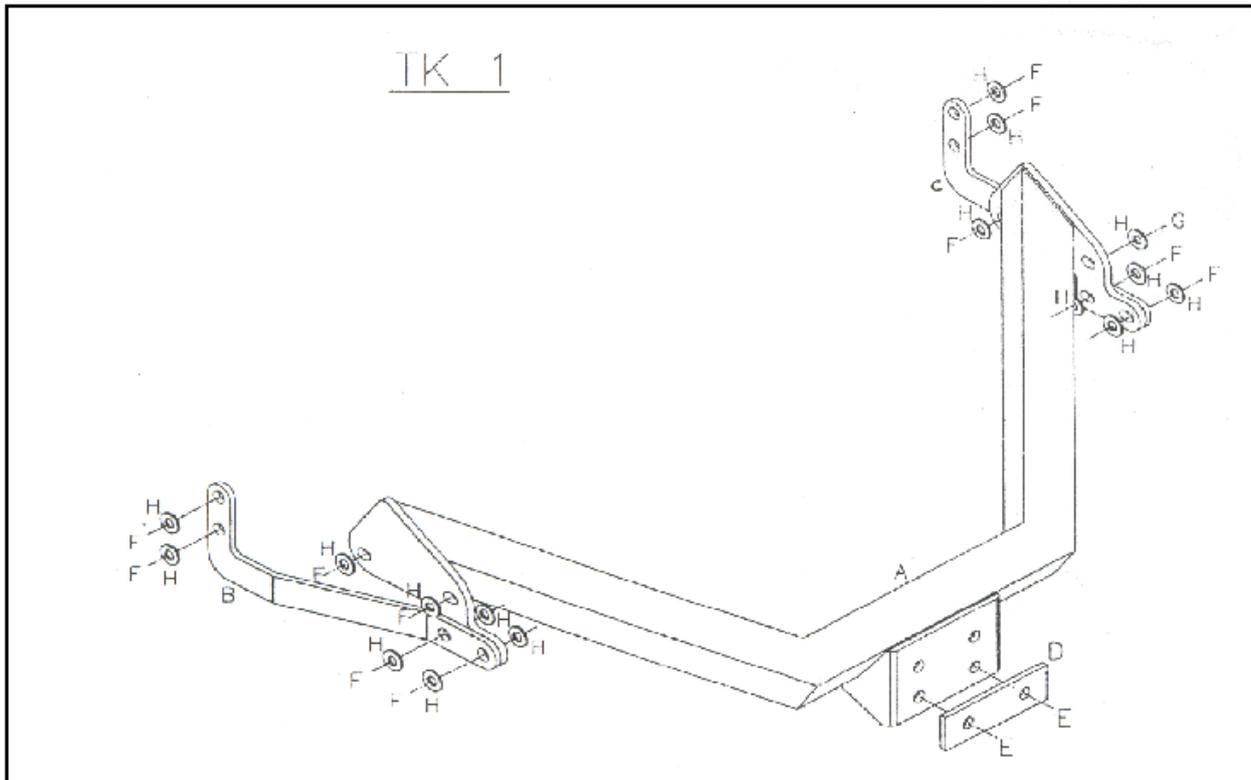

**Note:** nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.