


TLDV5H Maxus (LDV) eTuron 9 2024>

Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TLDV5H Crossbar	C	2	M16 x 55 Bolts & Nyloc Nuts	215 Nm
A1	1	Slider Face Plate	D	6	M12 x 40 x 1.5 Fine Pitch Bolts (10.9) & S/P Washers	130 Nm
A2	2	Slider Pins (205mm Long)	E	6	M14 x 45 Bolts & Nyloc Nuts	150 Nm
B	2	Side Arms	F	6	12 x 30 Belleville Spring Washers	
			G	12	14 x 27 Flat Washers	

Towbar Installation

1. Working one side at a time remove the three fixings from each side of the chassis and loosely fix items **B** to the chassis using items **D** with items **F**. **Note:** The original bumper retaining bolts will not be reused with this towbar assembly.
2. Loosely fix item **A** to items **B** using items **E** with items **G**.
3. Fix item **A1** to item **A** using items **A2**.
4. Using items **C** secure your desired ball bracket (not supplied in this kit) to item **A1**.
5. Fully tighten all fixings, ensuring the Bumper and Towbar are rigid, square and secure.

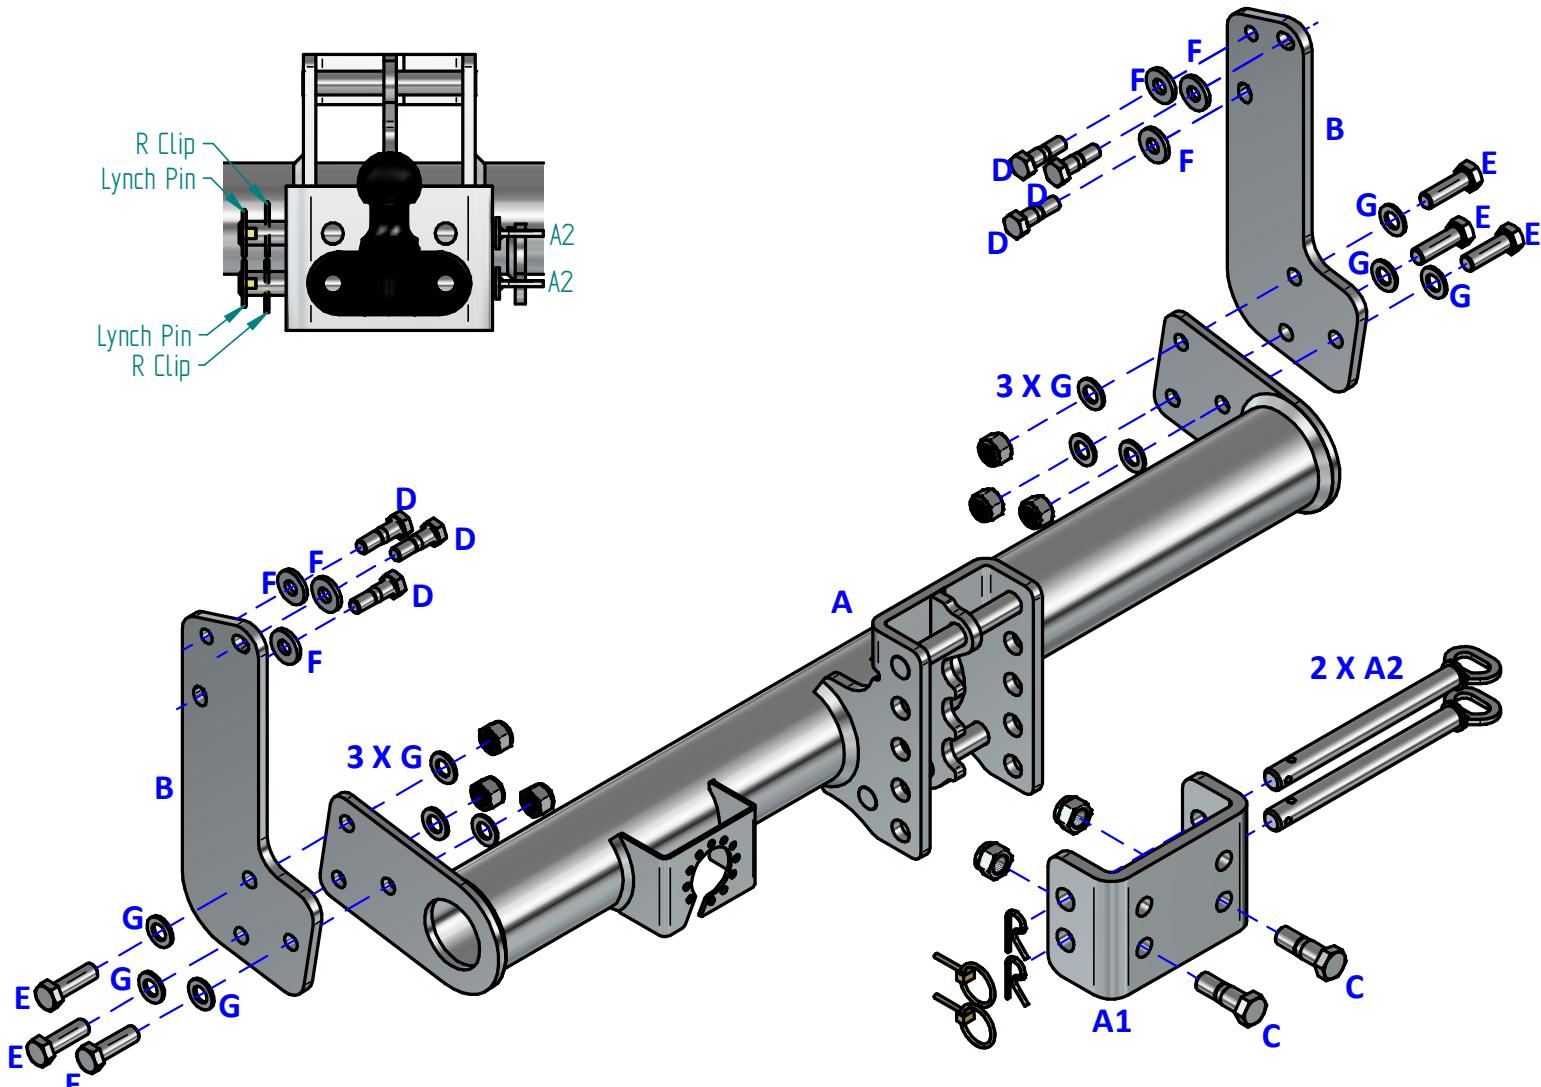

Notes:

1. For Torque settings see the column next to each item in the list.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.