Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting
Issue: 1

Fitting Instructions

TMG9 MG S9 2026>


Item	Qty	Description	Item	Qty	Description	Torque Setting
A	1	TMG9 Crossbar	**D**	2	M16 x 50 Bolts & Nyloc Nuts	215 Nm
B	2	Bumper Brackets	**E**	2	M12 x 40 Bolts & Nyloc Nuts	100 Nm
C	1	Extension	**F**	1	M12 x 120 Bolt (10.9) & Nyloc Nut	130 Nm
			G	2	M6 x 15 Bolts & S/P Washers	13 Nm
			H	2	M6 x 20 Self Tapping Bolt	13 Nm
			J	2	M8 x 35 Bolts (10.9) & S/P Washers	40 Nm
			K	6	M10 x 30 Bolts (10.9) & S/P Washers	70 Nm
			L	4	6 X 15 Flat Washers	
			M	2	8 X 25 HD Flat Washers	
			N	8	10 X 25 Flat Washers	
			P	2	10 X 40 Flat Washers	
			Q	4	12 X 25 Flat Washers	
T1	1	30 mm O/D 60 mm Long Spacer Tube	**R**	4	M10 Nyloc Nuts	70 Nm

Bumper Removal:

1. Open the tailgate and remove the six fixing covers, two for the bumper and four for the light clusters.
2. Remove the two fixings securing the bumper to the body in the tailgate.
3. Remove the rear light clusters, two fixings each side then remove the now revealed fixings from below each light cluster.
4. Remove the wheel arch trims one fixing in the wheel arch area located just behind the rear doors before separating from the body, front to rear.
5. Remove the now revealed bumper tip screw and lower bumper fixing from the wheel arch area.
6. Remove the four fixings along the bumpers lower edge.
7. Pull the bumper out sideways and rearwards to separate from the body, unplug three electrical connectors on the left-hand side and one on the right-hand side to fully remove from the vehicle.
8. Remove the rear impact beam, four fixings each side. **Note:** The beam and its fixings will not be reused with the towbar assembly.
9. Clear the mastic from around the upper three rear panel mounting points and the vertical mounting point from each side, ensuring the area the towbar will cover is clear.

Towbar Installation:

1. Slide item **A** into the chassis and onto rear panel the studs and loosely fix in place using items **R** with items **N.**
2. Loosely fix item **A** to the rear panel using items **J** with items **M** and items **K** with items **N**.
3. Loosely fix item **A** to the vertical mounting point using items **K** with items **P.**
4. Loosely fix items **B** to item **A** using items **H** with items **L.**
5. Loosely fix item **C** to item **A** using items **E** with items **Q** and item **F** with items **Q**, ensuring item **T1** is fitted at the lower mounting point.
6. Fully tighten all the fixings ensuring the Towbar is rigid, square and secure.
7. Refit the bumper and light clusters, reattaching any wiring looms.
8. Fix items **B** to the bumper using items **G** with items **L**.
9. Using item **D** fix your desired ball bracket and wiring plate **(Not supplied in this kit)** to item **C** and fully tighten all the remaining fixings.

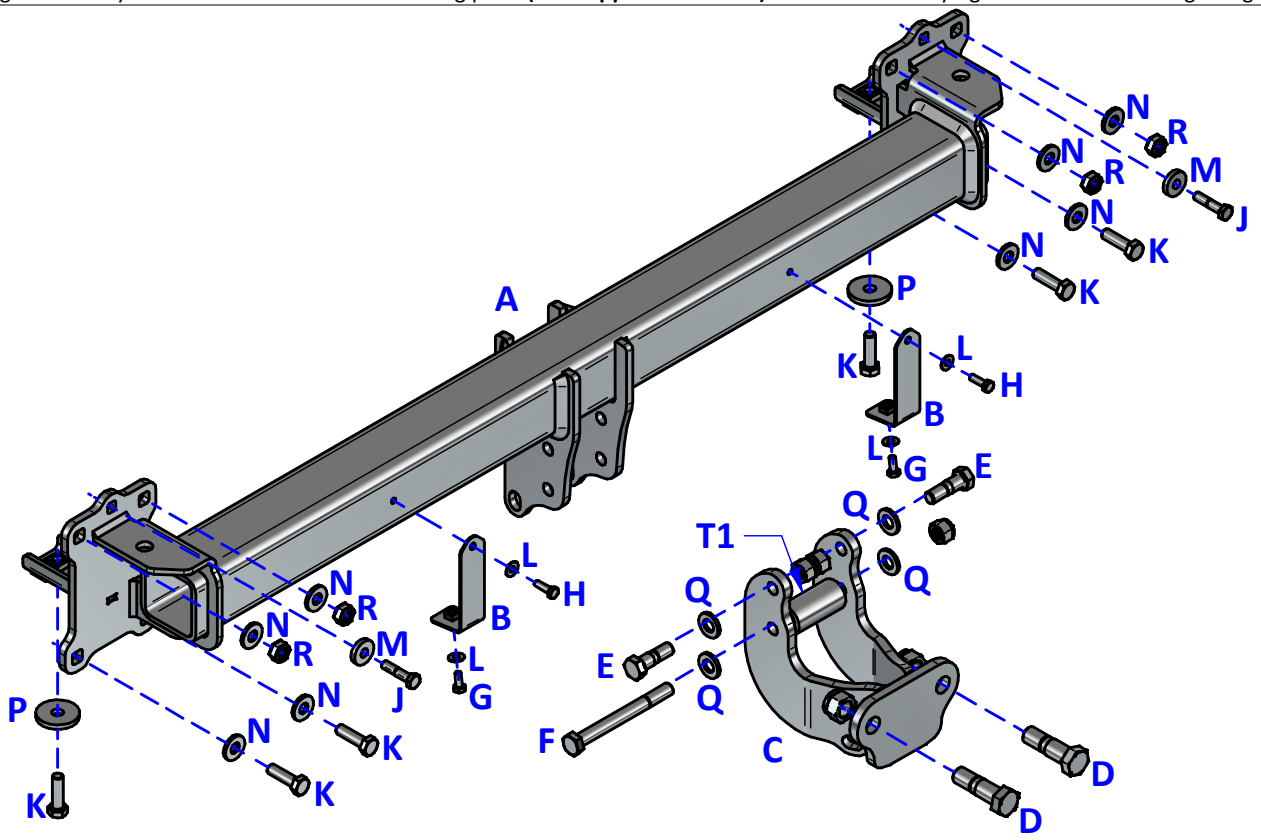

Notes:

1. For Torque settings see the column next to each item in the list.
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.