



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting



Issue 1

TT889 Toyota Rav 4 1994 - 2000


Item	Qty	Description	Item	Qty	Description
A	1	Towbar	C	2	M16 x 50 Bolts, Nuts & S/P Washers
B	1	L/H Side Arm	D	2	M12 x 35 Bolts, 1 Nut and 2 S/P Washers

Models with no rear bumper

1. Remove the towing eyes from each chassis member.
2. Using the existing bolts loosely bolt Item **B** to the left hand chassis.
3. Using the existing bolts loosely bolt Item **A** to the right hand chassis.
4. Using Item **D** bolt Item **A** to Item **B**.
5. Using Item **C** bolt the ball bracket & wiring plate (not supplied in the kit) to the mounting plate.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

Models with rear bumper

1. Remove the two bolts each side and discard the spacers.
2. Using the existing bolts loosely bolt Item **B** between the bumper arm and the left hand chassis.
3. Using the existing bolts loosely bolt Item **A** between the bumper arm and the right hand chassis.
4. Using Item **D** bolt Item **A** to Item **B**.
5. Using Item **C** bolt the ball bracket & wiring plate (not supplied in this kit) to the mounting plate.
6. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.

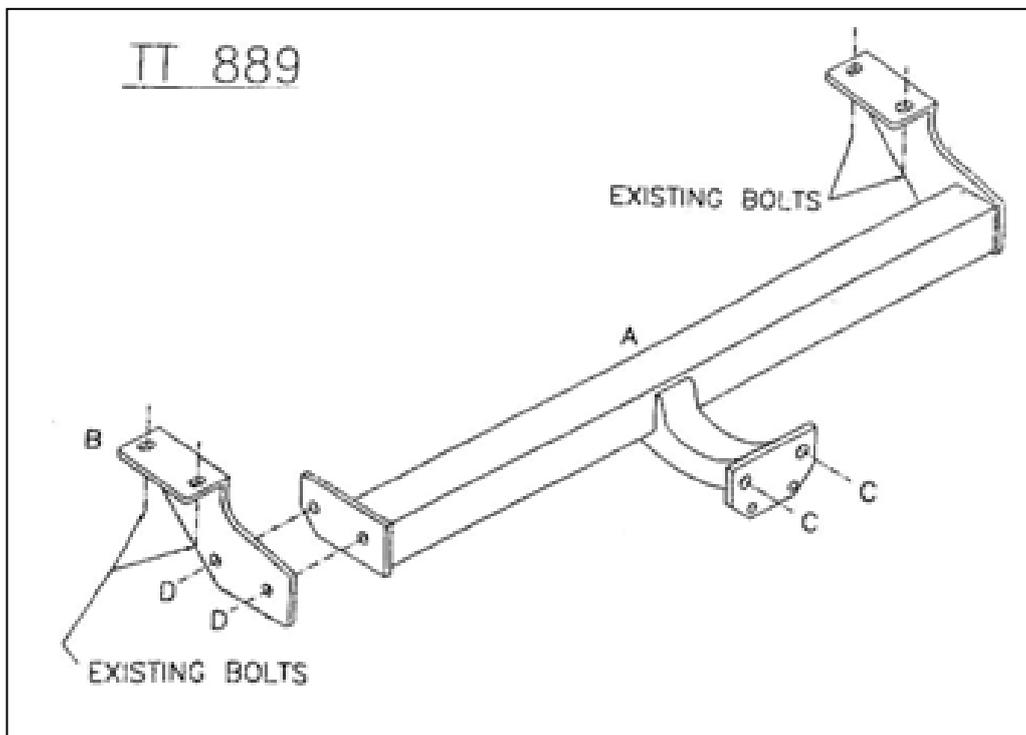

Note:

1. Recommended Torque Setting for M12 Grade 10.9 -139 Nm. (For other Torque Settings see notes overleaf.)
2. Nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.