



Fitting Instructions

TOWBAR SK17A
For SKODA ROOMSTER

MATERIALS

A	1	Cross Bar with European facing to 94/20/EC A50-1
D	4	M10 x 35mm Bolts, Lock Washers and Flat Washers
CB	2	M16 x 50mm Coupling Bolts, Nuts, Lock Washers
Z	1	ZEP35 Electrical plate (not shown)


FITTING

1. Remove bumper (4 fixings around wheel arch, 2 fixings along lower edge, 2 tip screws and 2 on boot shut panel), remove plastic trim to reveal bolts securing bumper beam. Remove and discard bumper beam – refit bolts. **Refit Plastic Trim**
2. Remove tape covering vehicle towbar mounting points and attach Cross Bar (A) using Bolts (D) with Flat Washers. Fully tighten Bolts.
3. Cut bumper as shown below and refit bumper

Note: This towbar must be used with either a Witter Towball (part number z11) or Class A50-1 or A50-X towball dimensionally conforming to A50-1 with a 'D' and 'S' value greater than or equal to that of the towbar.

Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed**.

Recommended torque settings: M8 - 27Nm, M10 - 53 Nm, M12 - 95 Nm, M14 - 150 Nm, M16 - 214 Nm

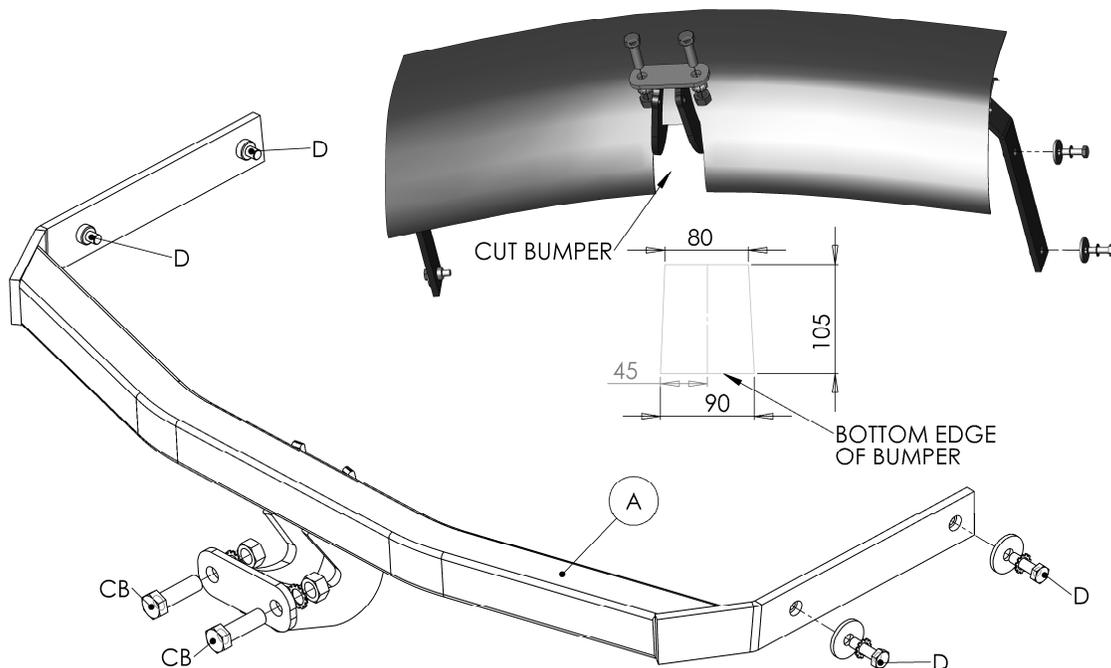

W0001SK17A-FIT\$010802220000