



Fitting Instructions

TOWBAR **SK22A**
For Skoda Fabia 2
Hatch and Estate

MATERIALS

A	1	Cross Bar
D	4	M10 x 35 x 1.5mm Bolts, Lock Washers and Flat Washers (40mm O.D.)
E	1	ZEP35 Electrical plate (not shown)
CB	2	M16 x 50mm Coupling Bolts, Nuts, Lock Washers


FITTING

1. Remove bumper (4 screws on lower edge, 2 screws beneath light cluster (remove light clusters), 1 tip screw and 3 wheel arch screws.). Remove bumper inner beam and pass on to customer. (refit bolts to rear panel)
2. Insert Cross Bar (A) inside chassis and loosely attach to existing side mountings (remove tape covering holes) using Bolts (D) with Flat Washers. **Fully Tighten Bolts.**
3. Locate centre of bumper and cut as shown below.
4. Refit Bumper,

Note: This towbar must be used with either a Witter Towball (part number Z11) or Class A50-1 or A50-X towball dimensionally Conforming to A50-1 with a 'D' and 'S' value greater than or equal to that of the towbar.

Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed**.

Recommended torque settings: M10 - 53 Nm, M16 - 214 Nm

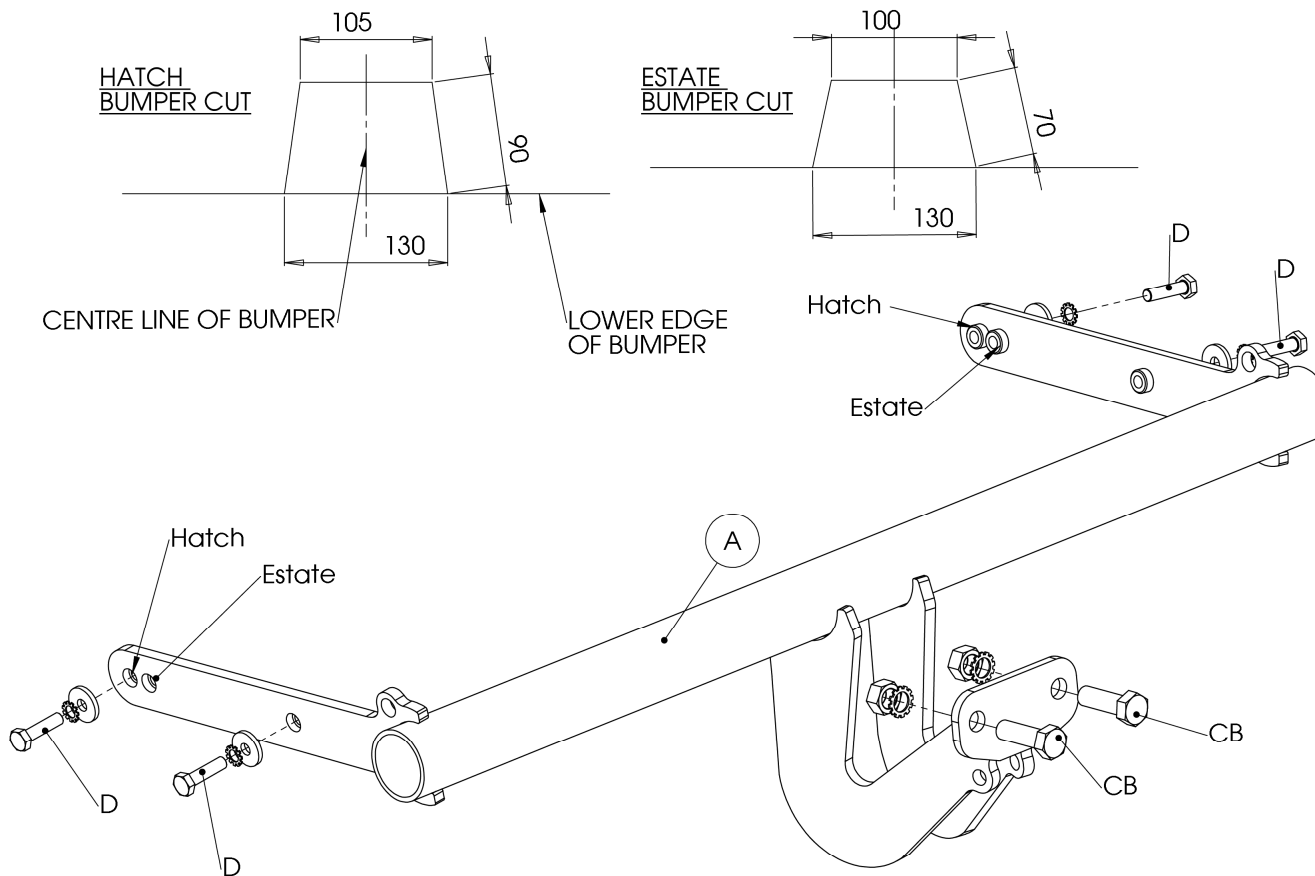

W0001SK22A-FIT\$011103170000



Notice de montage

ATTELAGE SK22A
Pour Skoda Fabia 2
5 portes et Breack

MATERIEL

A	1	Traverse
D	4	Boulons M10 x 1,5mm x 35, rondelles frein et grandes rondelles plates (Ø 40mm)
E	1	Plaque électrique ZEP35 (non illustrée)
CB	2	Boulons d'accouplement M16 x 50mm, écrous, rondelles frein

MONTAGE

1. Enlever le pare-chocs (4 vis sur le bord inférieur, 2 vis en dessous du groupe d'éclairage (enlevez les blocs), 1 vis et 3 vis de passage de roue Retirer la poutre intérieure du pare-chocs et la remettre au client. (réinstaller les boulons sur le panneau arrière)
2. Insérer la traverse (A) à l'intérieur du châssis et fixer sans serrer aux fixations latérales existantes (enlever le ruban recouvrant les trous) en utilisant les boulons (D) avec les rondelles plates. Resserrer complètement les boulons.
3. Repérer le centre du pare-chocs et coupez comme illustré ci-dessous.
4. Remonter le pare-chocs,

Remarque : Cet attelage doit être utilisé avec une boule de remorquage Witter (référence produit Z11) ou une boule de remorquage Classe A50-1 ou A50-X se conformant dimensionnellement à A50-1 avec une valeur 'D' et 'S' supérieure ou égale à celle de l'attelage.

Veuillez vous reporter aux données techniques du véhicule pour les limites de masse et du poids tractable admis sur la boule, **lesquelles sont à observer.**

Couples de serrage recommandés : M10 - 53 Nm, M16 - 214 Nm

